Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HH 955465

LED Handheld Bottle Service Display Sign

Model: HH 955465

Introduction

This user manual provides detailed instructions for the safe and effective operation of your LED Handheld Bottle Service Display Sign. Designed for dynamic visual displays, this sign is ideal for various settings including nightclubs, bars, and private events. Please read this manual thoroughly before initial use and retain it for future reference.



The LED Handheld Bottle Service Display Sign in its illuminated state, displaying a 'VIP' message.

Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the device to water or excessive moisture. The acrylic material is waterproof, but internal components are not.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charging cable and adapter.
- Keep out of reach of children.
- Ensure the sign is held flat during use to prevent letter cards from falling out. If vigorous swinging is anticipated, secure the letter card entrances with adhesive tape.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.

Package Contents

Verify that all items are present in the package:

- LED Handheld Bottle Service Display Sign (Style B)
- Charging Cable
- 4 Sets of Letter Cards (A-Z)
- 1 Set of Number Cards (0-9)
- Remote Control (with plastic paddle for battery activation)



The LED sign's dimensions and the included sets of letter and number cards.


Setup

1. **Initial Charge:** Before first use, fully charge the sign for approximately 6 hours.



Connect the charging cable to the sign's port.

2. **Remote Control Activation:** Remove the plastic paddle from the remote control's battery compartment to activate it.
3. **Power On:** Locate the power switch on the side of the sign and turn it ON.

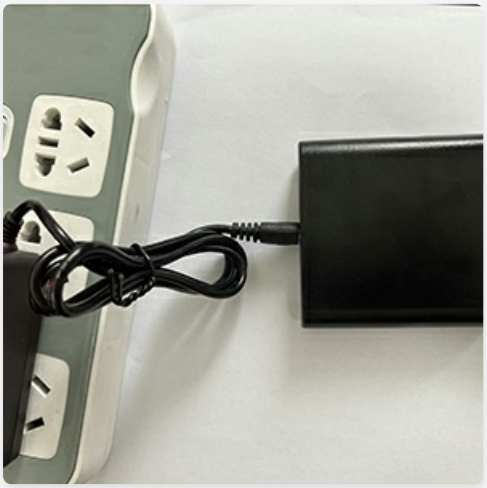

The power switch is located on the side of the unit.

Operating Instructions

Inserting and Changing Letters/Numbers

1. Select the desired letter or number cards from the provided sets.
2. Carefully slide the cards into the designated slots on the front of the display sign.
3. Arrange the cards to form your desired message.
4. **Important Tip:** The handheld light board generally needs to be held flat. If you need to shake it left and right with a large swing, the letter cards may fall from the entrances on both sides. To prevent this, it is recommended to tape the entrances on both sides with adhesive tape in advance before the event.

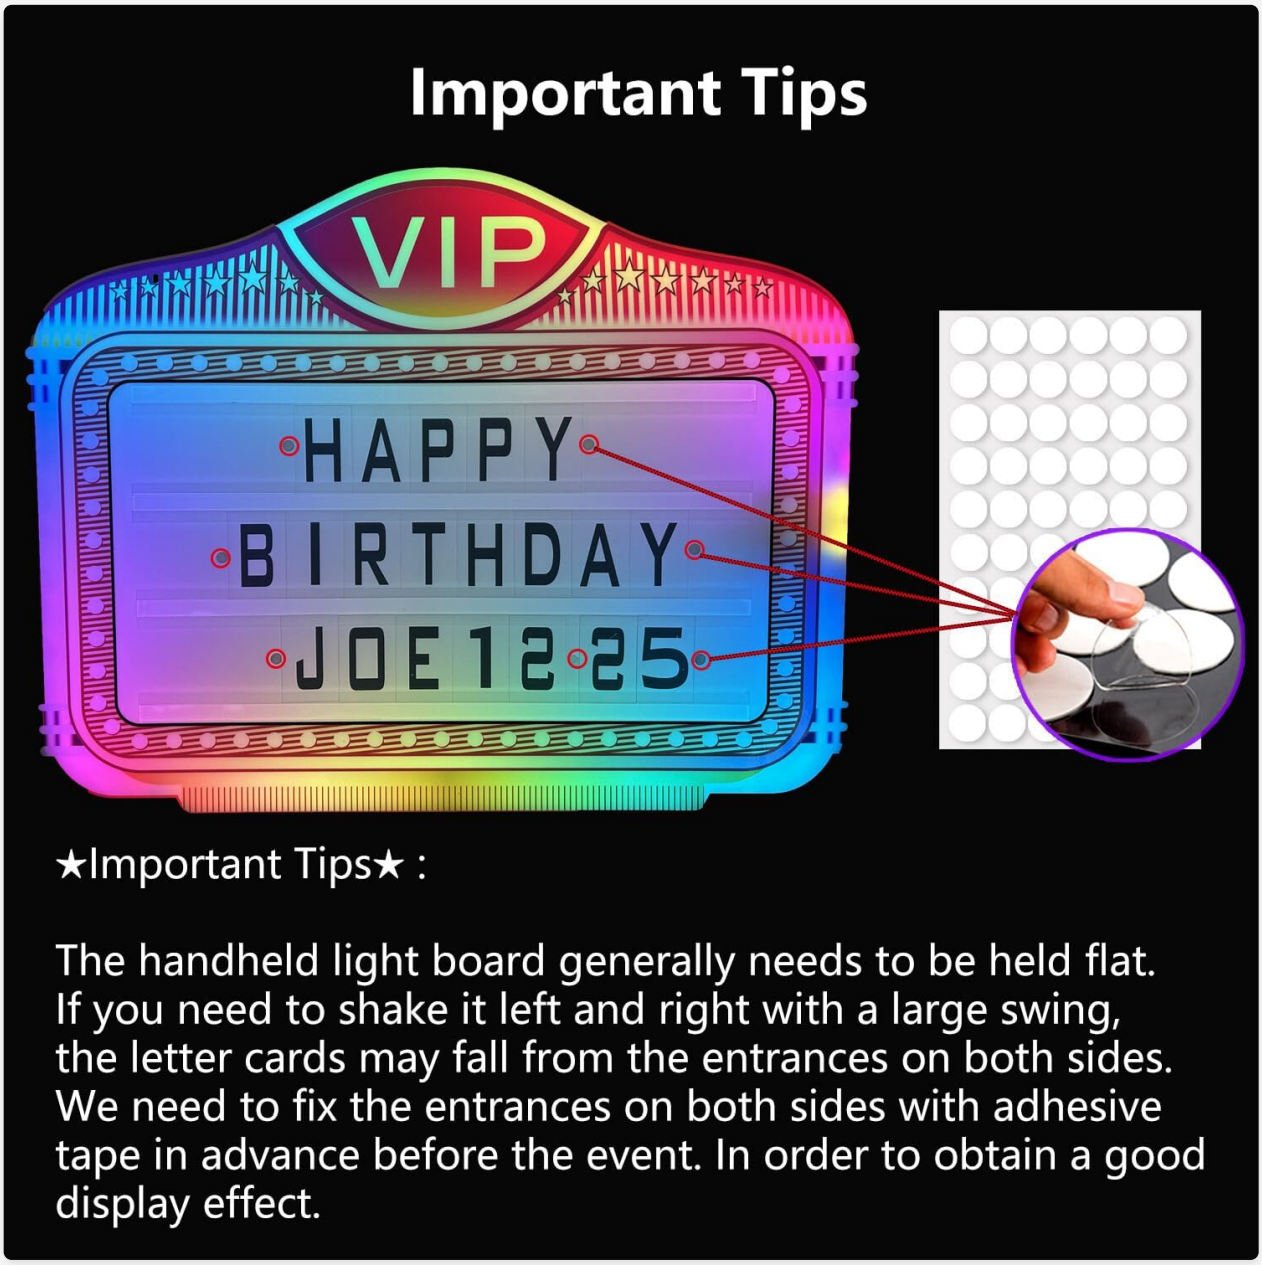


Illustration of letter insertion and the tip for securing letters with tape.

Changing Light Colors and Modes

Use the provided remote control to adjust the lighting effects:

- Press the color buttons on the remote to switch between various static colors (e.g., red, green, blue, yellow, purple, cyan, white).
- Utilize the mode buttons to activate dynamic lighting effects such as flashing, fading, or smooth transitions.



The LED sign displaying various color options.

Your browser does not support the video tag.

Demonstration of changing letters and light colors on the display sign.

Customization and Usage Scenarios

The sign offers versatility for various events and promotions:

- The front of the product can be combined with the provided four sets of letters and one set of number cards to create custom messages.
- The back of the product features a whiteboard surface. You can use a suitable pen (not included) to write your own words or designs for display.



The sign's dual functionality: changeable letters on the front and a whiteboard on the back.



The LED sign in use at a nightclub, highlighting its handheld design.

Maintenance

- Clean the acrylic surface with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- Ensure the device is turned off and unplugged before cleaning.
- Store the sign in a dry, cool place away from direct sunlight when not in use.

Troubleshooting

Problem	Possible Cause	Solution
Sign does not turn on.	Battery is depleted or not charged.	Charge the sign for 6 hours. If it still doesn't turn on, ensure the power switch is in the ON position.

Problem	Possible Cause	Solution
Remote control not working.	Plastic paddle not removed from battery compartment.	Remove the plastic paddle from the remote's battery compartment.
Letter cards fall out during use.	Vigorous movement or sign not held flat.	Ensure the sign is held flat. For dynamic use, secure the letter card entrances with adhesive tape.
Lights are dim or flickering.	Low battery.	Recharge the sign.

Specifications

Model: HH 955465

Dimensions: 28 x 23.5 x 0.4 inches

Weight: 13.2 pounds

Material: Plastic, Acrylic (Shade)

Light Source Type: LED

Power Source: Corded Electric (Rechargeable Battery Included)

Battery: 1 Lithium Ion battery (included)

Charge Time: Approximately 6 hours

Operating Time: Approximately 3-4 hours on a full charge

Mounting Type: Handheld

Bulb Features: Color changing, customizable lighting effects

Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact the seller directly. If you encounter any issues not covered in this manual, please reach out to customer support for assistance.
For further inquiries or support, please visit the official product page or contact the manufacturer's customer service.

© 2024 Generic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I get the HH 955465 LED Handheld Bottle Service Display Sign to power back on?

If your HH 955465 LED Handheld Bottle Service Display Sign is not powering back on despite being charged, here are the troubleshooting steps from the manual: Check the power switch: Locate the power switch...

Read full answer

Open the live page

https://manuals.plus/asin/B0DFCF8YLP

More documents and user manuals: **https://manuals.plus/**