Liksiy FG-M03B-black

Liksiy 4-in-1 Electric Milk Frother User Manual

Model: FG-M03B-black

Introduction

Thank you for choosing the Liksiy 4-in-1 Electric Milk Frother. This versatile appliance is designed to enhance your coffee and beverage experience by providing hot foam, cold foam, heated milk, and hot chocolate with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The Liksiy 4-in-1 Electric Milk Frother, a sleek black unit, is shown alongside a cup of coffee with latte art and scattered coffee beans, highlighting its use for coffee beverages.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the base unit in water or other liquids. Only the frothing jug is washable.
- Ensure the power supply voltage matches the rating label on the appliance.
- Always place the frother on a dry, flat, stable, and heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not use attachments not recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use outdoors.
- Avoid contact with moving parts.
- Do not overfill the frothing jug beyond the maximum fill lines to prevent spills.
- The frothing jug contains a non-stick coating; avoid using abrasive cleaners or metal scouring pads.

Package Contents

Please check the package contents upon opening:

- Liksiy Milk Frother Base Unit
- Frothing Jug with Lid
- Frothing Whisk (pre-installed)
- Heating Whisk (spare)
- Cleaning Brush
- User Manual (this document)

Product Overview

Familiarize yourself with the components of your Liksiy Milk Frother:

- **Frothing Jug:** The main container for milk, featuring a non-stick interior and clear MAX/MIN fill lines.
- **Lid:** Transparent lid with a removable whisk holder.
- **Power Base:** The electrical base that heats and powers the frother.
- **Control Panel:** Features a power button and indicator lights for different functions.
- **Whisks:** Includes a frothing whisk for creating foam and a heating whisk for warming milk without frothing.



Image: An internal view of the frothing jug, clearly indicating the maximum fill lines for heating (350ml) and frothing (160ml) milk, along with a minimum capacity of 100ml.



Image: A close-up shot of the frothing whisk positioned at the bottom of the jug, ready for use.



Image: A detailed view of the frother's ergonomic handle, designed for comfortable grip and pouring.

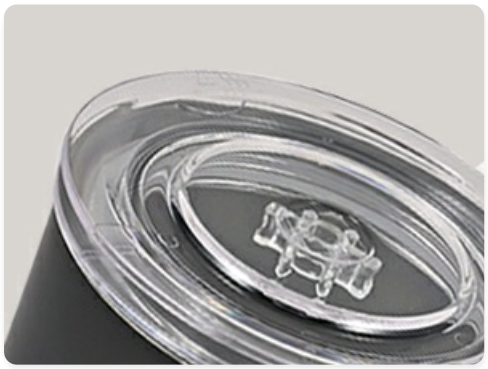


Image: The transparent lid of the frother, featuring a convenient storage slot for the spare whisk.

Setup

1. Unpack all components and remove any packaging materials.
2. Clean the frothing jug and whisks according to the "Cleaning and Maintenance" section before first use.
3. Place the power base on a dry, flat, stable, and heat-resistant surface near a power outlet.
4. Ensure the desired whisk (frothing or heating) is securely placed on the spindle inside the jug.
5. Place the frothing jug onto the power base.

Operating Instructions

The Liksiy Milk Frother offers four distinct functions:



Image: A visual guide illustrating the four primary functions of the frother: Hot Frothing, Heating Milk, Cold Frothing, and Heating Chocolate Milk.

General Operation Steps:

1. Pour milk into the frothing jug. Observe the MAX fill lines:
    - For frothing (hot or cold foam): Do not exceed the lower MAX line (160ml).
    - For heating milk or hot chocolate: Do not exceed the upper MAX line (350ml).
    - Always ensure at least the MIN line (100ml) is met.



Image: A diagram illustrating the internal fill lines of the frother jug, indicating maximum capacities for heating and frothing, and the minimum fill level.

2. Place the lid on the jug.
3. Press the power button to select the desired function. The indicator light will illuminate.
4. The frother will automatically stop when the process is complete.
5. Carefully remove the jug from the base and pour your prepared beverage.

Function Specifics:

- **Hot Frothing:** Use the frothing whisk. Press the power button once. The frother will heat and froth milk to create dense, hot foam for lattes and cappuccinos. (Approx. 2 minutes)



Image: A visual representation of rich and creamy milk foam being poured from the frother, ready for a barista-quality drink.

- **Cold Frothing:** Use the frothing whisk. Press and hold the power button for 2 seconds. The frother will create cold foam without heating, ideal for iced coffees and cold beverages. (Approx. 2 minutes)



Image: A side-by-side comparison showing the difference between cold milk foam (for iced lattes) and hot milk foam (for hot coffee),

demonstrating the frother's versatility.

- **Heating Milk:** Replace the frothing whisk with the heating whisk (smooth ring). Press the power button twice. The frother will heat milk to an ideal temperature without creating foam. (Approx. 2.5 minutes)
- **Heating Hot Chocolate:** Use the heating whisk. Press the power button three times. Add chocolate powder or syrup to the milk before starting. The frother will heat and mix to create hot chocolate. (Approx. 3 minutes)



Image: A visual representation of the approximate time taken for each function: Hot/Cold Frothing (2 mins), Heating Milk (2.5 mins), and Heating Chocolate (3 mins).

Maintenance and Cleaning

Proper cleaning ensures the longevity and hygiene of your milk frother.

1. Always unplug the frother from the power outlet and allow it to cool completely before cleaning.
2. Remove the frothing jug from the power base.
3. Remove the whisk from the jug.
4. Wash the frothing jug and whisk immediately after each use with warm, soapy water. Use the provided cleaning brush for thorough cleaning of the interior and whisk.

5. The interior of the jug has a non-stick coating. Do not use abrasive cleaners, metal scouring pads, or sharp objects as these can damage the coating.
6. Rinse thoroughly and dry all parts.
7. Wipe the exterior of the power base with a soft, damp cloth. Never immerse the power base in water or any other liquid.
8. Store the frother in a clean, dry place.



Image: A visual guide emphasizing the easy-to-clean non-stick coating of the frother jug, showing water being poured in for rinsing and indicating areas to avoid getting wet on the base.

Troubleshooting

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outlet not working; jug not correctly placed on base.	Ensure the power cord is securely plugged into a working outlet. Check that the jug is properly seated on the power base.

Problem	Possible Cause	Solution
Milk is not frothing or foam is thin.	Incorrect whisk used; milk type not suitable for frothing; too much milk; whisk not properly installed.	Ensure the frothing whisk is used. Use fresh, cold milk (whole milk or oat milk often froth best). Do not exceed the lower MAX fill line for frothing. Check whisk installation.
Milk is burning to the bottom.	Insufficient milk; non-stick coating damaged; residue from previous use.	Ensure milk is above the MIN fill line. Clean the jug thoroughly after each use. Avoid using abrasive cleaners.
Frother stops prematurely.	Overheating protection activated; jug removed from base during operation.	Allow the unit to cool down. Ensure the jug remains on the base throughout the cycle.

Specifications

Feature	Detail
Brand	Liksiy
Model Name	FG-M03B-black
Color	Black
Material	Outer ABS material, inside 304 Stainless Steel + non-stick coating
Product Dimensions	6.7"W x 7.6"H
Capacity (Heating)	Up to 11.8 oz (350 ml)
Capacity (Frothing)	Up to 5.6 oz (160 ml)
Minimum Capacity	100 ml
Power Source	Electric
Special Features	4-in-1 functions, Auto Shut-Off, Ergonomic Handle, Non-Stick, Overheat Protection
Product Care	Hand Wash Only (jug and whisk)

Warranty and Support

Liksiy provides a warranty for this product against defects in materials and workmanship under normal use. For specific warranty terms and conditions, please refer to the warranty card included in your package or contact Liksiy customer support.
If you encounter any issues or have questions regarding your Liksiy Milk Frother, please contact our customer support team. We are committed to providing professional and friendly service.
Customer Support: Please refer to the contact information provided on the product packaging or the official Liksiy website for the most up-to-date support channels.

© 2025 Liksiy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question