Saved from manuals.plus.
Open the live page for links to other documents and user manuals.


WWOOR 8849

WWOOR 8849 Gold Chronograph Watch User Manual

Model: 8849

Introduction

Thank you for choosing the WWOOR 8849 Gold Chronograph Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

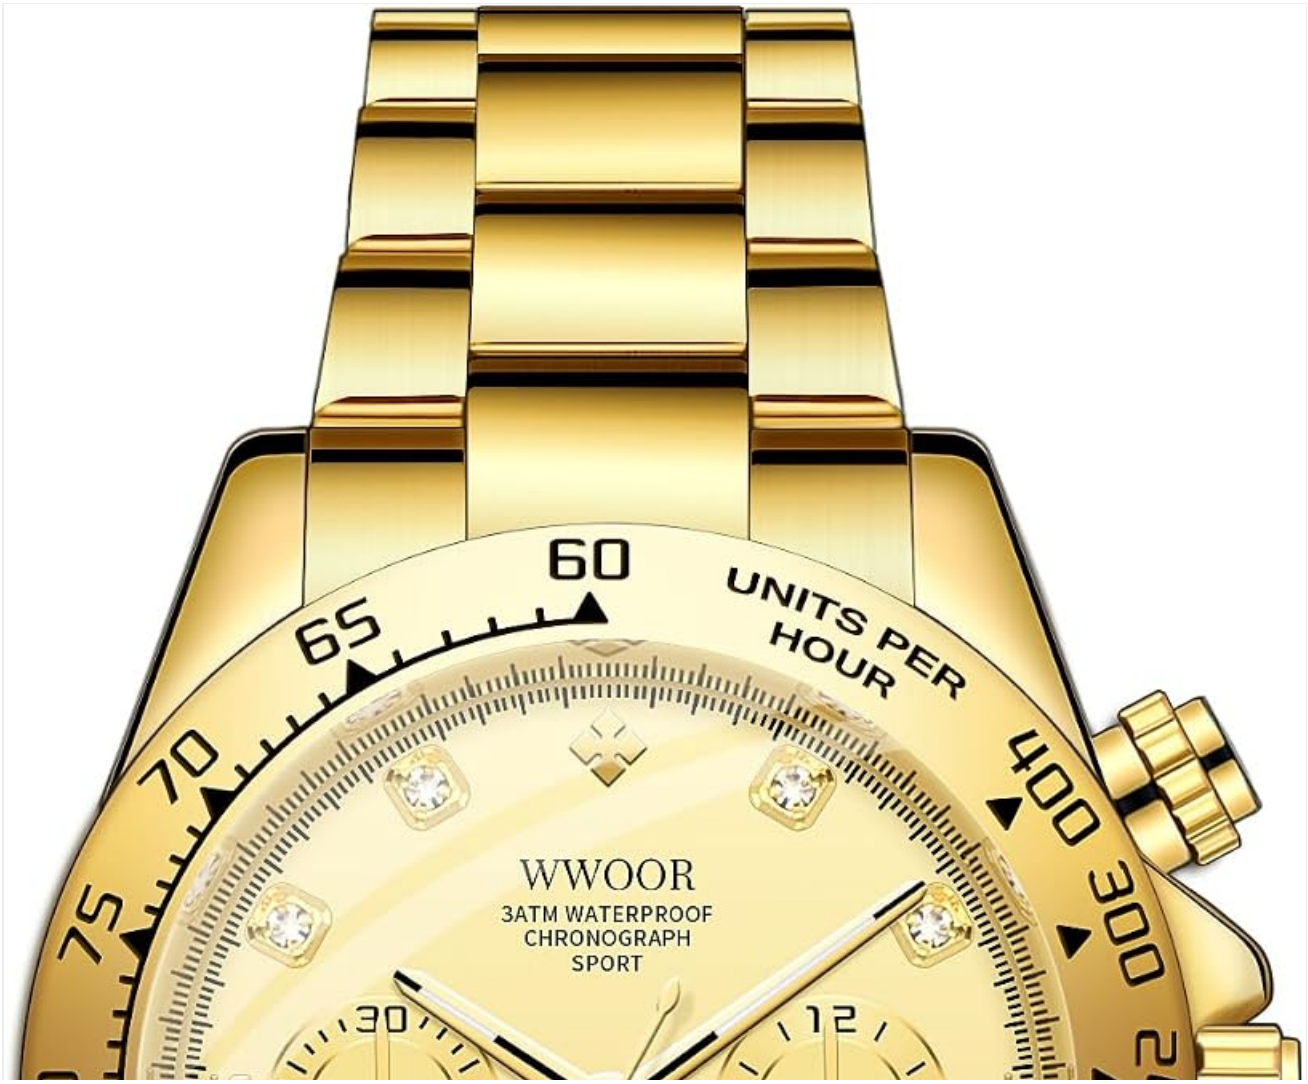

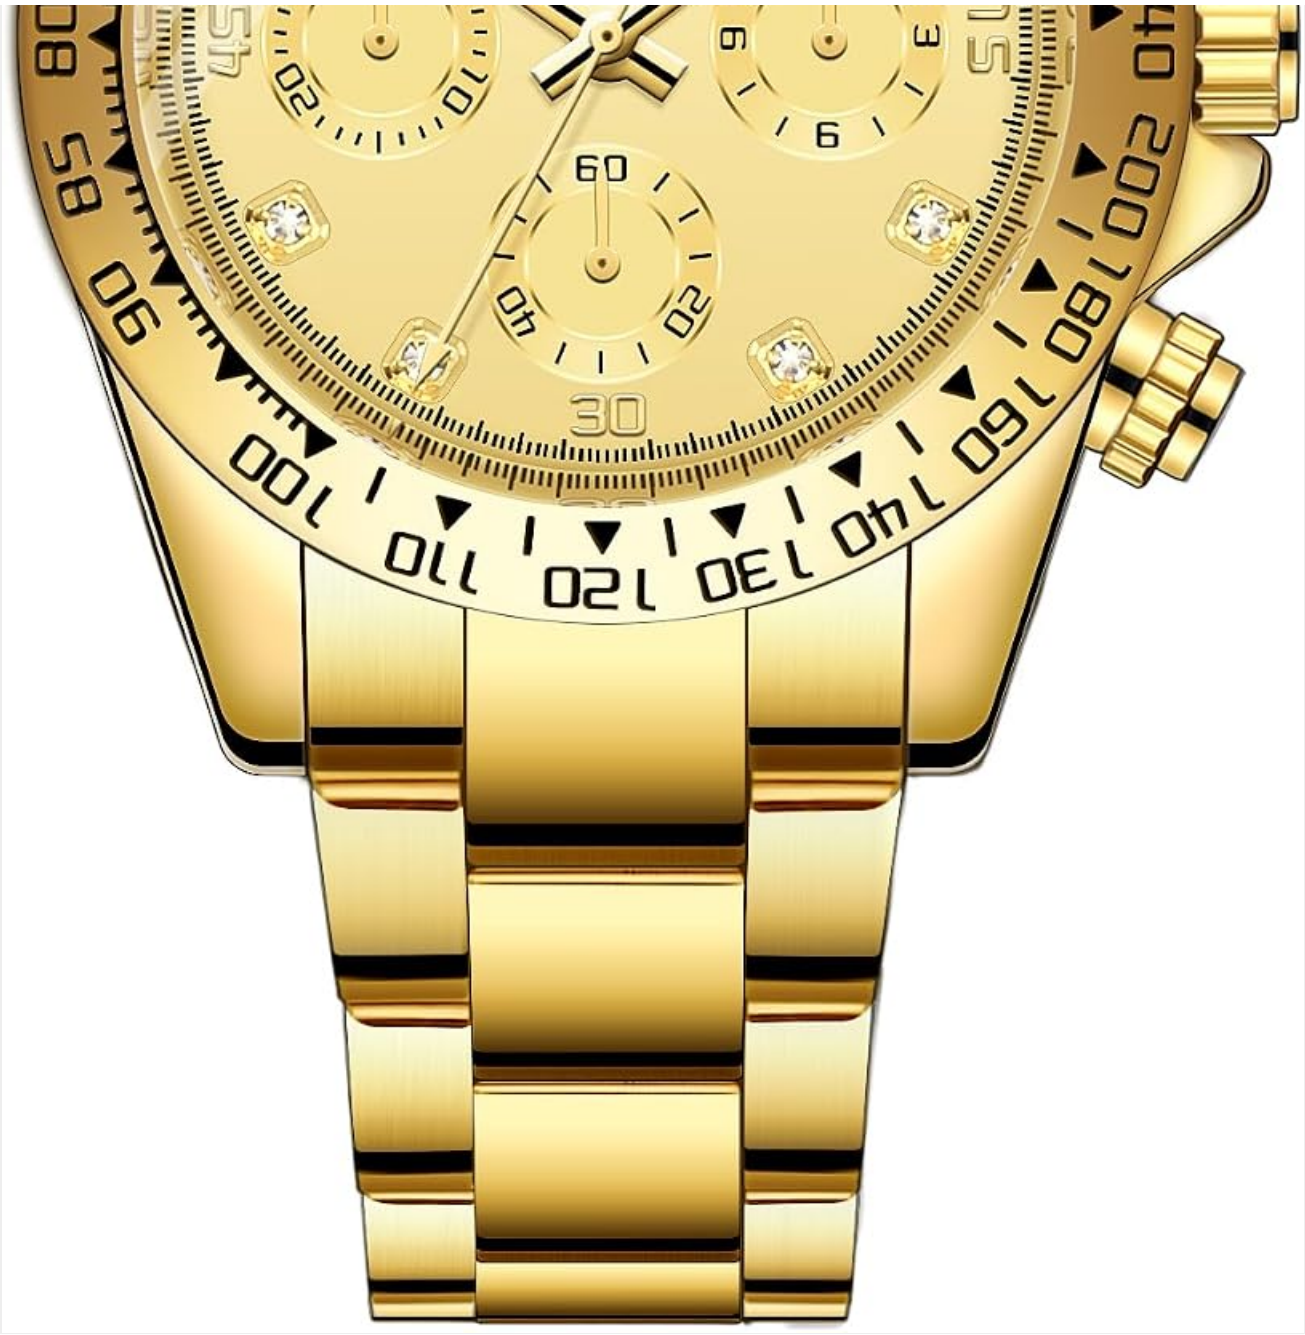


Image: The WWOOR 8849 Gold Chronograph Watch, showcasing its design and features.

Package Contents

Upon opening the package, please verify that all components are present:

- WWOOR 8849 Gold Chronograph Watch
- Instruction Manual (this document)
- Warranty Information
- Band adjustment tool



Image: The WWOOR 8849 Gold Chronograph Watch presented in its packaging, alongside included accessories.

Setup

1. Adjusting the Watch Band

The stainless steel band comes with a free adjustment tool. Use this tool to remove or add links to achieve a comfortable and secure fit on your wrist. Ensure the clasp closes firmly after adjustment.

2. Initial Time Setting

Before wearing, set the correct time. Refer to the 'How to Set the Time' section in the Operating Instructions for detailed steps.

Operating Instructions

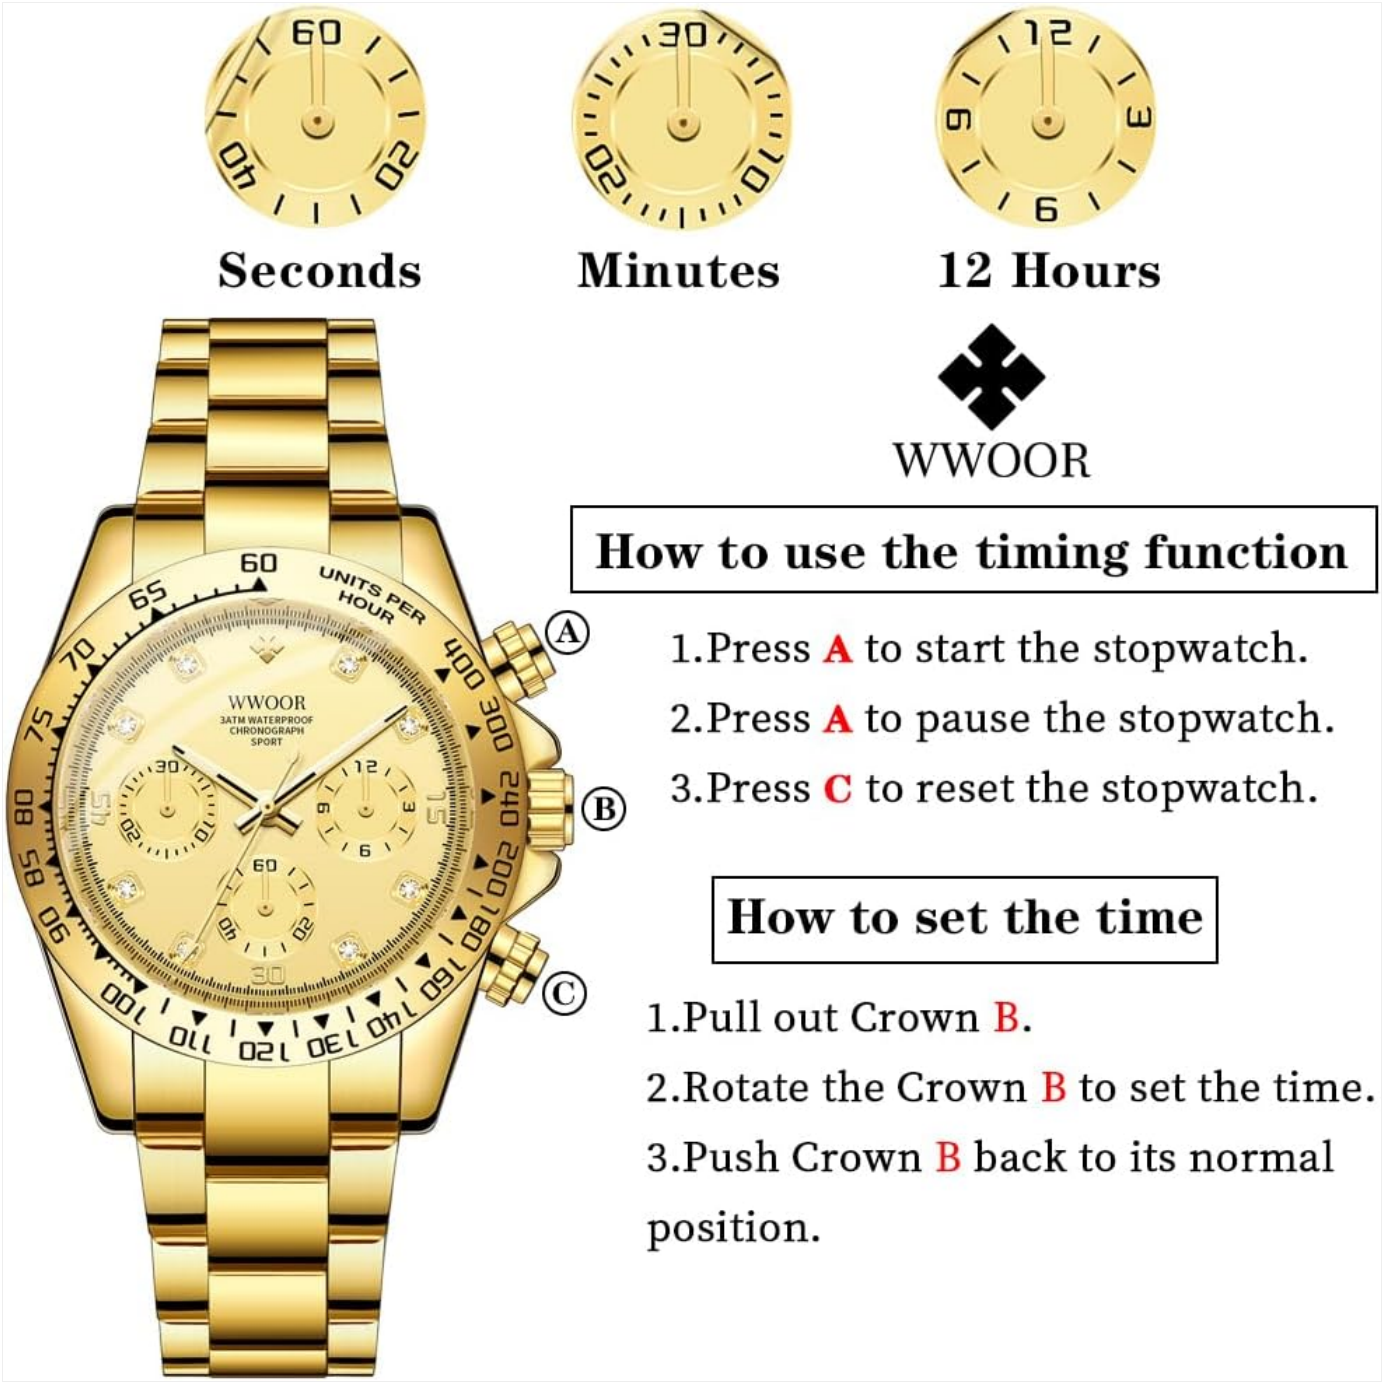


Image: Diagram illustrating the watch's buttons (A, C) and crown (B) for setting time and using the chronograph function.

1. Setting the Time

1. Pull out Crown **B** to its outermost position.
2. Rotate Crown **B** to set the hour and minute hands to the desired time.
3. Push Crown **B** back into its normal position to start the watch.

2. Using the Chronograph (Stopwatch)

The watch features three sub-dials for chronograph functions: seconds, minutes, and a 24-hour indicator.

1. Press button **A** to start the stopwatch.
2. Press button **A** again to pause the stopwatch.
3. Press button **C** to reset the stopwatch hands to zero.

3. Luminous Display

The watch hands are designed with luminous material to provide visibility in low-light conditions. For optimal glow, expose the

watch face to a bright light source before entering a dark environment.



Image: A close-up view of the watch face, demonstrating the luminous hands glowing in a dark setting.

Maintenance

1. Water Resistance

This watch is water-resistant up to 30 meters (100 feet). It is suitable for daily use, swimming, and fishing. **Note:** It is not suitable for diving or hot water activities like showering or sauna, as steam can penetrate the seals.

2. Cleaning

To maintain the watch's appearance, wipe the case and band regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners.

3. Battery Replacement

The watch is powered by a quartz movement, which uses a battery. When the watch stops or the second hand moves erratically, it

indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Troubleshooting

- **Watch is not running:** Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time is inaccurate:** Verify the crown is fully pushed in. Quartz movements are highly accurate; significant deviation may indicate a low battery or a need for service.
- **Chronograph function not working:** Ensure buttons A and C are pressed firmly. If the chronograph hands do not respond or reset correctly, the mechanism may require inspection.
- **Luminous hands not glowing:** The luminous material requires exposure to light to charge. If the hands do not glow after exposure to light, the luminous coating may be compromised.

For issues not resolved by these steps, please contact customer support.

Specifications

PRODUCT PARAMETERS

WWOOR

Model	8849
Case material	Alloy
Band material	Stainless steel
Mirror material	Mineral glass
Waterproof	30M(100ft)
Weight	128g

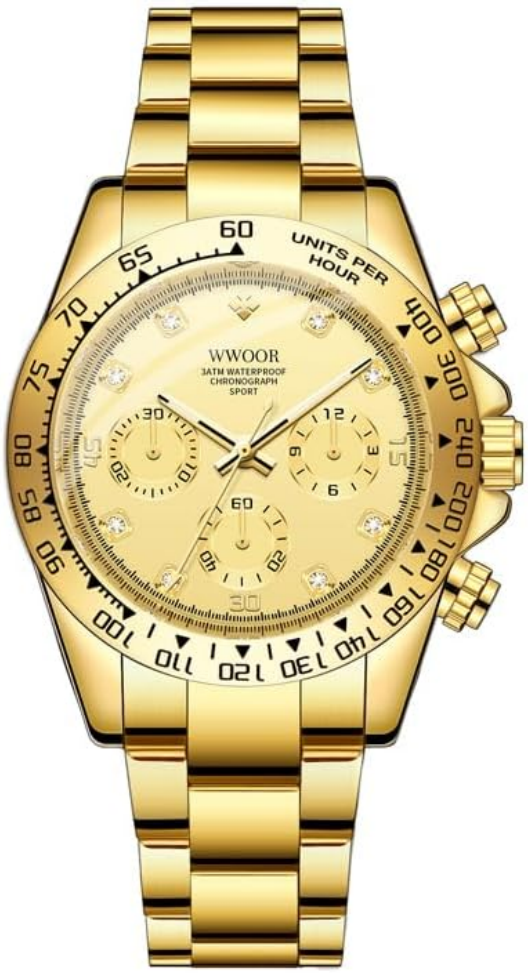




Image: A table detailing the key product parameters and dimensions of the WWOOR 8849 watch.

Feature	Specification
Model Number	8849
Movement Type	Quartz (Japanese)
Case Material	Alloy Steel
Band Material	Stainless Steel
Mirror Material	Mineral Glass
Water Resistance	30 Meters (100 feet)
Case Diameter	39 mm
Case Thickness	11 mm

Feature	Specification
Band Width	20 mm
Band Length	215 mm
Clasp Type	Push-button-clasp
Weight	128 g

Warranty and Support

Warranty Information

Your WWOOR 8849 Gold Chronograph Watch is covered by a **1-year after-sales service warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from accidents, improper use, unauthorized repairs, or normal wear and tear.
Additionally, a **30-day refund policy** is available from the date of purchase. Please refer to your purchase documentation for specific terms and conditions.

Customer Support

If you have any questions, require assistance, or need to claim warranty service, please contact WWOOR customer support through the retailer where the product was purchased. Please have your model number (8849) and proof of purchase ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DFW8GYQG

More documents and user manuals: **https://manuals.plus/**