K&F CONCEPT KF09.141

K&F CONCEPT Invisible Selfie Stick & Tripod User Manual

Model: KF09.141

1. Product Overview

The K&F CONCEPT Invisible Selfie Stick and Tripod (Model KF09.141) is a versatile 2-in-1 accessory designed for action cameras and 360 cameras. It functions as both an extendable selfie stick and a stable tripod, supporting various shooting modes including horizontal, vertical, and 360-degree panoramic. Constructed from high-strength aluminum alloy, it offers durability and portability for diverse outdoor and travel photography needs.

Key Features:

- **2-in-1 Selfie Stick Tripod:** Combines an invisible selfie stick and a tripod for adjustable and lightweight support.
- **360 Camera Invisible Effect:** Automatically disappears from 360-degree footage when used with compatible cameras like Insta360 X5/X4/X3/Osmo 360.
- **Lightweight & Portable:** Extends up to 120cm (47.2 inches) and folds down to 24cm (9.44 inches), weighing 202g for easy storage and transport.
- **Sturdy & Stable:** Made from high-strength aluminum alloy with 7-section adjustable extension, built-in shock-absorbing rings, wide fixed structure, and anti-slip silicone pads.
- **Widely Compatible:** Features a 1/4" interface and includes a GoPro adapter, compatible with Insta360 X5/X4/X3/One RS/One X2/One X/GO 2/ONE R/ONE, GoPro Hero 13/12/11/10/9/8/7/6/5 Black/Max, DJI Osmo Action 3/4/5 Pro, Insta360 Ace/Ace Pro/Ace Pro 2, Akaso, SJCAM, and other action cameras.

2. Package Contents

- Invisible Selfie Stick x 1
- Action Camera Adapter x 1

3. Setup and Assembly

3.1 Extending the Selfie Stick

To extend the selfie stick, firmly grasp the handle and pull the upper sections upwards. The stick features 7 sections that can be adjusted to your desired length, up to a maximum of 120cm (47.2 inches).

3.2 Deploying the Tripod

The selfie stick integrates a tripod function. To deploy the tripod legs, gently pull the bottom section of the handle outwards. The legs will expand to provide a stable base. Ensure the legs are fully extended for maximum stability.



This image illustrates the selfie stick in both its fully extended selfie stick mode and its compact tripod mode, highlighting the adjustable lengths.

3.3 Attaching Your Camera

The selfie stick is equipped with a standard 1/4" screw mount at the top.

1. For cameras with a 1/4" screw thread (e.g., Insta360 cameras, compact cameras), simply screw the camera onto the top mount until secure.
2. For GoPro cameras or other action cameras requiring a dual-claw connector, use the included GoPro adapter. Attach the adapter to the 1/4" screw mount, then secure your action camera to the adapter.



This image displays the 1/4" screw and the GoPro adapter, demonstrating the wide compatibility with various action cameras.

4. Operating Instructions

4.1 Using as a Selfie Stick


Hold the stick firmly by the handle. Extend the pole to your desired length. Position your camera to capture the desired angle. The robust aluminum alloy construction ensures stability even when fully extended.



This image shows the selfie stick in use, extended to capture a broader perspective.

4.2 Using as a Tripod

Deploy the tripod legs as described in Section 3.2. Place the tripod on a flat, stable surface. Adjust the height of the stick as needed. This mode is ideal for stable shots, time-lapses, or group photos.

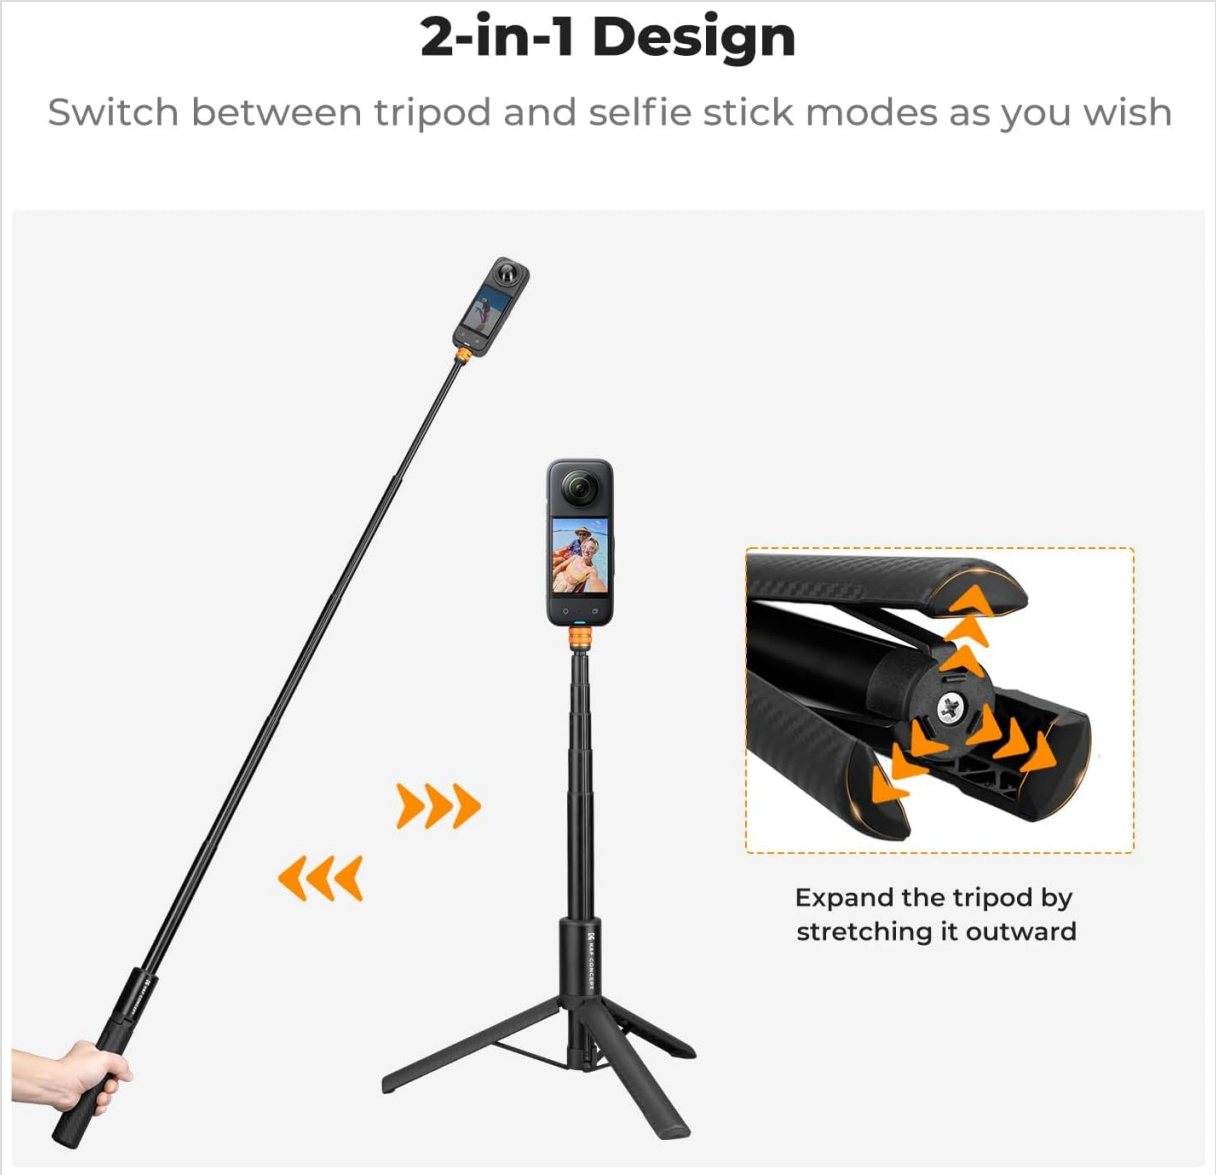


This image depicts the selfie stick configured as a tripod, ready for stationary recording.

4.3 Achieving the "Invisible" Effect (for 360 Cameras)

When using compatible 360 cameras (e.g., Insta360 X5/X4/X3/Osmo 360), the selfie stick is designed to automatically disappear from your 360-degree footage.

To achieve this effect:

- Ensure the tripod legs are closed and not deployed.
- Keep the selfie stick vertical with the camera.
- The camera's software will stitch out the stick, making it appear invisible in the final footage.

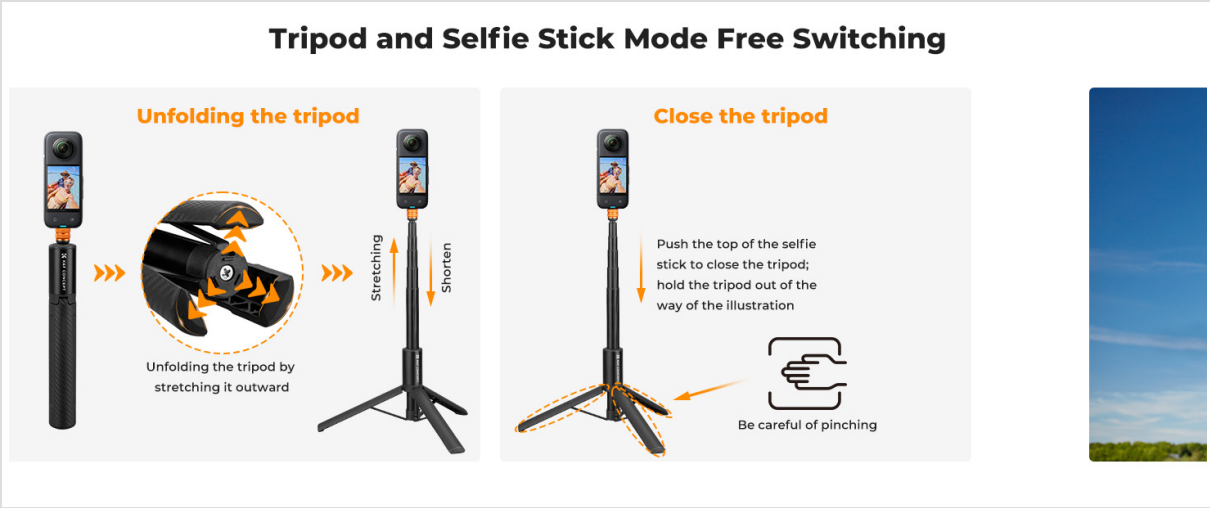

This image demonstrates the "invisible" selfie stick effect when used with a 360 camera, showing how the stick is automatically removed from the panoramic view.

5. Maintenance and Care

- **Cleaning:** Wipe the selfie stick with a soft, dry cloth after each use to remove dust and debris. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Storage:** Store the selfie stick in a dry, cool place away from direct sunlight and extreme temperatures. Ensure it is fully retracted and the tripod legs are closed before storage.
- **Avoid Overloading:** Do not exceed the recommended load capacity of 300g to prevent damage to the stick or your camera.
- **Inspect Regularly:** Periodically check all sections and joints for any signs of wear or damage. Do not use if any part appears compromised.

6. Troubleshooting

- **Stick not extending/retracting smoothly:** Ensure no debris is lodged in the sections. Clean the stick as described in the maintenance section. Do not force the mechanism.
- **Tripod unstable:** Ensure the tripod legs are fully deployed and placed on a flat, level surface. Verify that the camera is securely attached and within the weight limit.
- **Camera not attaching securely:** Check that the 1/4" screw is fully tightened. If using the GoPro adapter, ensure it is correctly installed and the camera's dual-claw connector is properly engaged.
- **"Invisible" effect not working:** Confirm you are using a compatible 360 camera. Ensure the tripod legs are closed and the stick is held vertically. Refer to your 360 camera's specific instructions for invisible stick functionality.

7. Specifications

Feature	Detail
Model Number	KF09.141
Product Dimensions (Folded)	11.42 x 1.57 x 1.57 inches (24cm folded length)

Feature	Detail
Item Weight	7.1 ounces (202 Grams)
Maximum Extension Length	120cm / 47.2 inches
Material	High-strength Aluminum Alloy
Mounting Screw	1/4" Standard
Compatible Devices	Insta360 X5/X4/X3/One RS/One X2/One X/GO 2/ONE R/ONE, GoPro Hero 13/12/11/10/9/8/7/6/5 Black/Max, DJI Osmo Action 3/4/5 Pro, Insta360 Ace/Ace Pro/Ace Pro 2, Akaso, SJCAM, and other action cameras with 1/4" interface or dual-claw connector (adapter included)
Load Capacity	300g

8. Official Product Videos

8.1 K&F Concept MS21 Action Camera Tripod Selfie Stick Overview

Your browser does not support the video tag.

This video provides a comprehensive overview of the K&F Concept MS21 Action Camera Tripod Selfie Stick, demonstrating its 2-in-1 functionality, adjustable length, and compatibility with various cameras. It shows the stick extending, deploying as a tripod, and being used with both a GoPro and a mirrorless camera.

9. Warranty and Support

For warranty information and customer support, please refer to the official K&F CONCEPT website or contact their customer service directly. Keep your purchase receipt for warranty claims.

© 2024 K&F CONCEPT. All rights reserved.