Mova J30

MOVA J30 Cordless Vacuum Cleaner User Manual

Model: J30 | Brand: Mova

1. Introduction

The MOVA J30 Cordless Vacuum Cleaner is designed to provide powerful and efficient cleaning for your home. Equipped with a robust 450W brushless motor, it delivers strong suction for both hard floors and carpets. Its innovative 180-degree folding tube allows for easy access to hard-to-reach areas, while the LED smart touch screen offers intuitive control over three adjustable suction modes. The versatile 4-in-1 design, including various interchangeable tools, ensures comprehensive cleaning for every surface. Enjoy up to 60 minutes of runtime and an advanced filtration system for a cleaner, more comfortable living environment.

2. Safety Information

Please read all safety instructions carefully before using the MOVA J30 Cordless Vacuum Cleaner to ensure safe operation and prevent damage.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Exercise extra care when cleaning on stairs.
- Unplug the charger from the outlet when not in use and before cleaning.
- Store the vacuum cleaner indoors in a cool, dry place.

3. What's in the Box

The MOVA J30 Cordless Vacuum Cleaner package includes the following components:

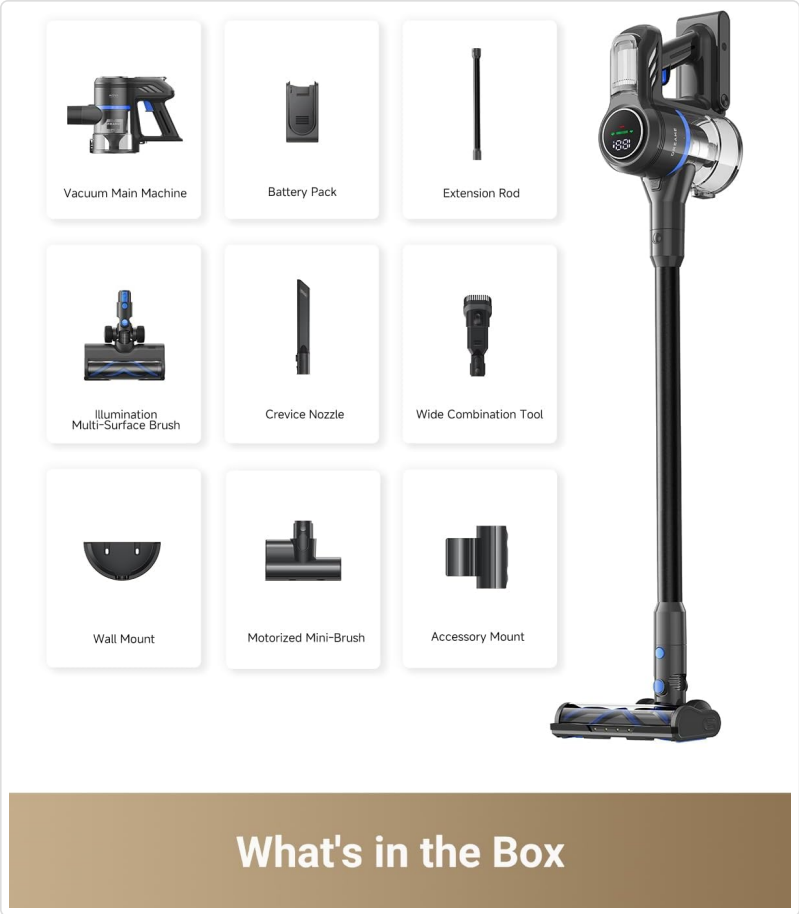


Image: Overview of all included components, neatly laid out.

- Vacuum Main Machine (1)
- Battery Pack (1)
- Folding Tube (1)
- Illumination Multi-Surface Brush (1)
- Motorized Mini-Brush (1)
- Crevice Nozzle (1)
- Wide Combination Tool (1)
- Wall Mount (1)
- Accessory Mount (1)

4. Setup

4.1 Assembly

To assemble your MOVA J30, connect the main machine to the folding tube, and then attach the illumination multi-surface brush to the other end of the folding tube. Ensure all connections click securely into place.



Image: The MOVA J30 vacuum cleaner fully assembled, ready for use, with its various attachments displayed around it.

4.2 Charging the Battery

Before first use, fully charge the battery pack. You can charge the battery while it is attached to the main machine or separately. Use the provided wall mount for convenient storage and charging. A full charge takes approximately 4.5 hours.



Image: The MOVA J30 vacuum cleaner is shown securely mounted on its wall charger, indicating a convenient storage and charging solution.

5. Operating Instructions

5.1 Power On/Off and Suction Modes

To power on the vacuum, press the power button located on the main machine. The LED smart touch screen will display the battery level and current suction mode. Tap the screen to cycle through the three adjustable suction modes: low, medium, and high, to suit different cleaning needs.



Image: A detailed view of the vacuum's LED screen, showing battery percentage and indicators for different suction levels, highlighting its intuitive controls.

5.2 Flexible 180° Folding Tube

The unique 180-degree folding tube allows you to easily clean under furniture and in tight spaces without bending or straining. Simply press the release button on the tube to fold it, enabling the brush head to reach low areas effectively.



Image: The vacuum is shown with its flexible tube bent, allowing the brush head to easily reach and clean under a sofa, demonstrating its ability to access dim corners.

5.3 Versatile 4-in-1 Design and Attachments

The MOVA J30 comes with four interchangeable tools to handle various cleaning tasks:

- **Motorized Mini-Brush:** Ideal for lifting pet hair and dust from upholstery and stairs.
- **Crevice Nozzle:** Perfect for narrow spaces, corners, and edges.
- **Wide Combination Tool:** Suitable for cleaning desktops, windows, and door frames.
- **Illumination Multi-Surface Brush:** Features LED lights to illuminate dust and debris on carpets and hard floors, ensuring no spot is missed.



Image: Demonstrates the versatility of the vacuum with close-ups of the motorized mini-brush cleaning a sofa, the crevice nozzle reaching into tight spaces, and the wide combination tool cleaning a table surface.

5.4 LED Illumination

The multi-surface brush head is equipped with LED lights that illuminate the cleaning path, making hidden dust and debris visible on all floor types, ensuring a thorough clean even in dimly lit areas.



Image: The vacuum's brush head is shown with its LED lights activated, clearly highlighting dust and debris on the floor, demonstrating enhanced visibility during cleaning.

6. Maintenance

6.1 Emptying the Dustbin

The 0.5L dustbin features a quick-release mechanism for easy emptying. Press the release button to detach the dustbin and dispose of collected debris. It is recommended to empty the dustbin after each use or when it reaches its maximum fill line.



Image: A hand is shown holding the vacuum's main unit over a trash bin, with debris falling out of the quick-release dustbin, illustrating the ease of emptying.

6.2 Cleaning Filters and Brush Roll

The filters and brush roll are washable for easy upkeep. Regularly clean these components to maintain optimal suction performance. Allow them to air dry completely before reassembling.



Image: The vacuum's filter and brush roll are depicted being rinsed under water, demonstrating that these components are washable for easy maintenance.

7. Troubleshooting

If you encounter any issues with your MOVA J30, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No Power / Short Runtime	Battery not charged; Battery issue	Ensure battery is fully charged (4.5 hours). Check charger connection.
Low Suction Power	Dustbin full; Clogged filter; Blockage in tube/brush	Empty dustbin. Clean or replace filters. Check for and remove any blockages.
Brush Roll Not Spinning	Hair/debris tangled; Brush roll jammed	Remove brush roll and clear any tangled hair or debris. Ensure it's properly reinstalled.
LED Screen Not Responding	Temporary glitch; Low battery	Restart the vacuum. Ensure battery is charged. If issue persists, contact support.

8. Specifications

Key technical specifications for the MOVA J30 Cordless Vacuum Cleaner:

Feature	Detail
Brand	Mova
Model Name	J30
Motor Wattage	450 watts
Runtime	Up to 60 minutes
Charging Time	4.5 Hours
Dustbin Capacity	0.5 Liters
Filter Type	Cartridge, Cloth
Special Feature	180° Folding Tube, Cordless, LED Smart Touch Screen
Product Dimensions	44.8"L x 9.44"W x 8.46"H
Item Weight	3.39 pounds

Feature	Detail
Noise Level	80 dB

9. Warranty and Support

MOVA is committed to providing high-quality products and excellent customer service. Your MOVA J30 Cordless Vacuum Cleaner comes with a comprehensive warranty and dedicated support.

- **Warranty:** Enjoy peace of mind with up to a 36-month warranty on your product.
- **Money Back Service:** A 30-day money-back service is available for your satisfaction.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please visit the official Mova Store or contact our 24/7 rapid responding service team.

Visit the Mova Store on Amazon for more information and support resources.

© 2025 Mova. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question