Mova G1 Pro

Mova G1 Pro Pet Grooming Kit Instruction Manual

Model: G1 Pro | Brand: Mova

Introduction

The Mova G1 Pro Pet Grooming Kit is an advanced system designed to simplify pet grooming and maintain a clean home environment. This kit features an integrated vacuum that captures up to 99% of pet hair during grooming, ensuring a mess-free experience. With a variety of specialized tools and adjustable suction levels, it provides a comprehensive solution for grooming and cleaning for various pets and household surfaces.



Image: The Mova G1 Pro Pet Grooming Kit, showcasing the main unit, hose, grooming brush, and various attachments, with a dog and cat in the background.

Safety Information

For safe operation and to prevent injury or damage, please adhere to the following safety guidelines:

- Keep the trimmer away from water sources.
- Do not use on infants or children without adult supervision.
- Ensure all attachments are securely fastened before use.
- Do not block the air inlets or outlets during operation.
- Unplug the device before cleaning or performing maintenance.

Product Components

The Mova G1 Pro Pet Grooming Kit includes the following items:



Image: An overview of all components: Main Unit, Grooming Brush, Hair Removing Roller, Cleaning Brush, Nozzle Head, 3-in-1 Clipper, Narrow Clipper, Nail Grinder, Standard Clipper, Clipping Combs (x2), Tool Rack, Hose Holder, and Soft Hose.

- **Main Unit:** The central vacuum unit with IntelliCare System control.
- **Grooming Brush:** For general grooming and deshedding.
- **Hair Removing Roller:** For cleaning pet hair from fabric surfaces.
- **Cleaning Brush:** For cleaning surface particles and loose pet hair from various surfaces.
- **Nozzle Head:** For reaching tight spaces and corners.
- **Clippers:**
  - **3-in-1 Clipper:** Versatile clipper for various grooming needs.
  - **Narrow Clipper:** Ideal for trimming hair in delicate areas like paw crevices.
  - **Standard Clipper:** For universal shaving of body hair.
- **Nail Grinder:** For safely grinding pet nails.

- **Clipping Combs (x2):** Guide combs for precise hair length (3-6mm, 5-8mm).
- **Tool Rack:** For organized storage of attachments.
- **Hose Holder:** To keep the hose organized.
- **Soft Hose:** Connects attachments to the main unit.

Setup

Follow these steps to set up your Mova G1 Pro Pet Grooming Kit:

1. **Unpack Components:** Carefully remove all items from the packaging and ensure all components listed in the "Product Components" section are present.
2. **Connect the Hose:** Insert one end of the Soft Hose firmly into the suction port on the front of the Main Unit.
3. **Attach Desired Tool:** Select the appropriate grooming or cleaning tool for your task and attach it securely to the other end of the Soft Hose. Ensure it clicks into place.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.
5. **Organize Tools:** Use the provided Tool Rack to store unused attachments neatly.



Image: The Mova G1 Pro main unit displayed with its array of attachments, illustrating the versatility for pet grooming and cleaning.

Operation

1. Powering On and Suction Levels

The Mova G1 Pro features an IntelliCare System with 4 adjustable suction levels to cater to different needs and pet sensitivities.

- **Turning On/Off:** Rotate the central dial to the power symbol to turn the unit on or off.
- **Adjusting Suction:** Rotate the dial to select one of the four suction levels (1-4).
- **Pet Care Mode (Level 1):** This mode features a gradual start, where the suction sound increases slowly over 30 seconds. This gentle ramp-up helps sensitive pets, especially cats, adapt to the sound and vibration, making grooming a less stressful experience. The noise level at startup is approximately 36dB.
- **Level 2:** Suitable for short-haired dogs.
- **Level 3:** Ideal for long-haired dogs.
- **Level 4:** Provides peak 11kPa suction power, perfect for heavy-duty cleaning tasks like picking up pet food or large debris from carpets and furniture.



Image: A visual guide to the 4 suction levels: Level 1 for sensitive cats & dogs (gradual volume increase), Level 2 for short-haired dogs, Level 3 for long-haired dogs, and Level 4 for clothing & furniture cleaning.



Image: A graphic comparing the noise levels of the Mova G1 Pro (55dB) to other common sounds like a hairdryer (80dB), fridge (40dB), and falling leaves (20dB), highlighting its quiet operation.

Your browser does not support the video tag.

Video: An official demonstration of the Mova G1 Pro 7-in-1 Pet Grooming Kit, showcasing its features, quiet operation, and various attachments in use for both grooming and cleaning.

2. Grooming Tools

The kit includes specialized tools for effective pet grooming:

- **Grooming Brush:** Use this brush to gently comb through your pet's coat, removing loose hair and tangles. The integrated vacuum captures the hair directly, preventing mess.
- **Deshedding Tool:** Designed to effectively remove excess undercoat and loose fur, reducing shedding around your home.

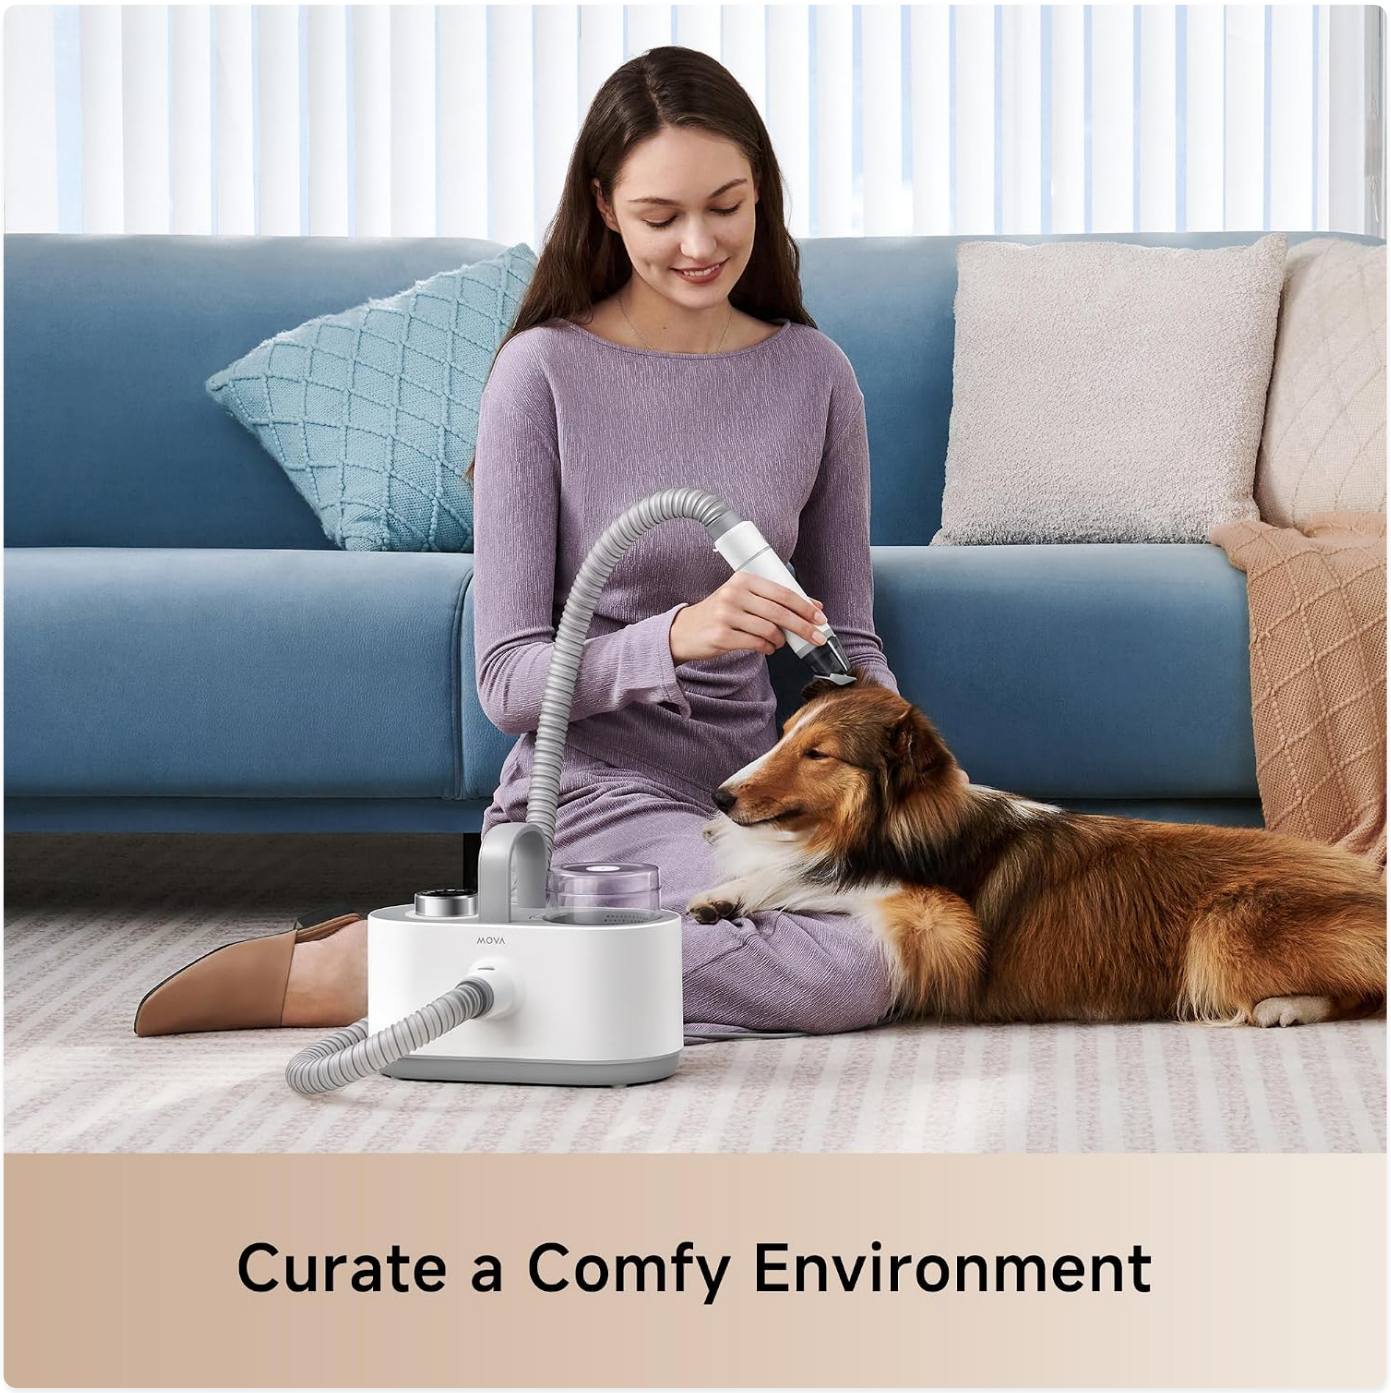


Image: A cat being groomed with the grooming brush, demonstrating how loose hair is effectively collected by the vacuum system.

- **Electric Clippers (3-in-1, Narrow, Standard):** Attach the desired clipper head to the hose for trimming your pet's fur. The vacuum function ensures that clipped hair is immediately collected. Use the clipping combs for desired hair length.
- **Nail Grinder:** Gently grind your pet's nails to the desired length. The vacuum helps to collect nail dust, keeping the area clean.

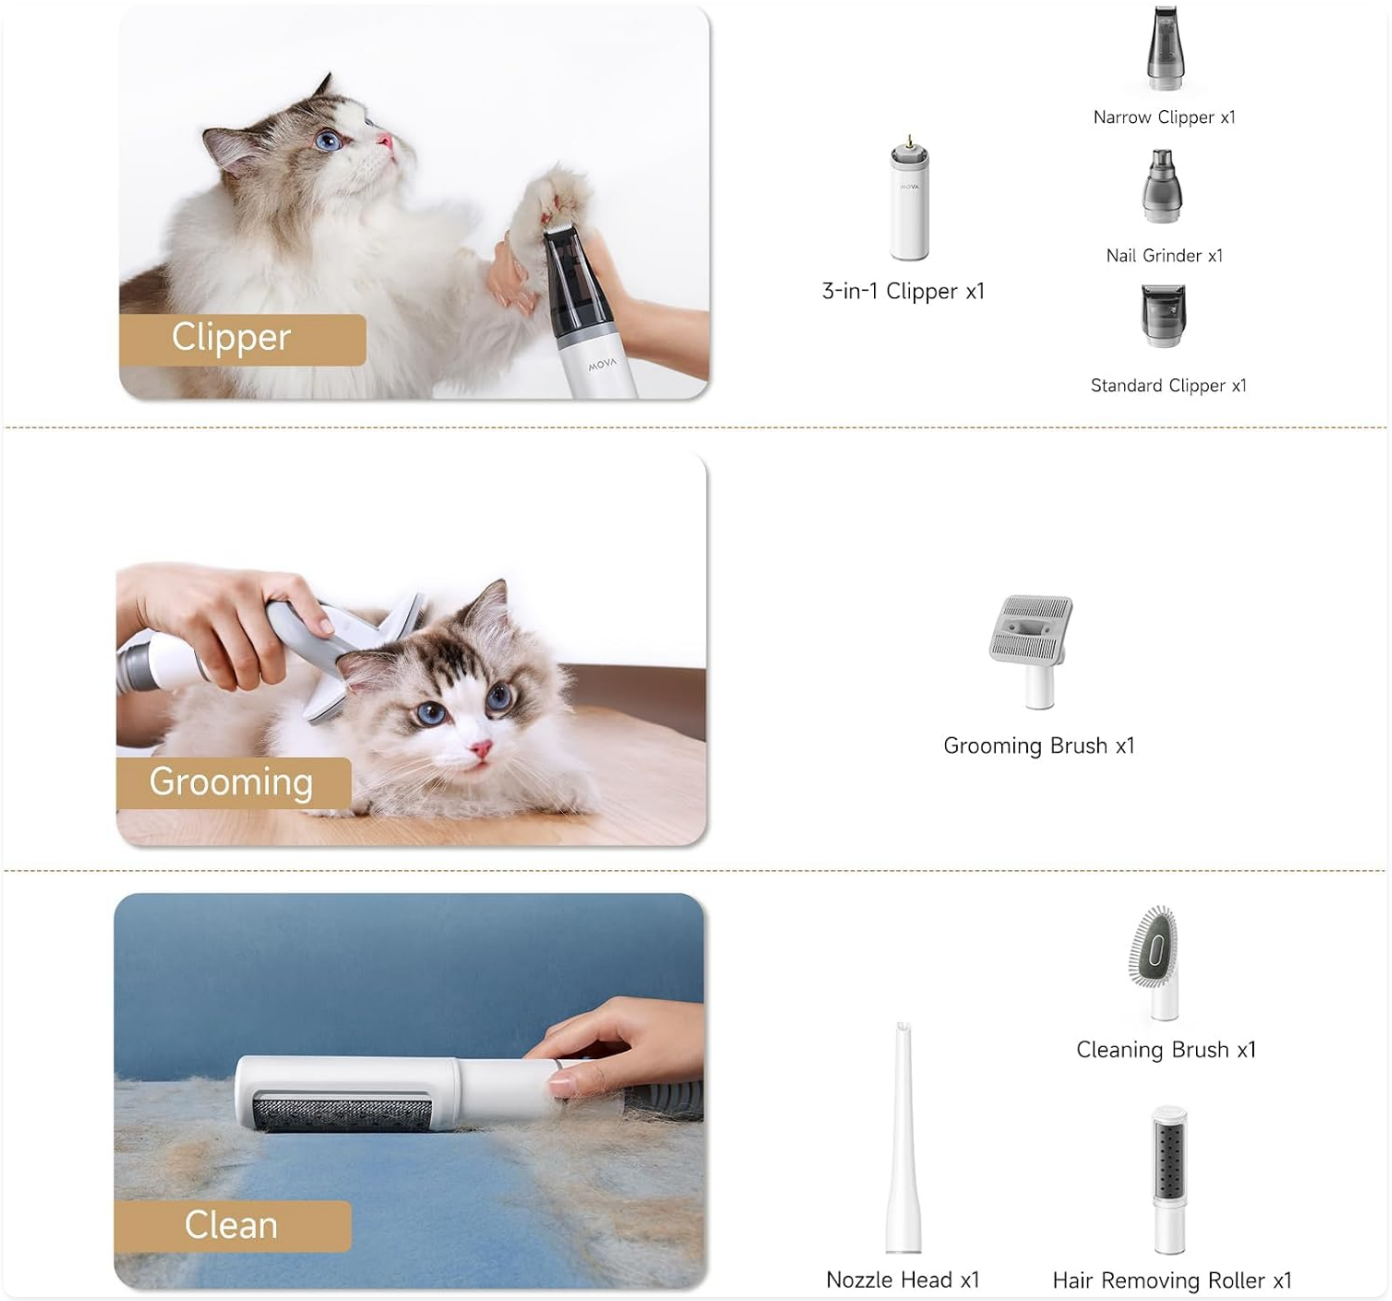


Image: A close-up of a cat's paw being groomed with the clipper attachment, highlighting the precision and ease of use.

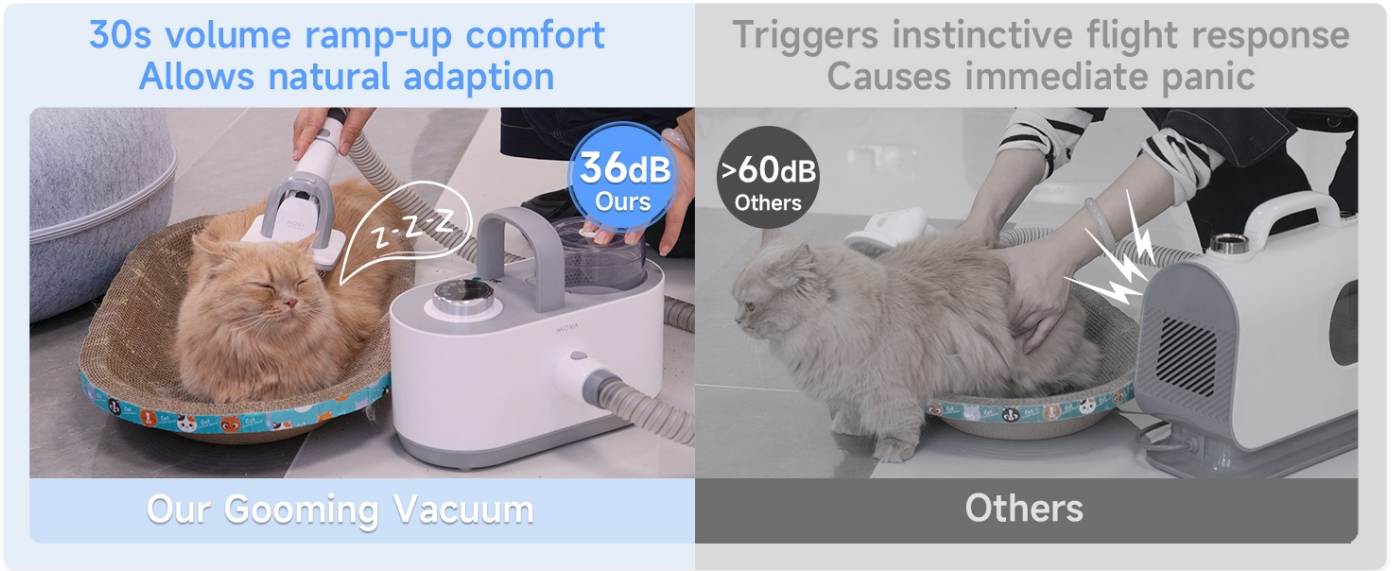


Image: A composite image demonstrating the use of the Standard Clipper for body hair, the Narrow Clipper for paw crevices, and the Nail Grinder for pet nails, all with integrated vacuuming.

3. Cleaning Tools

Beyond grooming, the Mova G1 Pro helps maintain a clean home with these tools:

- **Hair Removing Roller:** Use this tool on fabric surfaces like sofas and carpets to easily remove pet hair using electrostatic principles.
- **Cleaning Brush:** Ideal for cleaning surface particles and loose pet hair from various household surfaces.
- **Nozzle Head:** Perfect for sucking up dirt and debris from hard-to-reach areas, such as sofa corners and narrow gaps.

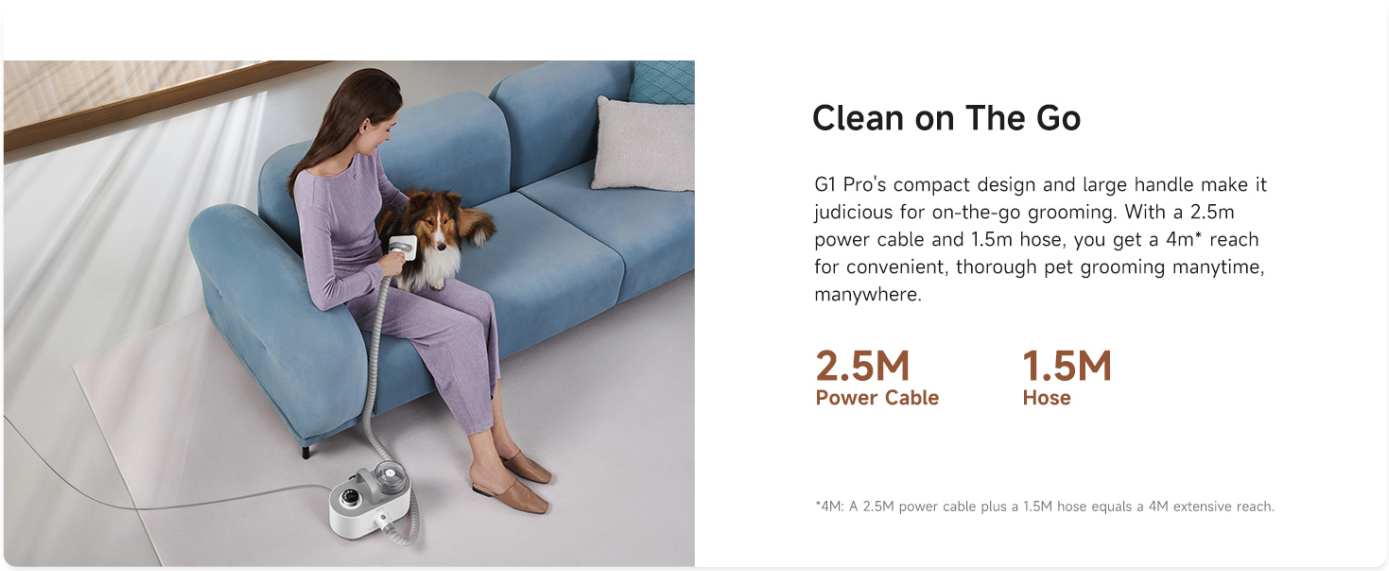


Image: A series of images demonstrating the Hair Removing Roller on a sofa, the Cleaning Brush on a carpet, and the Nozzle Head cleaning a tight space, showcasing the versatility of the cleaning tools.

Maintenance

Regular maintenance ensures optimal performance and longevity of your Mova G1 Pro:

1. **Emptying the Dust Cup:**
   The transparent dust cup allows you to easily monitor the fill level. When full, simply lift the dust cup from the main unit for effortless one-handed removal and dumping. Dispose of collected hair and debris responsibly.

Image: A user demonstrating the easy removal of the self-locking dust cup for emptying.

2. **Cleaning Attachments:** After each use, remove any trapped hair or debris from the grooming and cleaning attachments. Use a small brush or cloth to clean them thoroughly.
3. **Filter Cleaning:** Periodically check and clean the internal filters to maintain strong suction power. Refer to the filter compartment for specific cleaning instructions (usually rinsing with water and air-drying).
4. **Storage:** Store the main unit and all attachments in a clean, dry place, ideally using the provided tool rack for organization.

Troubleshooting

If you encounter issues with your Mova G1 Pro, try the following common troubleshooting steps:

- **No Power:**
  - Ensure the power cord is securely plugged into both the unit and the electrical outlet.
  - Check if the power outlet is functioning by plugging in another device.
- **Weak Suction:**
  - Check if the dust cup is full and needs emptying.

- Inspect the hose and attachments for any blockages (e.g., large clumps of hair).
- Ensure all connections (hose to unit, attachment to hose) are secure and airtight.
- Clean the internal filters as per maintenance instructions.

- **Unusual Noise:**
  - Turn off the unit and check for any foreign objects lodged in the hose or attachments.
  - Ensure the dust cup is correctly seated.

- **Clipper Not Cutting Effectively:**
  - Ensure the clipper blades are clean and free of hair buildup.
  - Check if the correct clipping comb is attached for the desired hair length.

If the issue persists after attempting these steps, please contact Mova customer support for further assistance.

Specifications

Feature	Detail
Brand	Mova
Model Number	G1 Pro
Product Dimensions	9.1 x 7.2 x 11.5 inches
Item Weight	4.1 Pounds
Suction Power	Peak 11kPa
Noise Level	As low as 36dB (startup), 55dB (operation)
Power Cable Length	2.5 meters
Hose Length	1.5 meters
Recommended Uses	Pet Grooming
Color	White
Country of Origin	China

Warranty and Support

Mova is committed to providing excellent customer service and product support:

- **Warranty:** The Mova G1 Pro comes with a warranty of up to 36 months. Please refer to your purchase documentation for specific warranty terms and conditions.
- **Money Back Service:** Enjoy a 30-day money-back service from the date of purchase.
- **Customer Support:** Mova offers a 24/7 rapid responding service team to assist with any inquiries or issues you may have. For support, please visit the official Mova website or contact the customer service number provided with your product.

Image: The Mova brand logo, representing the manufacturer.

© 2025 Mova. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question