K&F CONCEPT KF13.163

K&F CONCEPT Camera Sling Bag KF13.163 Instruction Manual

Model: KF13.163

Introduction

Thank you for choosing the K&F CONCEPT Camera Sling Bag, Model KF13.163. This manual provides essential information for the proper use and care of your camera bag. Designed for photographers, this bag offers organized storage and protection for DSLR, SLR, and Mirrorless cameras, along with lenses and accessories.

Product Features

- **Spacious Main Compartment:** Designed to hold 1 DSLR/SLR/Mirrorless camera body and 2-4 exchangeable lenses.
- **Modular Storage:** Includes 4 removable dividers (2 L-shaped, 2 short) for customizable organization of camera gear and personal items.
- **Durable Protection:** Constructed from high-performance PU material that is splash-proof, scratch-resistant, and abrasion-resistant. The interior features soft velvet lining for equipment protection.
- **Comfortable Carry:** Features a thickened and widened shoulder pad for enhanced comfort and breathability. The quick-adjust shoulder strap extends up to 55.5 inches (141 cm).
- **Multiple Pockets:** Includes 1 internal accessory pocket for batteries, 2 interior filter pockets, 2 side pockets for an umbrella or water bottle, and 1 rear zippered pocket for tablets up to 13 inches.
- **Tripod Holder:** External carry straps on the bottom allow for attachment of a small tripod or other items.



Image: Removable partitions for customized storage configurations within the main compartment.

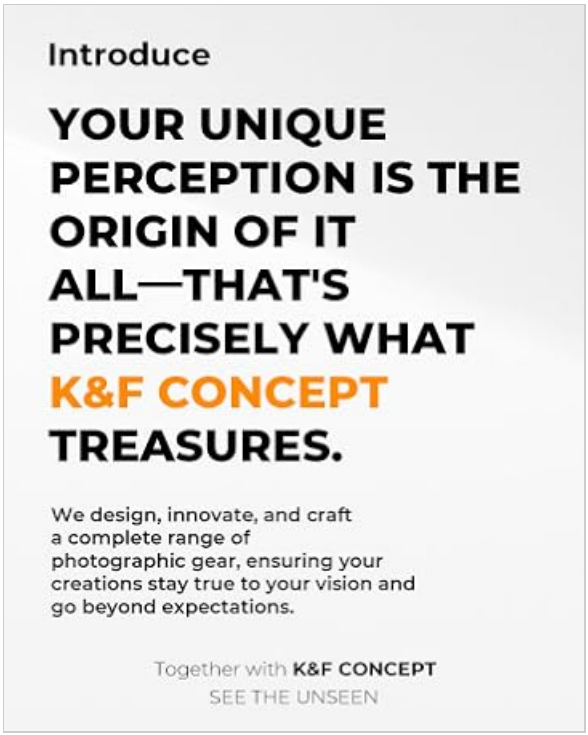


Image: The top large opening provides easy access to camera gear.



Image: Detail of the splash-proof fabric, showing water resistance.

Setup

Adjusting Internal Dividers

The bag includes four removable dividers (two L-shaped and two short) that attach with hook-and-loop fasteners. To customize your storage space:

1. Open the main compartment.
2. Detach the existing dividers by gently pulling them away from the interior lining.
3. Arrange the L-shaped and short dividers to create compartments that fit your camera body, lenses, and other accessories securely. Ensure the hook-and-loop fasteners are firmly pressed against the bag's interior for stability.



Image: Examples of internal divider configurations for various camera setups.

Adjusting the Shoulder Strap

The shoulder strap can be adjusted to your preferred length for comfortable carrying.

1. Locate the quick adjuster buckle on the shoulder strap.
2. Pull the strap through the buckle to lengthen or shorten it until the bag rests comfortably on your shoulder or across your body. The strap can extend up to 55.5 inches (141 cm).



Image: The adjustable shoulder strap with a wide design for comfort.

Operation

Loading Camera Gear

After configuring the internal dividers, place your camera body and lenses into the main compartment. Ensure all items are snug to prevent movement during transport.

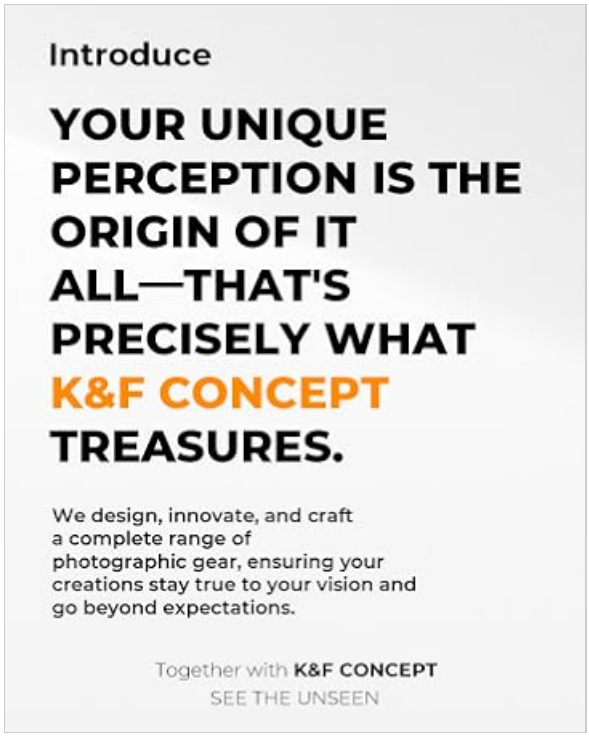


Image: Demonstrates placing a camera and lenses into the bag's main compartment.

Utilizing Accessory Pockets

- **Internal Accessory Pocket:** Use this pocket for smaller items like spare batteries, memory cards, or cleaning cloths.
- **Interior Filter Pockets:** Two dedicated pockets are available for camera filters.
- **Side Pockets:** The two external side pockets are suitable for carrying a compact umbrella or a small water bottle.
- **Rear Zippered Pocket:** This pocket can accommodate a tablet up to 13 inches, providing secure storage for your device.



Image: Various accessory pockets for organizing small items.



Image: A tablet being placed into the dedicated rear zippered compartment.

Attaching a Tripod

The bottom of the bag features external straps designed to secure a small, lightweight tripod. Ensure the tripod is fastened tightly to prevent it from shifting during movement.



Image: A tripod secured to the external straps on the underside of the bag.

Maintenance

Cleaning Instructions

- **Exterior:** Wipe the exterior surface with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners.
- **Interior:** Use a soft brush or vacuum cleaner to remove dust and debris from the interior. For spills, spot clean with a damp cloth.
- **Drying:** Allow the bag to air dry completely before storing or reusing. Do not machine wash or tumble dry.

While the bag features splash-proof fabric, it is not fully waterproof and does not include a rain cover. For heavy rain, additional protection is recommended.

Troubleshooting

Common Concerns

- **Bag feels too bulky:** Ensure internal dividers are arranged efficiently. The bag's structured design provides protection and may feel substantial.
- **Gear not fitting:** Re-adjust the removable dividers to optimize space for your specific camera and lenses. Refer to the internal dimensions in the specifications section.
- **Shoulder strap discomfort:** Adjust the strap length to distribute weight evenly. The thickened shoulder pad is designed for comfort; ensure it rests properly on your shoulder.

Specifications

Feature	Detail
Model Number	KF13.163

Feature	Detail
External Dimensions	13.38 x 5.7 x 9.84 inches (34 x 14.5 x 25 cm)
Internal Dimensions (Main Compartment)	12.2 x 4.92 x 9.25 inches (31 x 12.5 x 23.5 cm)
Item Weight	2.18 lbs (989 g)
Shoulder Strap Length	Adjustable, up to 55.5 inches (141 cm)
Tablet Compartment Capacity	Fits tablets up to 13 inches
Material	High-performance PU (splash-proof, scratch-resistant, abrasion-resistant) with soft velvet interior

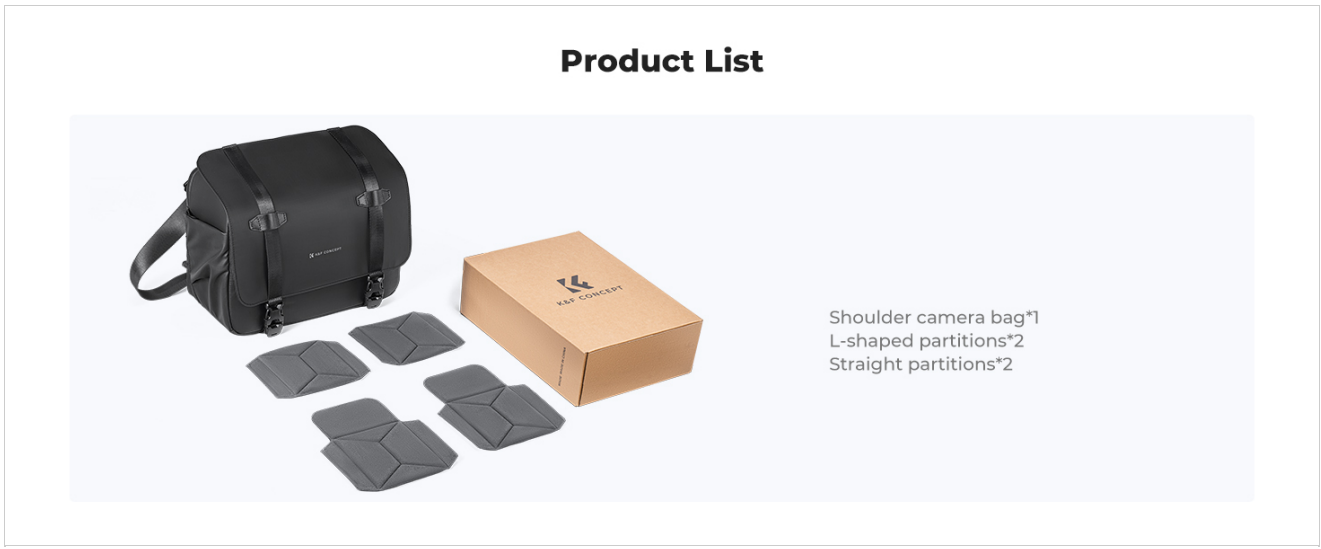


Image: Visual representation of the external and internal dimensions of the bag.

Warranty and Support

For warranty information, product support, or inquiries, please contact K&F CONCEPT directly through their official website or the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.
Manufacturer: K&F CONCEPT