Wisoqu Wisoqu2hds6n8ugw-8W

Wisoqu 4K Digital Camera User Manual

Model: Wisoqu2hds6n8ugw-8W

1. Introduction

Thank you for choosing the Wisoqu 4K Digital Camera. This manual provides essential information for the safe and effective operation of your camera. Please read it thoroughly before use and keep it for future reference.
This camera is designed for capturing high-quality photos and videos, featuring 4K video recording, 48-megapixel still images, a 2.8-inch HD screen, 16x digital zoom, autofocus, and a built-in flash.

2. Safety Information

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from extreme temperatures and direct sunlight.
- Use only the specified battery type and charger.
- Do not attempt to disassemble or modify the camera.
- Keep out of reach of small children.

3. Package Contents

Verify that all items are present in your package:

- Wisoqu 4K Digital Camera
- USB Cable
- Rechargeable Battery
- User Manual (this document)
- Wrist Strap (may vary by package)

4. Camera Overview

Familiarize yourself with the camera's components:



Figure 4.1: Front view of the Wisoqu 4K Digital Camera, showing the lens, flash, and 4K Digital Camera branding.



Figure 4.2: Back view of the Wisoqu 4K Digital Camera, highlighting the 2.8-inch HD display and control buttons (W/T zoom, OK, DISP, MENU).

Key Components:

- **Lens:** Captures images and videos.
- **Flash:** Provides illumination in low-light conditions.
- **2.8-inch HD Screen:** For framing shots, reviewing photos/videos, and navigating menus.
- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **Zoom Buttons (W/T):** Adjusts the 16x digital zoom.
- **OK Button:** Confirms selections in menus.
- **Menu Button:** Accesses camera settings.
- **DISP Button:** Changes display information.
- **USB Port:** For charging and data transfer.
- **Battery Compartment:** Holds the rechargeable battery.
- **Memory Card Slot:** For inserting a compatible memory card (not included).

5. Setup

5.1. Charging the Battery

1. Open the battery compartment cover.
2. Insert the rechargeable battery, ensuring correct polarity.
3. Close the battery compartment cover.
4. Connect the camera to a power source (e.g., computer USB port or USB wall adapter) using the provided USB cable. The charging indicator will illuminate.
5. Charging is complete when the indicator light changes or turns off.



Figure 5.1: Illustration of the camera's battery charging capability, indicating a high-capacity battery.

5.2. Inserting a Memory Card

A memory card (SD card, not included) is required to store photos and videos.

1. Ensure the camera is powered off.
2. Locate the memory card slot, usually near the battery compartment.
3. Insert the memory card with the metal contacts facing the correct direction (refer to the diagram near the slot). Push until it clicks into place.
4. To remove, gently push the card in again until it springs out.

6. Operating the Camera

6.1. Power On/Off

Press and hold the **Power Button** to turn the camera on or off.

6.2. Taking Photos (Photo Mode)

1. Turn on the camera. It will typically start in Photo Mode.
2. Frame your shot using the 2.8-inch HD screen.
3. Use the **W/T buttons** to adjust the 16x digital zoom.
4. Press the **Shutter Button** halfway down to activate autofocus. The focus frame will turn green when focus is achieved.
5. Press the **Shutter Button** fully down to take the picture.



Figure 6.1: The Wisoqu camera highlighting its 48-megapixel image resolution for detailed photos.



Figure 6.2: Visual demonstration of the camera's 16x digital zoom capability, showing a scene at 1x and then zoomed in at 16x.

6.3. Recording Videos (Video Mode)

1. Turn on the camera.
2. Switch to Video Mode (if not already in it, typically via a mode button or menu setting).
3. Frame your video using the screen.

4. Press the **Shutter Button** to start recording. A recording indicator (e.g., a red dot or "REC") will appear on the screen.
5. Press the **Shutter Button** again to stop recording.

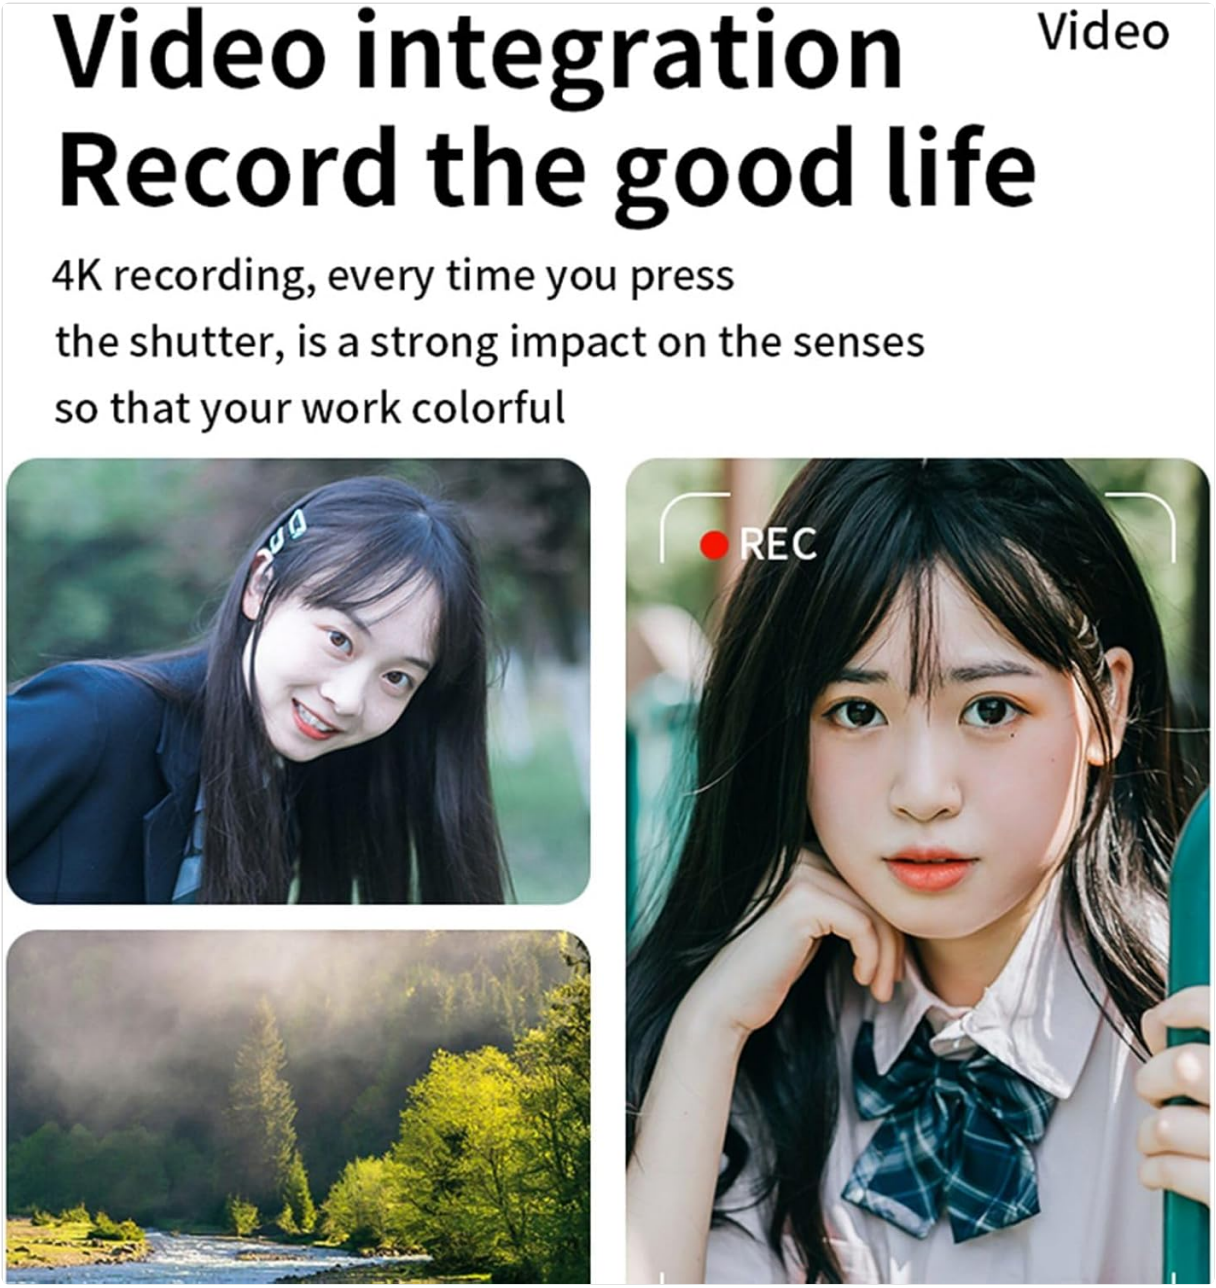


Figure 6.3: The camera's 4K video recording feature, illustrating its ability to capture high-resolution video.

6.4. Using the Flash

The camera has a built-in flash for low-light situations.

- In Photo Mode, press the dedicated **Flash Button** (if available) or navigate through the menu to select flash modes (Auto, Fill-in, Red-eye Reduction, Off).
- The flash will automatically fire in Auto mode when lighting conditions require it.



Figure 6.4: Demonstration of the camera's built-in flash, showing how it illuminates subjects in dark environments.

6.5. Playback Mode

To review your photos and videos:

1. Press the **Playback Button** (often indicated by a play icon) to enter Playback Mode.
2. Use the directional buttons to navigate through your captured media.
3. Press the **OK Button** to view a video or zoom into a photo.
4. Press the **Playback Button** again to exit Playback Mode.

6.6. Menu Settings

Press the **Menu Button** to access various camera settings, including:

- Image Resolution (e.g., 48MP, 30MP, 12MP)
- Video Resolution (e.g., 4K, 1080P, 720P)
- White Balance
- Exposure Compensation
- Date/Time Setting
- Language
- Format Memory Card

- Beauty Filter (if applicable, activate/deactivate)

Use the directional buttons to navigate and the **OK Button** to confirm selections.

7. Maintenance

7.1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Do not use abrasive materials.

7.2. Storage

- Store the camera in a cool, dry place away from direct sunlight.
- Remove the battery if the camera will not be used for an extended period.

8. Troubleshooting

Problem	Possible Cause / Solution
Camera does not power on.	Battery is depleted. Charge the battery. Battery is not inserted correctly. Reinsert the battery.
Cannot take photos/videos.	Memory card is full. Delete some files or insert a new card. Memory card is not inserted. Insert a memory card. Memory card is not formatted. Format the card via the camera menu (this will erase all data).
Images are blurry.	Lens is dirty. Clean the lens. Subject is too close or too far for autofocus. Camera shake. Hold the camera steady.
Flash is not working.	Flash mode is set to "Off". Change flash mode in settings. Battery is low. Charge the battery.
Screen is blank.	Camera is off. Turn on the camera. Battery is low. Charge the battery. DISP button pressed. Press DISP again to restore display.

9. Specifications

Feature	Detail
Brand	Wisoqu
Model Number	Wisoqu2hds6n8ugw-8W
Photo Sensor Resolution	48 MP
Maximum Image Size	48 MP
Video Resolution	4K (specific frame rates may vary)
Screen Size	2.8 Inches
Digital Zoom	16x
Autofocus	Yes

Feature	Detail
Image Stabilization	Digital
Built-in Flash	Yes
Battery Type	Rechargeable (included)
Dimensions (approx.)	12cm (4.7in) x 8cm (3.1in) (based on image)



Figure 9.1: Approximate dimensions of the Wisoqu 4K Digital Camera.

10. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Wisoqu customer service through their official channels. Keep your proof of purchase for warranty claims.

© 2025 Wisoqu. All rights reserved.