Coleshome 40 Inches Black

Coleshome 40 Inch L Shaped Gaming Desk User Manual

Model: 40 Inches Black
Brand: Coleshome

1. Introduction

Thank you for choosing the Coleshome 40 Inch L Shaped Gaming Desk. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new desk. Designed for versatility, this desk is suitable for gaming, studying, or general home office use, offering ample space and integrated features for an organized and efficient workspace.



Image 1.1: Overview of the Coleshome 40 Inch L Shaped Gaming Desk.

This desk features a robust L-shaped design, integrated power solutions, smart storage options, and customizable LED lighting to enhance your environment.

2. Product Features

- **Power Outlets & Charging Ports:** Equipped with 3 standard power outlets (125V/12A) and 2 USB charging ports (5V/2A) for convenient access to power for your electronic devices.
- **Large Storage Capacity with Drawers:** Includes two easy-to-assemble fabric drawers, ideal for organizing documents, office supplies, and gaming accessories, helping to maintain a clutter-free desktop.
- **Double-tier Storage Shelves:** Features integrated shelves that can function as a two-tiered bookshelf or general organizer, providing additional storage space for various items.
- **Customizable LED Lighting:** An RGB light strip is located under the monitor shelf, offering 6 brightness levels and 10 color variations to personalize your workspace ambiance.
- **Reversible Design:** The L-shaped configuration can be installed in two directions, allowing for flexible placement to suit your room layout.
- **Adjustable Monitor Stand:** The monitor shelf is adjustable to different heights (3.9", 5.2", 6.5") to help maintain ergonomic

posture and extend your workspace.

- **Adjustable Shelf Heights:** The middle shelf of the side storage unit can be adjusted to accommodate a computer tower or other taller items.



Image 2.1: The desk integrated into a gaming setup, showcasing its features.

3. Setup and Assembly

The Coleshome L Shaped Gaming Desk is designed for straightforward assembly. Please follow the included instructions carefully. All necessary tools and hardware are provided.

3.1. Before You Begin

- Unpack all components and verify against the parts list in your assembly guide.
- Ensure you have adequate space for assembly.
- Keep small parts out of reach of children.

3.2. Reversible Design

The L-shaped section of the desk can be configured on either the left or right side during assembly to best fit your room's layout. Refer to the specific steps in your assembly manual for details on how to achieve your desired orientation.

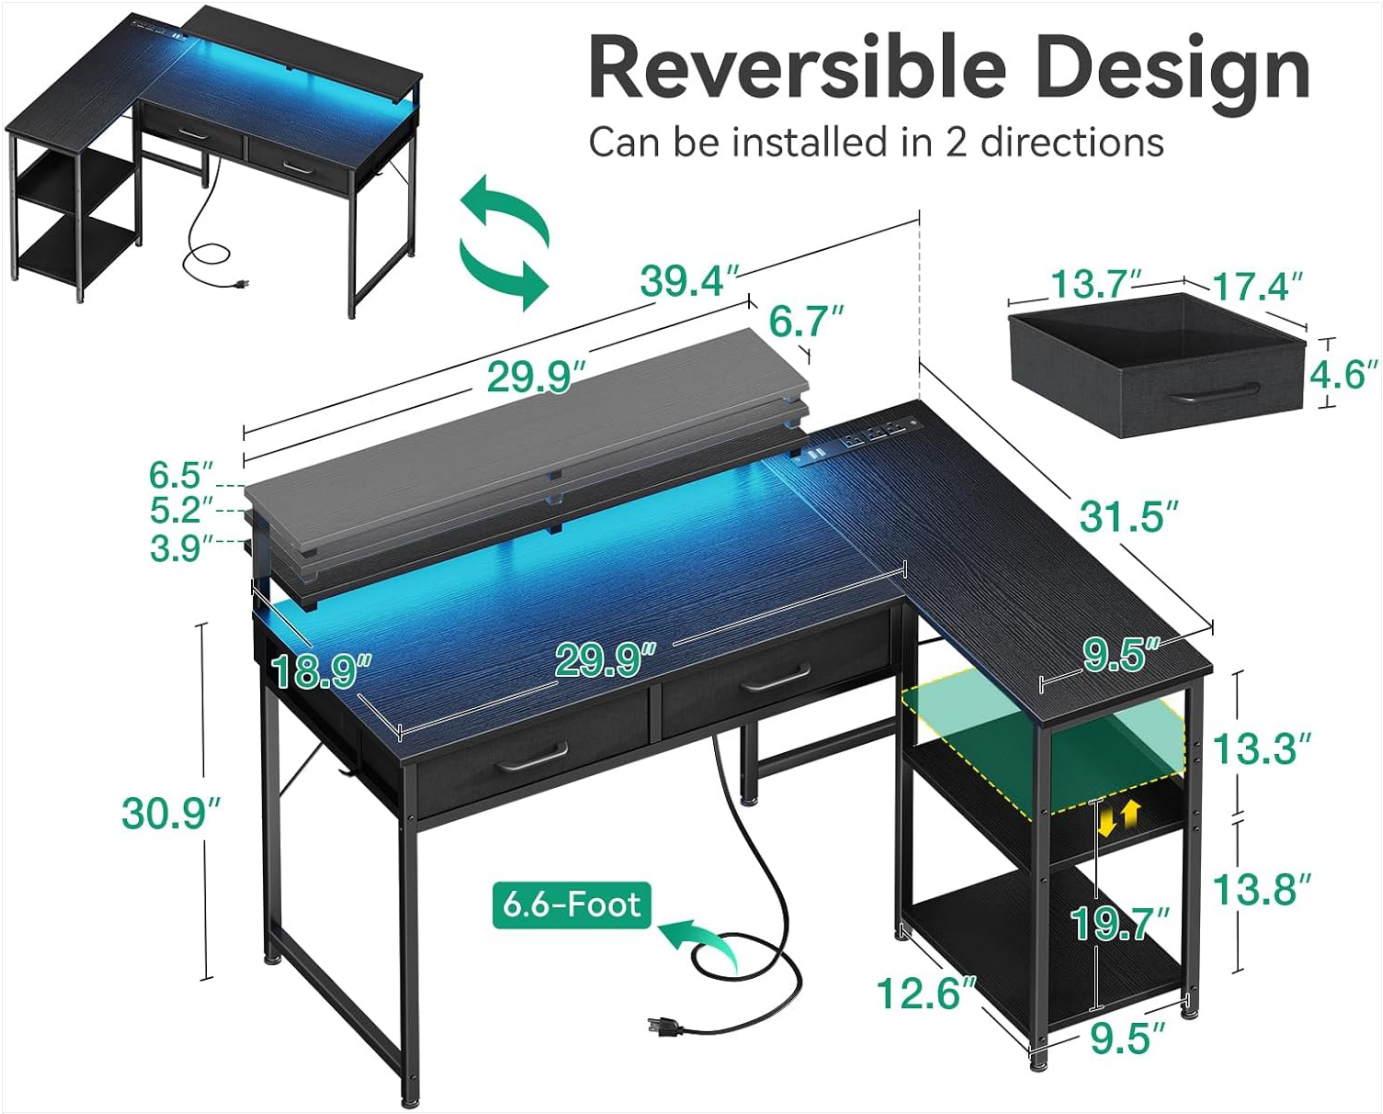


Image 3.1: Illustration of the desk's reversible design and key dimensions.

3.3. Assembly Steps

Follow the step-by-step diagrams and instructions provided in the separate assembly manual. It is recommended to have two people for certain steps to ensure stability and ease of construction.

4. Operating Instructions

4.1. Power Outlets and USB Ports

The desk includes a built-in power strip with 3 AC outlets and 2 USB charging ports. Simply plug the desk's main power cord (6.6 feet) into a standard wall outlet. You can then connect your devices directly to the integrated outlets and USB ports for convenient power access.



Image 4.1: Detail of the recessed power strip for easy device charging.

4.2. Customizable LED Lighting

The RGB LED light strip under the monitor shelf can be controlled to change colors and brightness. Locate the control panel or remote (if included) to adjust settings. Experiment with the 6 brightness levels and 10 color variations to create your desired ambiance.



Image 4.2: The LED light strip offering customizable lighting effects.

4.3. Adjustable Storage Shelves

The double-tier storage shelves on the side of the desk feature an adjustable middle shelf. This allows you to customize the height to accommodate taller items like a computer tower or larger books. To adjust, carefully remove the shelf and re-insert it into the desired slot.



Image 4.3: Demonstrating the adjustable shelf heights for versatile storage.

5. Maintenance

Proper care will extend the life and appearance of your Coleshome desk.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the wood grain finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the surface.
- **Heat and Moisture:** Avoid placing hot items directly on the desk surface. Use coasters for drinks to prevent water rings.
- **Drawers:** The fabric drawers can be spot cleaned with a mild detergent if necessary. Ensure they are completely dry before re-inserting.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure the desk remains stable.

6. Troubleshooting

If you encounter any issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws are securely tightened. Use shims under desk feet if the floor is uneven.

Problem	Possible Cause	Solution
LED lights are not working.	Power connection issue; faulty strip.	Check if the LED strip is properly connected to its power source. Ensure the main desk power is plugged in. If issues persist, contact customer service.
Power outlets/USB ports not functioning.	Desk not plugged in; circuit overload.	Verify the desk's main power cord is securely plugged into a working wall outlet. Avoid overloading the power strip with too many high-power devices.
Drawers do not slide smoothly.	Improper assembly; obstruction.	Ensure the drawer rails are correctly installed and aligned. Check for any obstructions inside the drawer compartment.

If you encounter a problem not listed here or if the suggested solutions do not resolve the issue, please contact Coleshome Customer Service for further assistance.

7. Specifications

Attribute	Detail
Brand	Coleshome
Model	40 Inches Black
Product Dimensions (D x W x H)	31.5"D x 41.7"W x 36.5"H
Color	Black
Style	Modern
Base Material	Metal
Top Material Type	Engineered Wood
Finish Type	Wood Grain
Number of Drawers	2 (fabric drawers)
Number of Shelves	2 (double-tiered storage)
Power Outlets	3 AC Outlets (125V/12A)
USB Ports	2 USB Ports (5V/2A)
Power Cord Length	6.6 Foot
LED Lighting	RGB LED Light Strip (6 brightness, 10 colors)
Assembly Required	Yes

8. Warranty and Support

The Coleshome 40 Inch L Shaped Gaming Desk comes with a **Limited Warranty**. For specific details regarding the warranty period and coverage, please refer to the warranty information provided with your purchase or contact Coleshome Customer Service.

Coleshome Customer Service offers 24-hour online professional pre-sale and after-sale support. If you have any questions, require assistance with assembly, or need troubleshooting help, please do not hesitate to reach out to our support team.

For support, please visit the official Coleshome website or contact us through the platform where you purchased the product.

© 2025 Coleshome. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question