TIMEURE 2309M

TIMEURE Men's Atomic Talking Watch 2309M Instruction Manual

Model: 2309M

Introduction

The TIMEURE 2309M Atomic Talking Watch is designed for individuals who benefit from audible time, date, and day announcements, particularly the visually impaired and elderly. This watch combines a classic analog display with advanced features for accurate timekeeping and convenience.

Key features include:

- Automatic time adjustment via atomic clock signals.
- Audible announcement of time, day, and date.
- Alarm clock function.
- Large, easy-to-read numbers on the watch face.

Setup

Initial Activation

The watch comes with a CR2032 battery installed, typically in a sleep mode to preserve power. Follow the instructions provided in the watch packaging to wake up the watch. Once activated, the watch will attempt to synchronize with the atomic clock signal.

Automatic Time Calibration

The TIMEURE 2309M watch is designed to automatically set its time by receiving signals from a national atomic clock server (e.g., in Colorado, USA). For optimal reception, place the watch near a window, facing towards the general direction of the signal source, especially overnight. The watch typically synchronizes at 2 AM.

Important: Ensure your time zone is correctly set for accurate automatic calibration. Refer to the operating instructions for time zone adjustment.

Manual Time Setting

If automatic synchronization is unsuccessful or if you are outside the atomic signal range, you may need to set the time manually. The watch has a crown (middle button) for setting the analog time and separate controls for setting the talking time. While instructions often advise against pulling the crown, it may be necessary to adjust the analog hands if they do not match the talking time after automatic synchronization attempts.

Refer to the detailed instructions included in your watch packaging for specific steps on manual time and talking time adjustment.



Image: Front view of the TIMEURE 2309M watch, showing the analog display with large, clear numbers and the three control buttons on the right side of the casing.

Operating Instructions

Announcing Time, Day, and Date

To hear the current time announced, press the button located next to the '2' position on the watch face (typically the top right button). Pressing it again immediately after the time announcement will typically announce the current day of the week and date.

Alarm Setting

The watch includes an alarm function. Refer to the specific instructions in your watch's manual for detailed steps on how to set, activate, and deactivate the alarm. This usually involves a combination of button presses.

Chime Feature

Some models may include an hourly chime feature. Consult your watch's manual to enable or disable this function if desired.

Maintenance

Battery Replacement

The TIMEURE 2309M watch uses a CR2032 battery. When the voice announcement becomes faint or the watch stops functioning, it is likely time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and function. If replacing yourself, use caution to avoid damaging internal components.

Cleaning

Clean the watch casing and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch. Avoid using harsh chemicals or abrasive materials.

Water Resistance

This watch is NOT WATER RESISTANT. Avoid exposure to water, including showering, swimming, heavy rain, or submersion. Water exposure will damage the watch and void the warranty.

Band Adjustment

The watch may come with either a metal expansion band or a leather strap. Instructions for adjusting the metal expansion band are typically not included, but it can often be adjusted by removing links or by a jeweler. The leather strap features a standard buckle closure for adjustment.



Image: The TIMEURE 2309M watch with its metal expansion band, alongside a visual representation of how the expansion band can be adjusted by adding or removing links.

Troubleshooting

- **Watch is an hour off / Daylight Saving Time:**The automatic synchronization may not always correctly account for Daylight Saving Time changes or specific time zones. If the watch is consistently an hour off, manually adjust the time as per the manual's instructions. You may need to set both the analog hands and the talking time separately.
- **Automatic Sync Failure:** If the watch fails to synchronize with the atomic clock, ensure it is placed in an area with good signal reception, away from electronic interference. Try leaving it near a window overnight. If issues persist, manual time setting is an alternative.
- **Voice is unclear or too quiet:** This may indicate a low battery. Replace the CR2032 battery. If the issue persists after battery replacement, contact support.
- **Difficulty pressing buttons:** The buttons may require a firm press. Ensure you are pressing the correct button for the desired function.

- **Watch stopped working after water exposure:** As the watch is not water resistant, any exposure to water will likely cause irreparable damage.

Specifications

Feature	Detail
Model Number	2309M (TU2309M)
Display Type	Analog
Watch Movement Type	Automatic
Power Source	Battery Powered (1 CR2032 included)
Case Material	Stainless Steel
Band Material Type	Leather (also available with Stainless Steel Bracelet)
Crystal	Mineral Glass
Band Width	20 Millimeters
Water Resistance Level	Not Water Resistant
Additional Features	Alarm, Automatic Self Wind, Easy Reader, Talking Time/Date/Day
Dial Color	White
Shape	Round
Manufacturer	TIMEURE

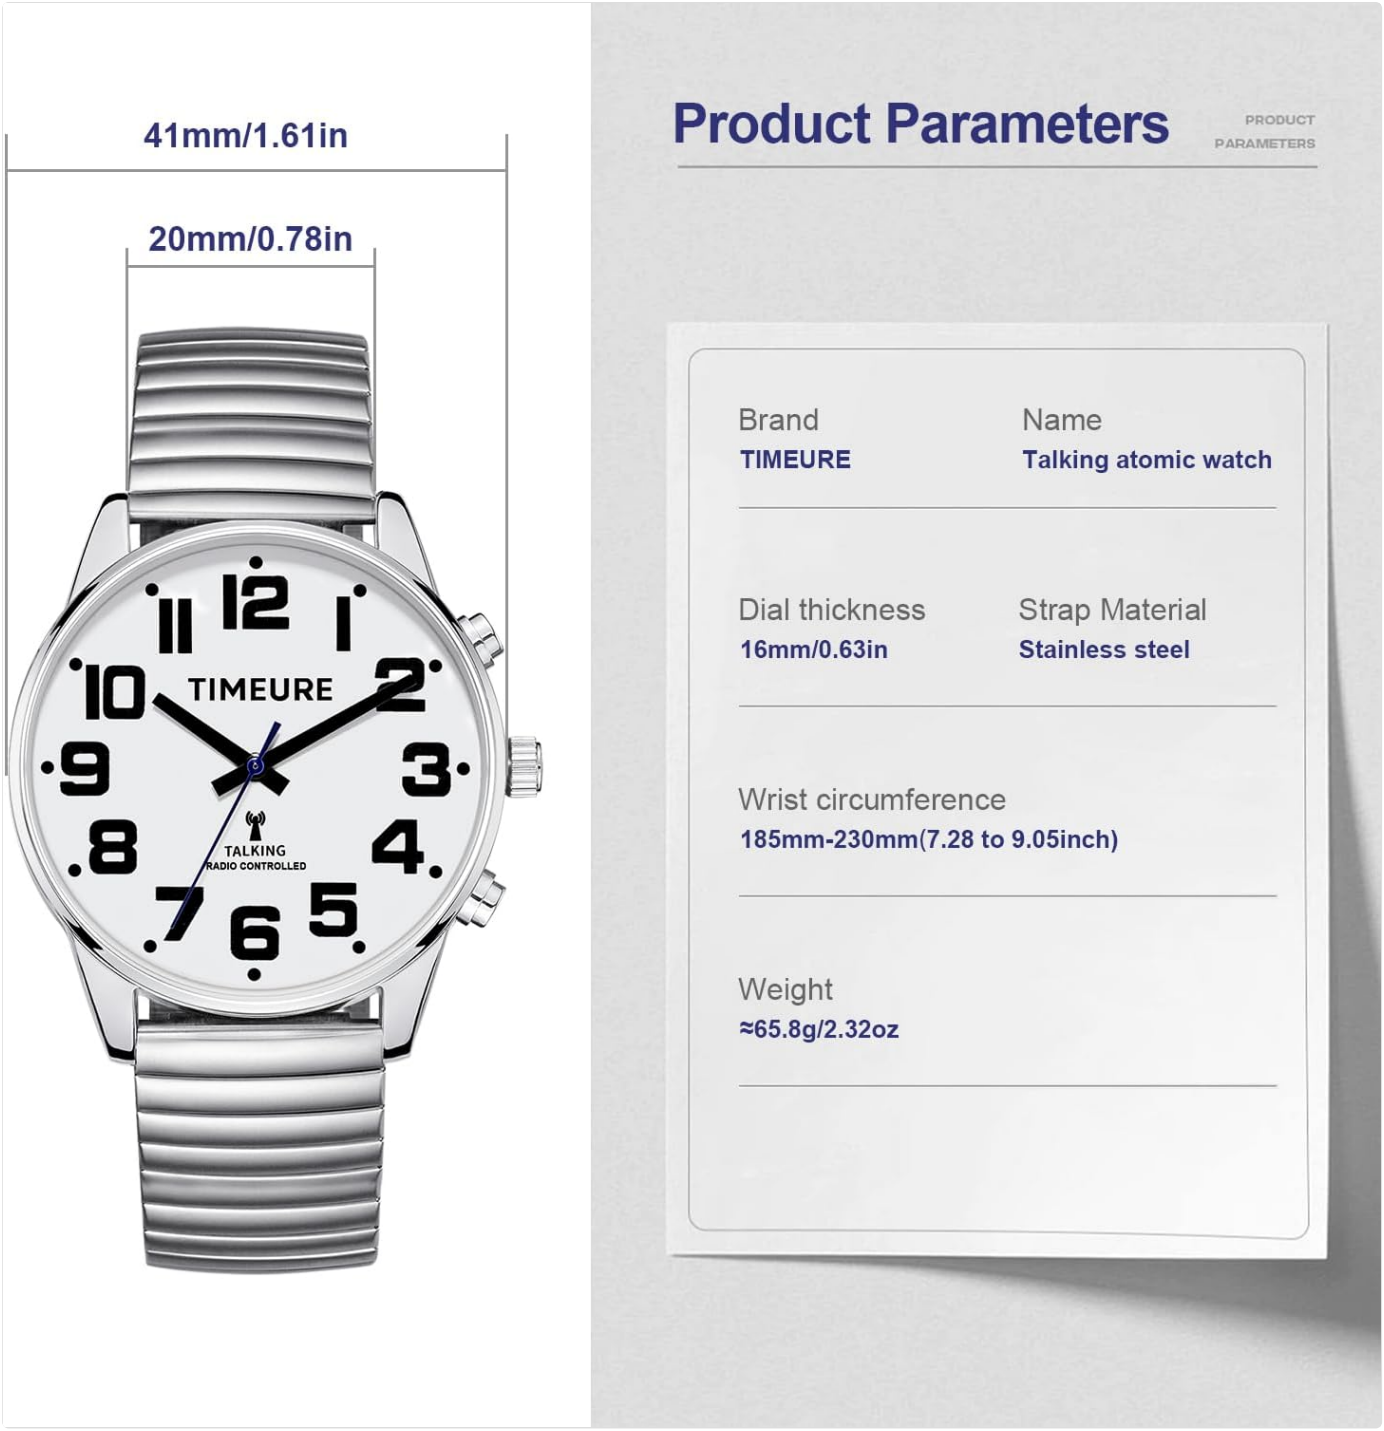


Image: Product parameters diagram for the TIMEURE 2309M watch, detailing dimensions and materials.

Warranty

The TIMEURE 2309M Atomic Talking Watch comes with a Limited Warranty. For specific details regarding the terms, duration, and coverage of your warranty, please refer to the warranty information provided in your product packaging or contact the manufacturer directly.

Support

For further assistance, troubleshooting not covered in this manual, or inquiries regarding your TIMEURE 2309M watch, please refer to the contact information provided with your purchase or visit the official TIMEURE store page on Amazon.

© 2024 TIMEURE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question