Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ROCAM CR1025pro-CA-Black

ROCAM Alarm Clock Radio User Manual

Model: CR1025pro-CA-Black

Introduction

This manual provides detailed instructions for the ROCAM Alarm Clock Radio, a versatile device combining an FM radio, Bluetooth speaker, and alarm clock with convenient features like a nightlight and charging ports. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience with the product.

Product Overview

The ROCAM Alarm Clock Radio is designed for ease of use and functionality, featuring a clear digital display, intuitive controls, and a modern fabric design.

Package Contents

- ROCAM Alarm Clock Radio
- Power Adapter
- User Manual

Controls and Display

Familiarize yourself with the buttons and display indicators.



Image: Front view of the ROCAM Alarm Clock Radio, showing the large digital time display, Bluetooth and DST indicators, and top-mounted control buttons including Sleep Timer, Alarm, Time/DST, Dimmer/DST, Preset/Pair, Play, Power/Mode, and Scan, along with two rotary knobs.



Image: The alarm clock radio on a wooden surface, with text overlays indicating "5.0 Bluetooth", "Buzzer/FM", "FM 87.5-108MHz", and "Warm Night Light", illustrating its core functionalities.

Setup

Power Connection

Connect the provided power adapter to the DC IN port on the back of the alarm clock and plug the other end into a standard wall outlet. The display will light up.

Note: The included CR2032 battery provides backup for time and settings during power outages but does not power the clock for normal operation. The clock requires continuous plug-in power.



Image: Close-up view of the back of the alarm clock, showing the USB-A and USB-C charging ports, and the power input.

Setting the Time

1. Press and hold the **Time/DST** button. The hour digits will start flashing.
2. Rotate the **Time/Volume Knob** (right knob) to adjust the hour.
3. Press the **Time/DST** button again to confirm the hour and move to minute adjustment.
4. Rotate the **Time/Volume Knob** to adjust the minutes.
5. Press the **Time/DST** button one more time to save the time setting.

12/24-Hour Format

To switch between 12-hour and 24-hour formats, briefly press the**Time/DST** button.



Image: Three views of the alarm clock display showing time in 12-hour (with AM/PM), 24-hour, and DST formats.

Daylight Saving Time (DST)

To activate or deactivate DST, press the **Dimmer/DST** button once. The time will adjust by one hour forward or backward, and the "DST" indicator will appear or disappear.

Operating Instructions

Alarm Setting

1. Press and hold the **Alarm** button. The alarm hour digits will flash.
2. Rotate the **Time/Volume Knob** to set the alarm hour.
3. Press the **Alarm** button again to confirm the hour and move to minute adjustment.
4. Rotate the **Time/Volume Knob** to set the alarm minutes.
5. Press the **Alarm** button again to select the alarm source: **FM Radio** or **Buzzer**.
6. If FM Radio is selected, rotate the **Time/Volume Knob** to choose a preset radio station or adjust the volume.
7. Press the **Alarm** button one more time to save the alarm setting. The alarm icon will appear on the display.

Snooze Function

When the alarm sounds, press the **SNOOZE/LIGHT** button to activate snooze. The alarm will pause for 9 minutes and then sound again.

Disabling the Alarm

To turn off the alarm completely, press any button other than **SNOOZE/LIGHT** when the alarm is sounding. To disable the alarm for the next day, press the **Alarm** button when the alarm is not sounding until the alarm icon disappears from the display.

FM Radio

The alarm clock radio can easily search and save FM stations.

1. Press the **Power/Mode** button to switch to FM Radio mode. The frequency will be displayed.
2. **Auto Scan:** Press and hold the **Scan** button to automatically scan and save up to 20 preset stations (P01-P20).
3. **Manual Tuning:** Briefly press the **Scan** button to manually tune to the next available station. Rotate the **Tune Knob** (left knob) for fine-tuning.
4. **Accessing Presets:** Briefly press the **Preset/Pair** button to cycle through saved preset stations.

5. **Volume Adjustment:** Rotate the **Time/Volume Knob** to adjust the radio volume.



Image: The alarm clock displaying a radio frequency, with icons indicating FM Radio, Auto/Manual Search, Preset 20 Radio Stations, and FM Signal Improve Antenna.



Image: The alarm clock radio on a coffee table in a living room, with musical notes emanating from it, illustrating its use for relaxing with FM radio.

Bluetooth Speaker

The alarm clock features Bluetooth 5.0 for wireless audio streaming.

1. Press the **Power/Mode** button to switch to Bluetooth mode. The display will show "bt" and the Bluetooth icon will flash, indicating it's ready for pairing.
2. On your mobile device (phone, tablet, computer), enable Bluetooth and search for "CR1025" or "ROCAM".
3. Select "CR1025" or "ROCAM" to pair. Once connected, the Bluetooth icon on the clock's display will stop flashing and remain solid.
4. You can now play audio from your device through the alarm clock's speaker.
5. **Volume Adjustment:** Rotate the **Time/Volume Knob** to adjust the volume (16 levels available).
6. **Playback Control:** Use the **Play** button to play/pause audio. Use the **Preset/Pair** and **Scan** buttons for previous/next track (if supported by your device).



Image: The alarm clock displaying "bt" with a smartphone next to it, showing a music player interface, demonstrating Bluetooth connectivity for music enjoyment.

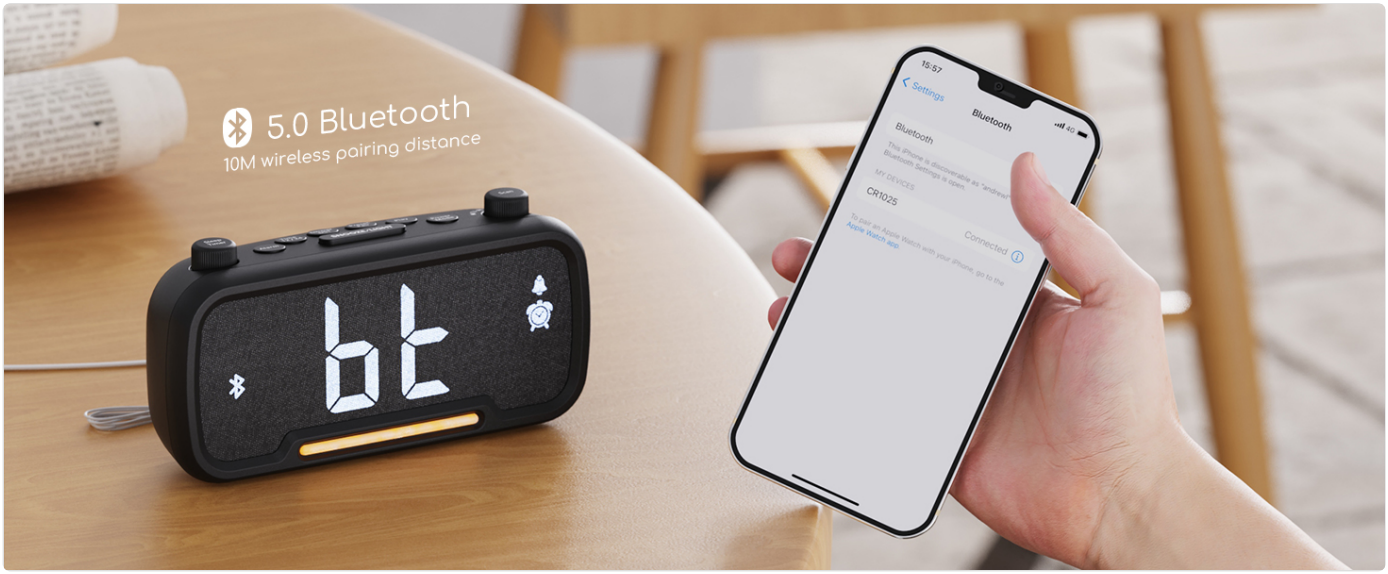


Image: The alarm clock displaying "bt" next to a smartphone showing its Bluetooth settings menu, with "CR1025" listed as a connected device, illustrating the pairing process.

Sleep Timer

The sleep timer allows you to fall asleep to the radio, which will automatically turn off after a set duration.

1. While in FM Radio mode, press the**Sleep Timer** button repeatedly to cycle through available sleep timer durations (e.g., 10, 20, 30, 60, 90 minutes, or OFF).
2. The selected duration will briefly appear on the display. The radio will automatically turn off after the set time.

Nightlight

The alarm clock features a warm nightlight at its base.

To turn the nightlight ON or OFF, briefly press the**SNOOZE/LIGHT** button when the alarm is not sounding.



Image: The alarm clock on a bedside table with its warm nightlight illuminated, creating a pleasant ambiance in a bedroom setting.

Display Brightness

The display brightness is adjustable to suit your preference.

Briefly press the **Dimmer**/**DST** button repeatedly to cycle through 5 brightness levels (from 5% to 100%).



Image: The alarm clock display shown at various brightness levels (5%, 30%, 55%, 80%, 100%), demonstrating the 5-level dimming feature.

Charging Ports

The alarm clock is equipped with USB-A and Type-C ports for charging external devices.

Simply connect your device's charging cable to the appropriate port on the back of the alarm clock.



Image: The alarm clock on a desk with a smartphone connected to its USB-C port and wireless earbuds connected to its USB-A port, illustrating the dual charging capabilities.

Maintenance

Cleaning

To clean the alarm clock, gently wipe the surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.

Storage

If storing the device for an extended period, disconnect it from the power outlet. Store in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Clock display is off.	No power connection.	Ensure the power adapter is securely plugged into the clock and a working wall outlet.
Alarm does not sound.	Alarm not set or disabled. Volume too low.	Verify alarm is set and the alarm icon is visible. Increase alarm volume.
Poor FM radio reception.	Weak signal.	Extend the FM antenna fully. Reposition the clock for better reception.
Cannot pair Bluetooth.	Bluetooth not in pairing mode. Device too far.	Ensure the clock is in Bluetooth mode ("bt" flashing). Move your device closer to the clock (within 10 meters).
Display is too bright at night.	Brightness level is too high.	Press the **Dimmer/DST** button repeatedly to reduce brightness to the lowest setting (5%).

Specifications

- **Brand:** ROCAM

- **Model:** CR1025pro-CA-Black
- **Color:** Black
- **Display Type:** Digital
- **Special Features:** Night Light, Sleep Timer, Bluetooth, FM Radio, Charging Ports (USB-A, Type-C)
- **Product Dimensions:** 3.31"W x 6.61"H
- **Power Source:** Corded Electric
- **Frame Material:** Fabric
- **Battery Backup:** 1 CR2032 battery (included)
- **Item Weight:** 11.3 ounces
- **FM Frequency Range:** 87.5MHz - 108.0MHz
- **Bluetooth Version:** 5.0

Warranty and Support

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official ROCAM website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DGQF7H4T

More documents and user manuals: **https://manuals.plus/**