Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tefal FV6672G0

Tefal Freemove Power FV6672G0 Cordless Steam Iron User Manual

Model: FV6672G0

1. Introduction

Thank you for choosing the Tefal Freemove Power FV6672G0 Cordless Steam Iron. This innovative iron offers unparalleled freedom of movement and powerful steam performance for efficient garment care. Designed for convenience and safety, its cordless operation and rapid recharge time make ironing a seamless task. Please read this manual carefully before first use to ensure proper operation, maintenance, and safety.



Image: The Tefal Freemove Power FV6672G0 Cordless Steam Iron with its charging base.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the outlet. Never pull on the cord to disconnect from the outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside

down – there may be hot water in the reservoir.

- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

3. Product Overview

Familiarize yourself with the components of your Tefal Freemove Power FV6672G0 iron:

1. Water filling inlet
2. Spray nozzle
3. Steam control (Dry/Steam)
4. Temperature control dial
5. Steam boost button
6. Spray button
7. Handle
8. Water tank
9. Ceramic soleplate
10. Charging base with power cord
11. Indicator light (on iron and base)



Image: Top-down view of the iron highlighting the easy-gliding ceramic soleplate.

4. Setup

4.1 Unpacking

Carefully remove the iron and all accessories from the packaging. Retain the packaging for future storage or transport if needed. Ensure all components listed in the "Product Overview" section are present and undamaged.

4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the mains and has cooled down.
2. Open the water filling inlet.
3. Fill the water tank with clean tap water up to the 'MAX' level indicator. Do not overfill.
4. Close the water filling inlet securely.

Note: For optimal performance and to prolong the life of your iron, it is recommended to use tap water. If your water is

very hard, you can mix 50% tap water with 50% distilled water.

4.3 Placing on the Charging Base

Place the charging base on a stable, flat surface, preferably near your ironing board. Plug the power cord of the charging base into a suitable electrical outlet. The iron is designed to rest securely on its horizontal base, providing stability and ease of use.



Image: The iron resting on its stable and secure charging base.

5. Operating Instructions

5.1 Initial Heating and Temperature Selection

1. Place the iron on its charging base. The indicator light on the base will illuminate.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the fabric care labels on your garments.

3. The iron will heat up rapidly (approximately 30 seconds). The indicator light on the iron will turn off when the selected temperature is reached.

5.2 Cordless Ironing and Recharge

The Freemove Power iron offers cordless convenience. Once heated, lift the iron from its base to begin ironing. You have approximately 35 seconds of ironing time off the base before it needs to be recharged. When the iron needs recharging, simply place it back on the base. It recharges super fast in just 11 seconds.



Image: Demonstrating the cordless convenience of the iron during use.

5.3 Steam Functions

- **Continuous Steam:** For continuous steam, ensure the temperature dial is set to a steam-compatible setting (usually indicated by steam symbols). Adjust the steam control slider to the desired steam output (up to 40 g/min).
- **Steam Boost:** For stubborn creases, press the steam boost button. This delivers an extra burst of steam (up to 220 g/min). Wait a few seconds between each boost to allow the steam chamber to refill.
- **Spray Function:** Press the spray button to lightly moisten fabric for easier ironing.



Image: The iron demonstrating its powerful steam output.

5.4 Anti-Drip System

The iron is equipped with an anti-drip system that prevents water from dripping onto your garments, especially when ironing at lower temperatures. This ensures clean and spotless results.

5.5 Auto-Off Safety Feature

For your safety and energy saving, the iron features an automatic shut-off function. If left unattended on its base for an extended period, or if left horizontally on the soleplate, it will automatically turn off. To reactivate, simply pick up the iron or place it back on the base.

6. Maintenance and Cleaning

6.1 After Each Use

1. Unplug the iron from the electrical outlet.

2. Allow the iron to cool down completely.
3. Empty any remaining water from the tank.

6.2 Cleaning the Soleplate

To clean the ceramic soleplate, wipe it with a damp cloth and a non-abrasive cleaner. Do not use abrasive scouring pads or harsh chemicals as these can damage the soleplate. For stubborn marks, a specialized iron soleplate cleaner can be used following its instructions.

6.3 Descaling (Anti-Calc)

While the iron has an anti-drip system, regular descaling is recommended, especially in areas with hard water, to maintain optimal steam performance. Refer to the specific instructions for descaling your iron, typically involving a self-clean function or a descaling solution. Consult the full product manual for detailed descaling procedures if available.

7. Troubleshooting

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; auto-off activated.	Ensure base is plugged in; check power supply; lift iron or place on base to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to dry; mineral build-up.	Fill water tank; set temperature to steam-compatible setting; adjust steam control; perform descaling.
Water drips from soleplate.	Temperature too low for steam; anti-drip system not functioning correctly.	Increase temperature setting; if problem persists, contact customer support.
Iron not gliding smoothly.	Soleplate is dirty or has residue.	Clean the soleplate as per maintenance instructions.
Iron needs frequent recharging.	Normal operation for cordless iron; extended ironing time off base.	This is expected. Place iron back on base for 11-second rapid recharge when indicator light signals.

8. Specifications

Model Name: Tefal Freemove Power
Model Number: FV6672G0
Power: 2600 W
Continuous Steam Output: Up to 40 g/min
Steam Boost: Up to 220 g/min
Cordless Ironing Time: Approx. 35 seconds off base
Recharge Time: Approx. 11 seconds on base
Weight: 960 g (iron only) / 1.74 kg (total package weight)
Soleplate Material: Ceramic
Special Features: Cordless, Auto-Off, Anti-Drip, Horizontal Charging Base

Colour:	Eucalyptus
Manufacturer:	Groupe SEB

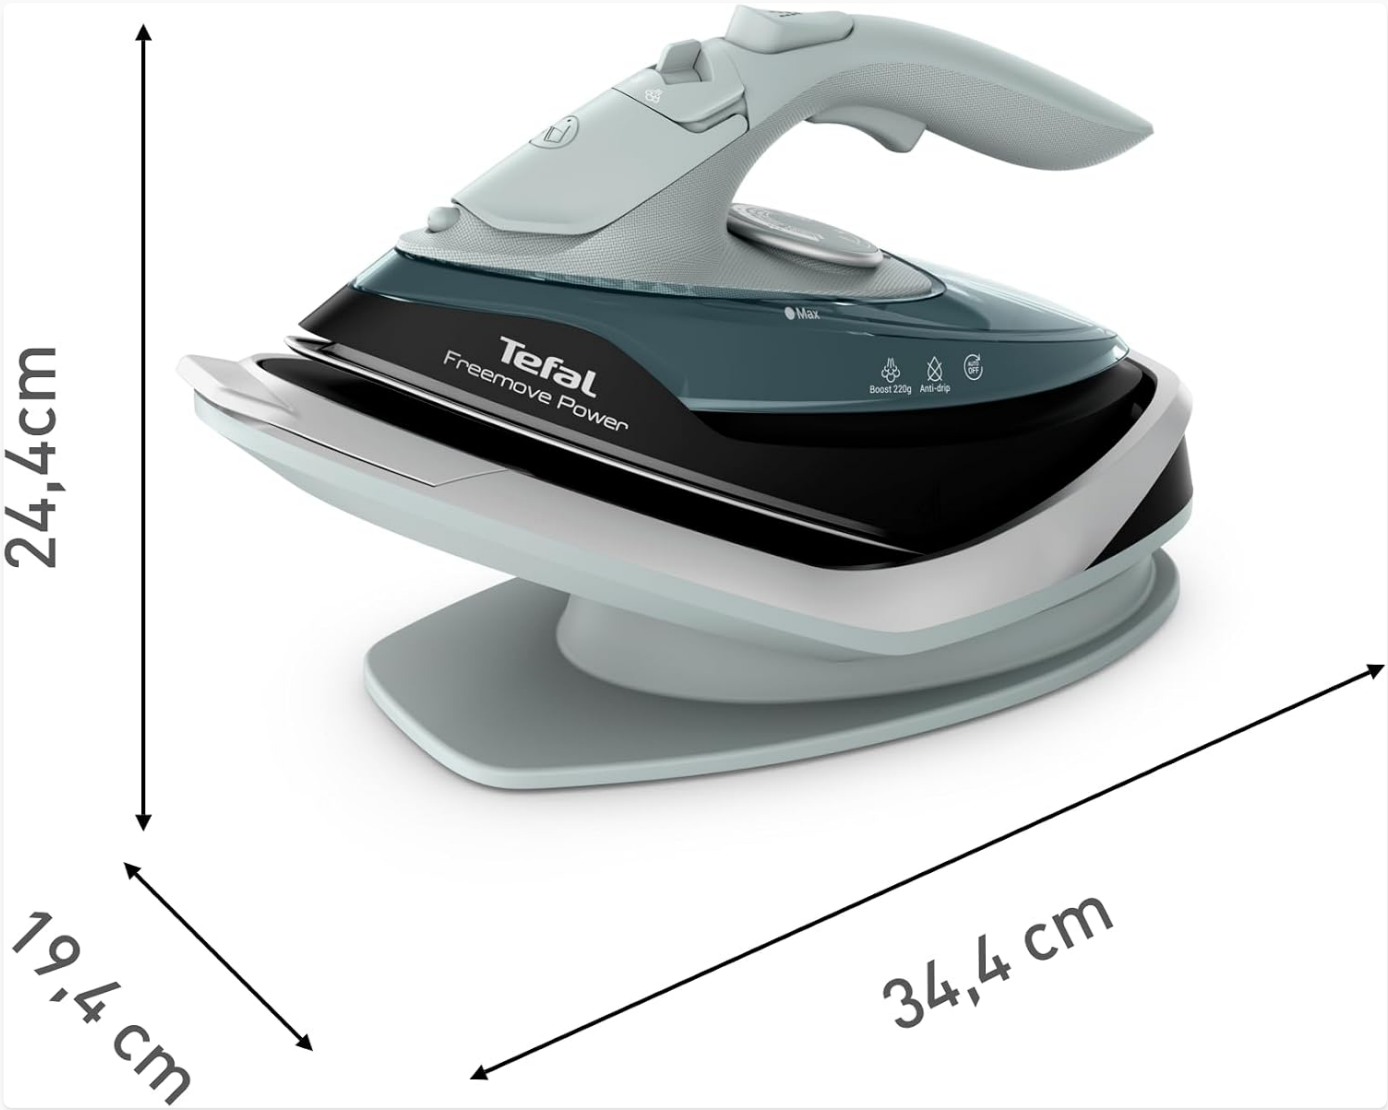


Image: Product dimensions: 24.4 cm height, 19.4 cm width, 34.4 cm length.

9. Warranty and Support

Tefal is committed to providing high-quality products. This product benefits from a 15-year repairability commitment, meaning low-cost parts are available in our 6200 repair centers worldwide for quick repair over many years. This commitment is part of our effort to help protect the environment and reduce waste.
For further assistance, troubleshooting not covered in this manual, or to inquire about repairs, please visit the official Tefal website or contact their customer support service. Keep your proof of purchase for warranty claims.

Visit Tefal Customer Service

© 2024 Tefal. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DGR3R24R

More documents and user manuals: **https://manuals.plus/**