Mova K30

MOVA K30 Wet Dry Vacuum Cleaner User Manual

Model: K30 | Brand: Mova

1. Important Safety Information

Please read all instructions carefully before using the MOVA K30 Wet Dry Vacuum Cleaner. Retain this manual for future reference.

- Do not immerse the appliance, battery, or charging base in water or other liquids.
- Use only the charging adapter provided by the manufacturer.
- Ensure the voltage specified on the charger matches your local mains voltage before connecting.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Always turn off the appliance before performing any maintenance or cleaning.
- This appliance is for indoor household use only.

2. Package Contents

Verify that all items are present and in good condition upon unpacking.

- Main Body x1
- Handle x1
- Charging Base x1
- Spare Roller Brush x1

- Replacement Filter x1
- Cleaning Solution x1
- Cleaning Brush x1



Image: All components included in the MOVA K30 Wet Dry Vacuum Cleaner package.

3. Product Overview

Familiarize yourself with the main parts of your MOVA K30.



Image: The MOVA K30 Wet Dry Vacuum Cleaner with its main body, handle, and brush head.

Key Features:

- **180° Lie-Flat Reach:** Designed to clean under low furniture and in tight spaces with sustained powerful suction.
- **Dual Rotation Self-Cleaning & 140°F Hot Air Drying:** Automated self-cleaning of the brush roller followed by hot air drying to prevent odors.
- **Dual-Sided Cleaning:** Allows for precise edge-to-edge cleaning along baseboards and in corners.
- **Powerful 18,000Pa Suction:** Effectively handles both wet and dry messes with rapid mopping.
- **Smart Mess Detection:** Automatically adjusts suction power and water output based on the level of dirt detected.

4. Setup

4.1 Assembly

1. Insert the handle into the main body until it clicks securely into place.
2. Ensure the clean water tank and dirty water tank are properly seated in their respective compartments.

4.2 Charging

1. Place the charging base on a flat, stable surface near a power outlet.
2. Connect the power adapter to the charging base and plug it into a wall outlet.
3. Place the MOVA K30 onto the charging base. The LED display will indicate charging status. A full charge takes approximately 3-4 hours.

4.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main body.
2. Open the tank cap and fill with clean tap water. For enhanced cleaning, add the recommended amount of MOVA cleaning solution (provided) to the water. Do not exceed the MAX fill line.
3. Close the tank cap securely and reinsert the clean water tank into the main body.

5. Operating Instructions

5.1 Powering On/Off

Press the Power button on the handle to turn the appliance on or off.

5.2 Cleaning Modes

The MOVA K30 offers multiple cleaning modes:

- **Auto Mode:** The vacuum automatically adjusts suction power and water output based on detected dirt. Ideal for general cleaning.
- **Turbo Mode:** Provides maximum suction and water for heavily soiled areas.
- **Suction Mode:** For vacuuming liquids without dispensing water.

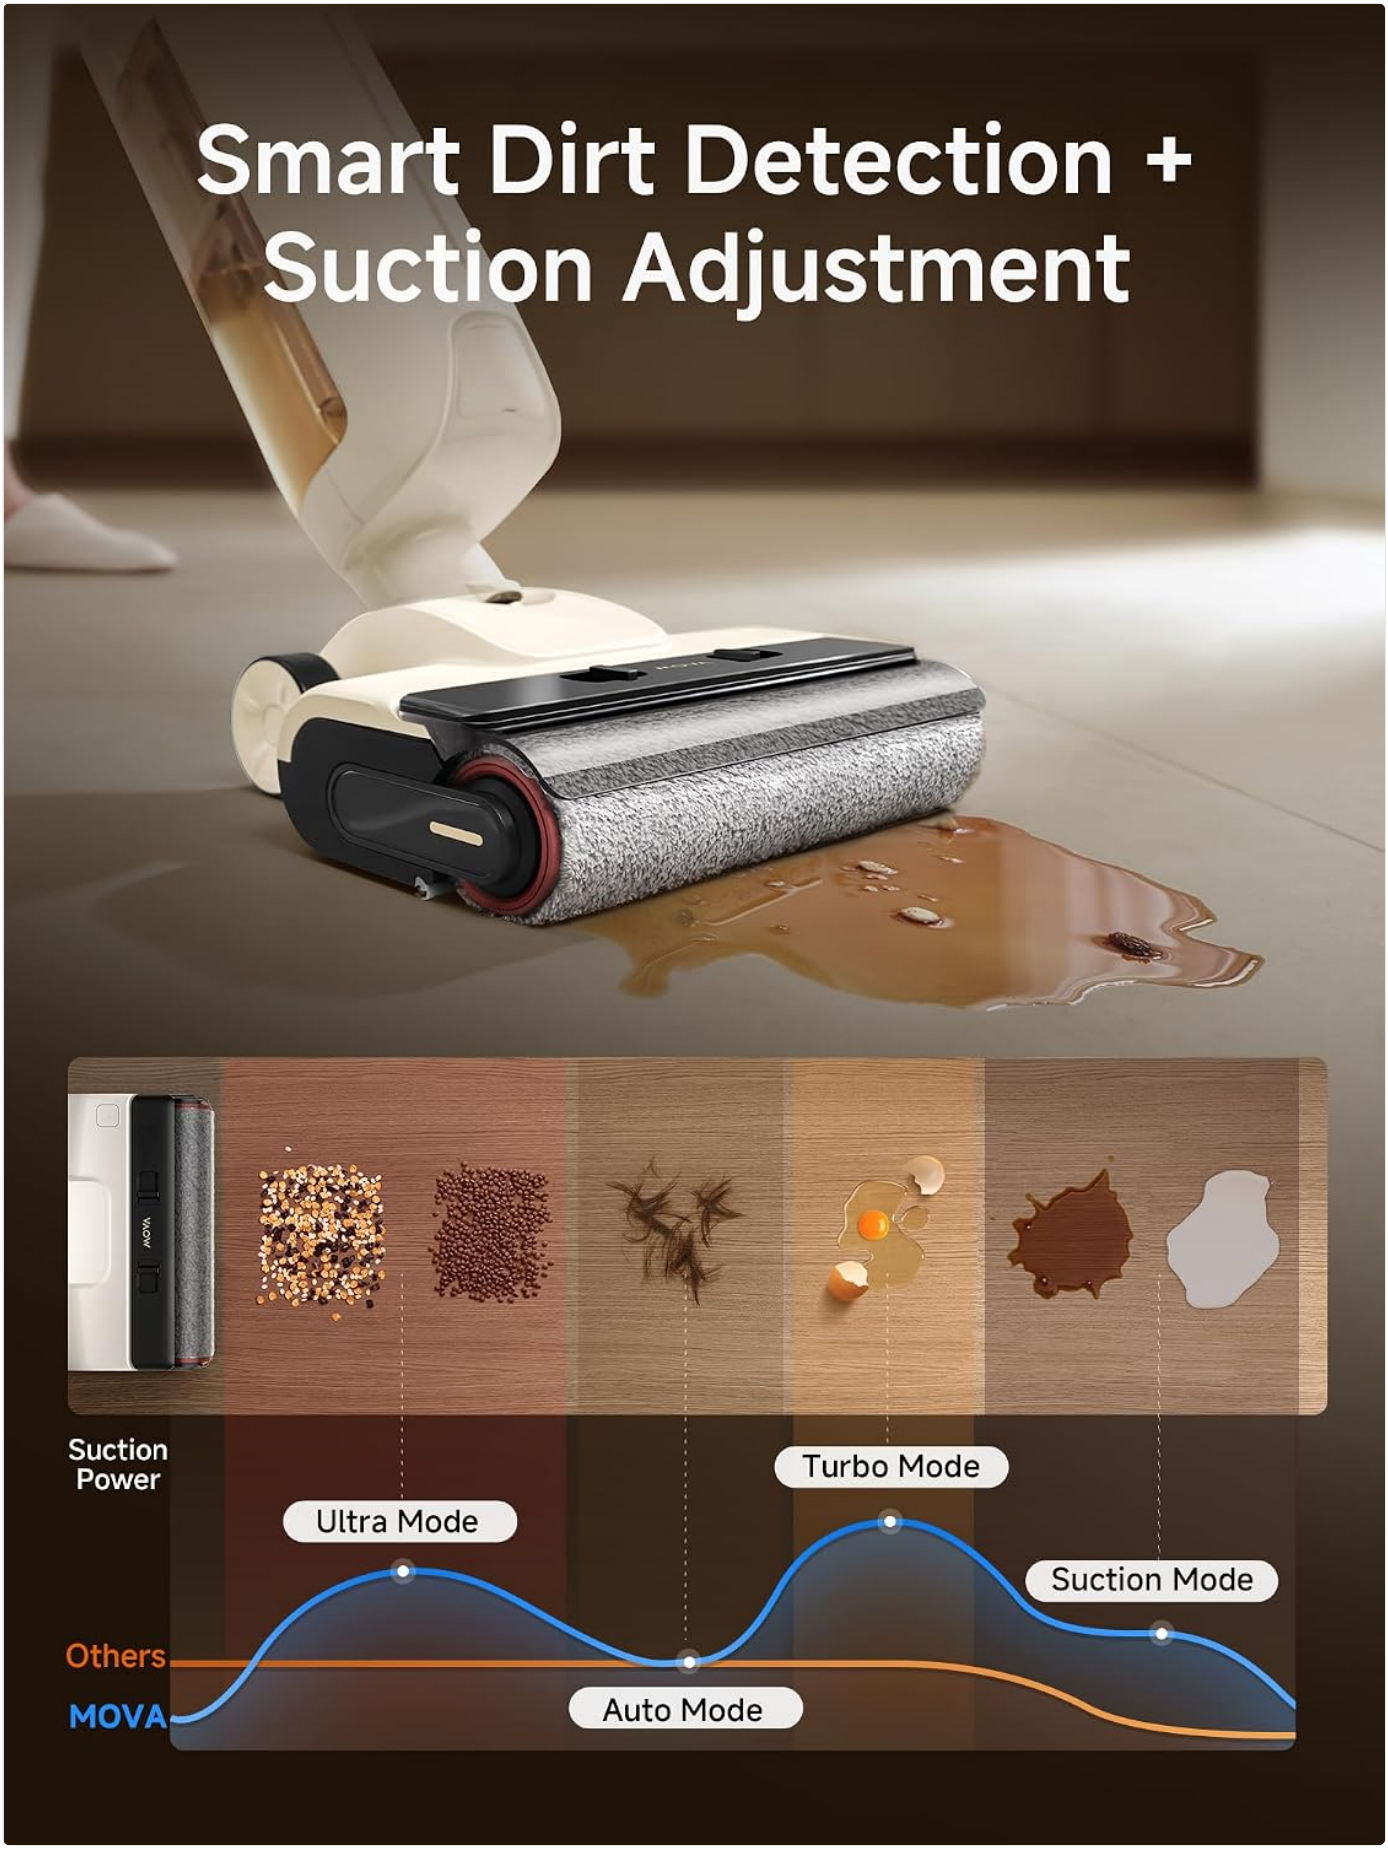


Image: The MOVA K30's smart dirt detection system, illustrating how suction power adjusts across different cleaning modes based on mess type.

5.3 180° Lie-Flat Cleaning

The K30's innovative design allows it to lie almost flat, enabling you to clean under furniture and in low-clearance areas

with ease.



Image: The MOVA K30 demonstrating its 180-degree lie-flat capability for cleaning under low furniture.

5.4 Dual-Edge Cleaning

The unique brush roller design allows for cleaning right up to edges and into corners, leaving no gaps.



Image: The MOVA K30's brush head performing dual-edge cleaning, reaching close to walls and obstacles.

5.5 Powerful Suction

The K30 delivers 18,000Pa of suction power, making it effective for various types of messes, from liquid spills to stubborn dirt.



Image: Visual representation of the MOVA K30's powerful 18,000Pa suction, capable of handling various debris types.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your MOVA K30.

6.1 Self-Cleaning Cycle

1. After each use, place the vacuum cleaner on its charging base.
2. Press the Self-Clean button (refer to your device's specific button layout). The self-cleaning cycle will begin, washing the brush roller and internal pipes.
3. Once the self-cleaning is complete, the 140°F hot air drying process will automatically start for 30 minutes to thoroughly dry the brush roller and prevent odors.



Image: The MOVA K30's self-cleaning process, showing the brush roller being cleaned and then dried with hot air.

6.2 Emptying the Dirty Water Tank

Empty the dirty water tank after each use to prevent odors and maintain hygiene.

1. Press the release button to remove the dirty water tank.
2. Carefully open the tank and dispose of the dirty water and debris.
3. Rinse the tank and filter assembly with clean water.
4. Allow all parts to air dry completely before reassembling.

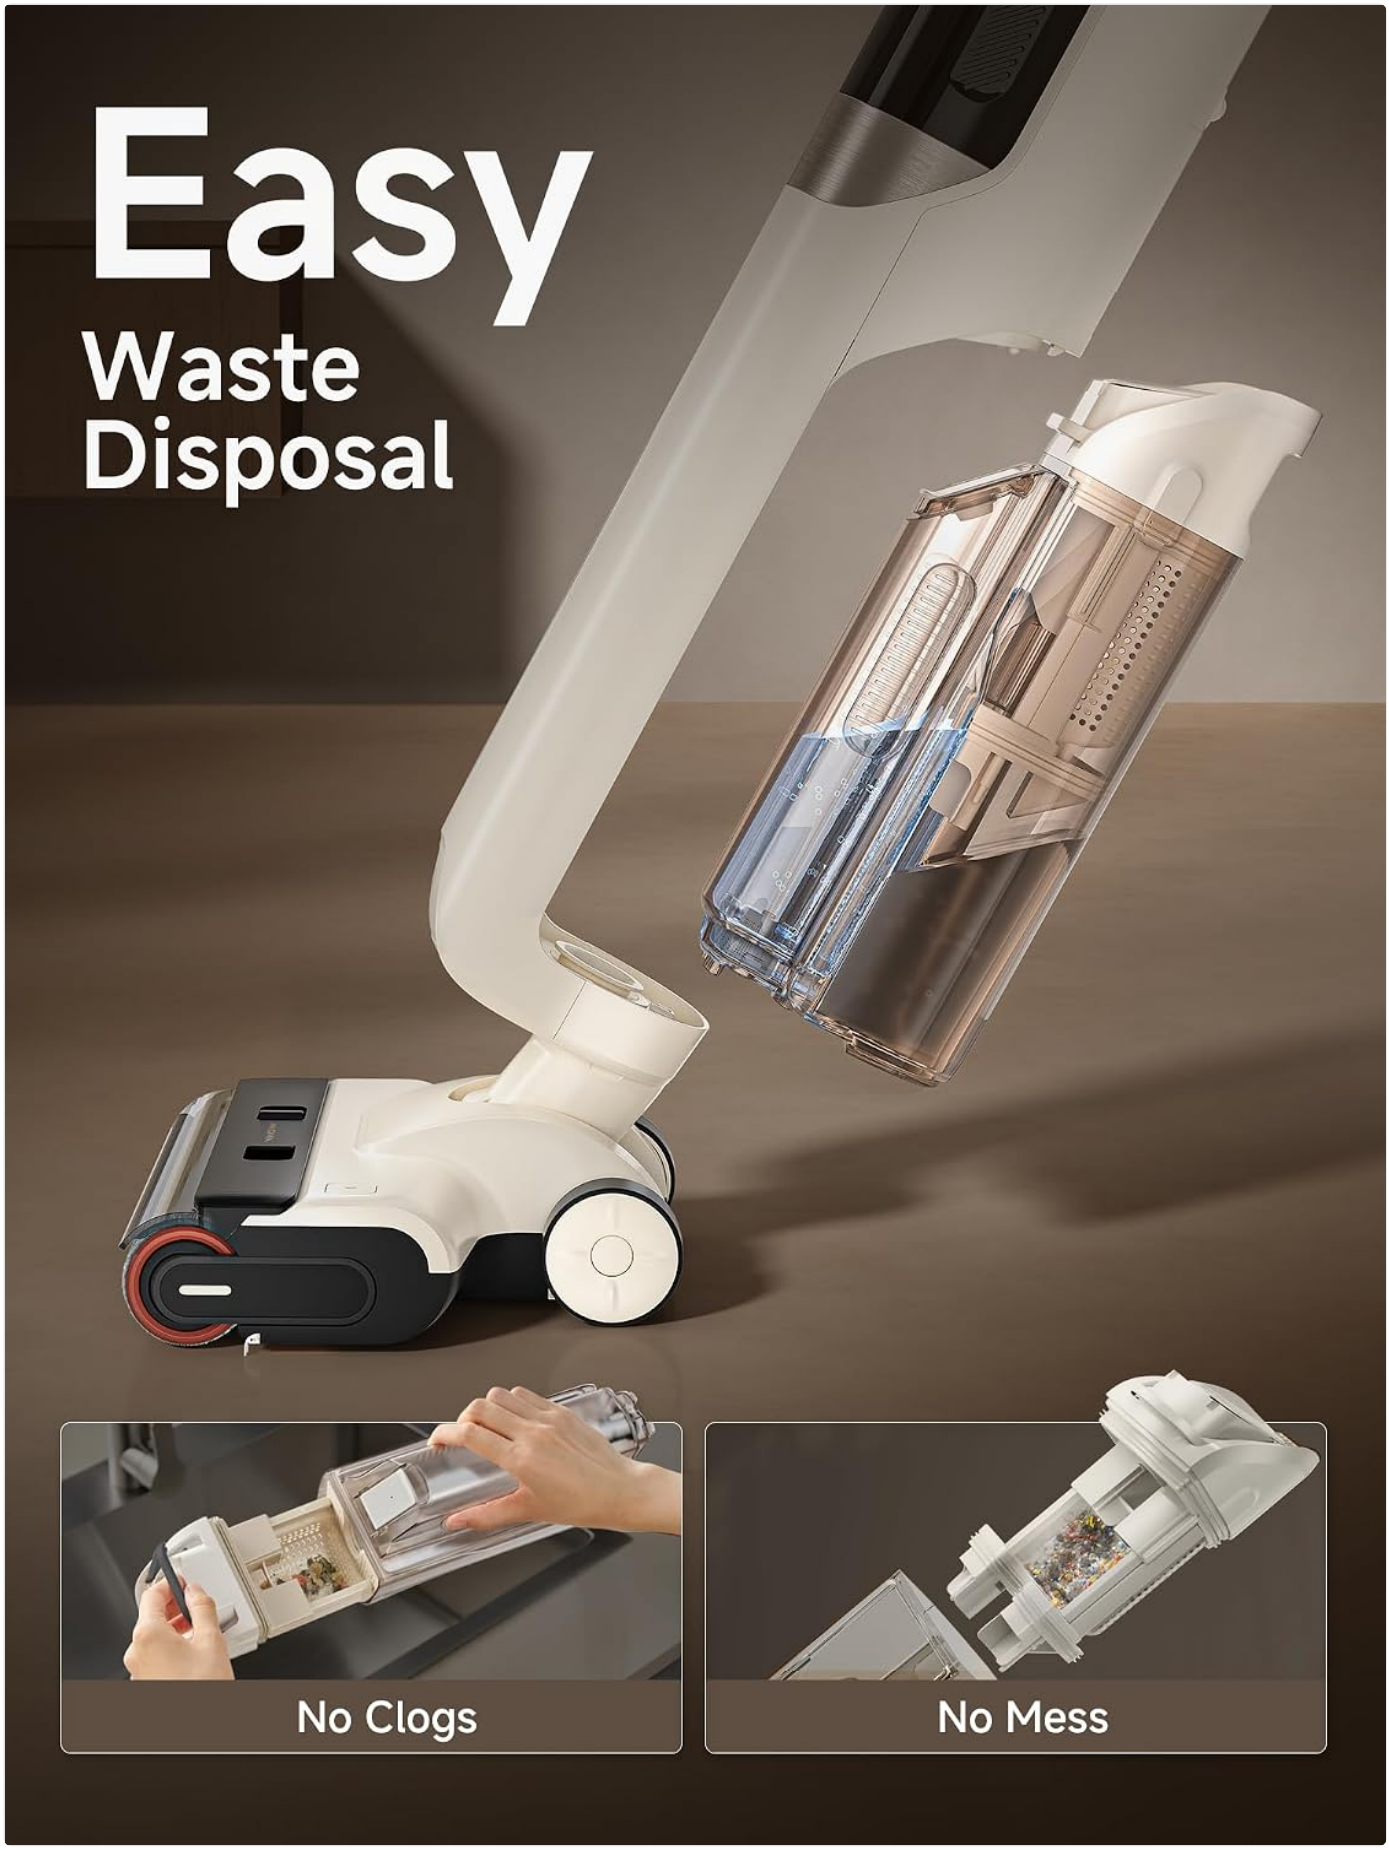


Image: Steps for easy waste disposal from the MOVA K30's dirty water tank, showing no clogs or mess.

6.3 Cleaning the Brush Roller

Even with self-cleaning, occasional manual cleaning of the brush roller may be necessary, especially if hair or debris is tangled.

1. Remove the brush roller cover and then the brush roller.
2. Use the provided cleaning brush to remove any tangled hair or debris.
3. Rinse the brush roller under running water.
4. Allow it to air dry completely before reinstalling.

6.4 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly and replaced every 3-6 months, depending on usage.

1. Remove the HEPA filter from the dirty water tank assembly.
2. Tap the filter gently to remove loose dust. You may rinse it under running water, but ensure it is completely dry before reinstallation.

7. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No power / Does not turn on	Battery is low or depleted. Not properly charged.	Charge the vacuum cleaner fully. Ensure it is correctly placed on the charging base.
Poor suction	Dirty water tank is full. Brush roller is tangled or blocked. Filter is clogged.	Empty the dirty water tank. Clean the brush roller. Clean or replace the HEPA filter.
Water leakage	Clean/dirty water tank not installed correctly. Tank caps are loose.	Ensure tanks are securely installed. Tighten tank caps.
Unpleasant odor	Dirty water tank not emptied/cleaned. Brush roller not dried properly.	Empty and thoroughly clean the dirty water tank. Run the self-cleaning cycle and ensure hot air drying completes.
Brush roller not spinning	Brush roller is jammed by debris.	Turn off the unit, remove the brush roller, and clear any obstructions.

8. Specifications

Feature	Detail

Feature	Detail
Brand	Mova
Model Name	K30
Product Dimensions	10.8"L x 9.4"W x 43.4"H
Item Weight	8.8 pounds
Suction Power	18,000Pa
Runtime	Up to 30 minutes
Clean Water Tank Capacity	0.6 Liters
Filter Type	HEPA Filter
Battery Type	Lithium-Ion (6 batteries included)
Hot Air Drying Temperature	140°F
Color	White
UPC	850067619246

9. Warranty and Support

MOVA is committed to providing high-quality products and excellent customer service.

9.1 Warranty Information

The MOVA K30 Wet Dry Vacuum Cleaner comes with a warranty of up to 36 months. Please refer to the official MOVA website or your purchase documentation for specific warranty terms and conditions.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact MOVA customer support through the following channels:

- **Online Support:** Visit the official Mova Store on Amazon for FAQs and contact options.
- **Email Support:** Refer to your product packaging or the official website for the dedicated support email address.

MOVA offers a 24/7 rapid responding service team and a 30-day money-back service.

© 2025 Mova. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question