Cosofme CozyBuds W27

Cosofme CozyBuds W27 Bluetooth Headset User Manual

Model: CozyBuds W27

1. Introduction

Thank you for choosing the Cosofme CozyBuds W27 Bluetooth Headset. This manual provides essential information for the proper setup, operation, and maintenance of your new wireless earbuds. Please read it carefully before use.
The CozyBuds W27 offers a high-fidelity audio experience with Bluetooth 5.4 connectivity, ensuring low latency and stable connections for both music and calls. Its lightweight design and long battery life are engineered for comfort and extended use.

2. Package Contents

- Cosofme CozyBuds W27 Earbuds (Left and Right)
- Charging Case
- Charging Cable
- User Manual

3. Product Overview



Image: Cosofme CozyBuds W27 earbuds in their open charging case, highlighting the green color and compact design. A small LED indicator is visible on the case.

The CozyBuds W27 features an ergonomic in-ear design for comfortable wear. The charging case protects the earbuds and provides additional battery life. Each earbud is equipped with smart touch controls for easy operation.

4. Setup

4.1. Charging the Earbuds and Case



Image: An infographic detailing the battery specifications of the CozyBuds W27. It shows the charging case battery capacity as 250mAh, standby time as 160 hours, play time as 4 hours, and charging time as 1.5 hours.

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the charging cable to the charging port on the case and a USB power source.
3. The indicator light on the charging case will illuminate to show charging status.
4. A full charge for the case takes approximately 1.5 hours. The earbuds will charge automatically when placed in the powered case.

The charging case has a 250mAh battery capacity, providing up to 30 hours of total battery life with multiple recharges for the earbuds. Each earbud offers approximately 4 hours of play time on a single charge and 160 hours of standby time.

4.2. Bluetooth Pairing

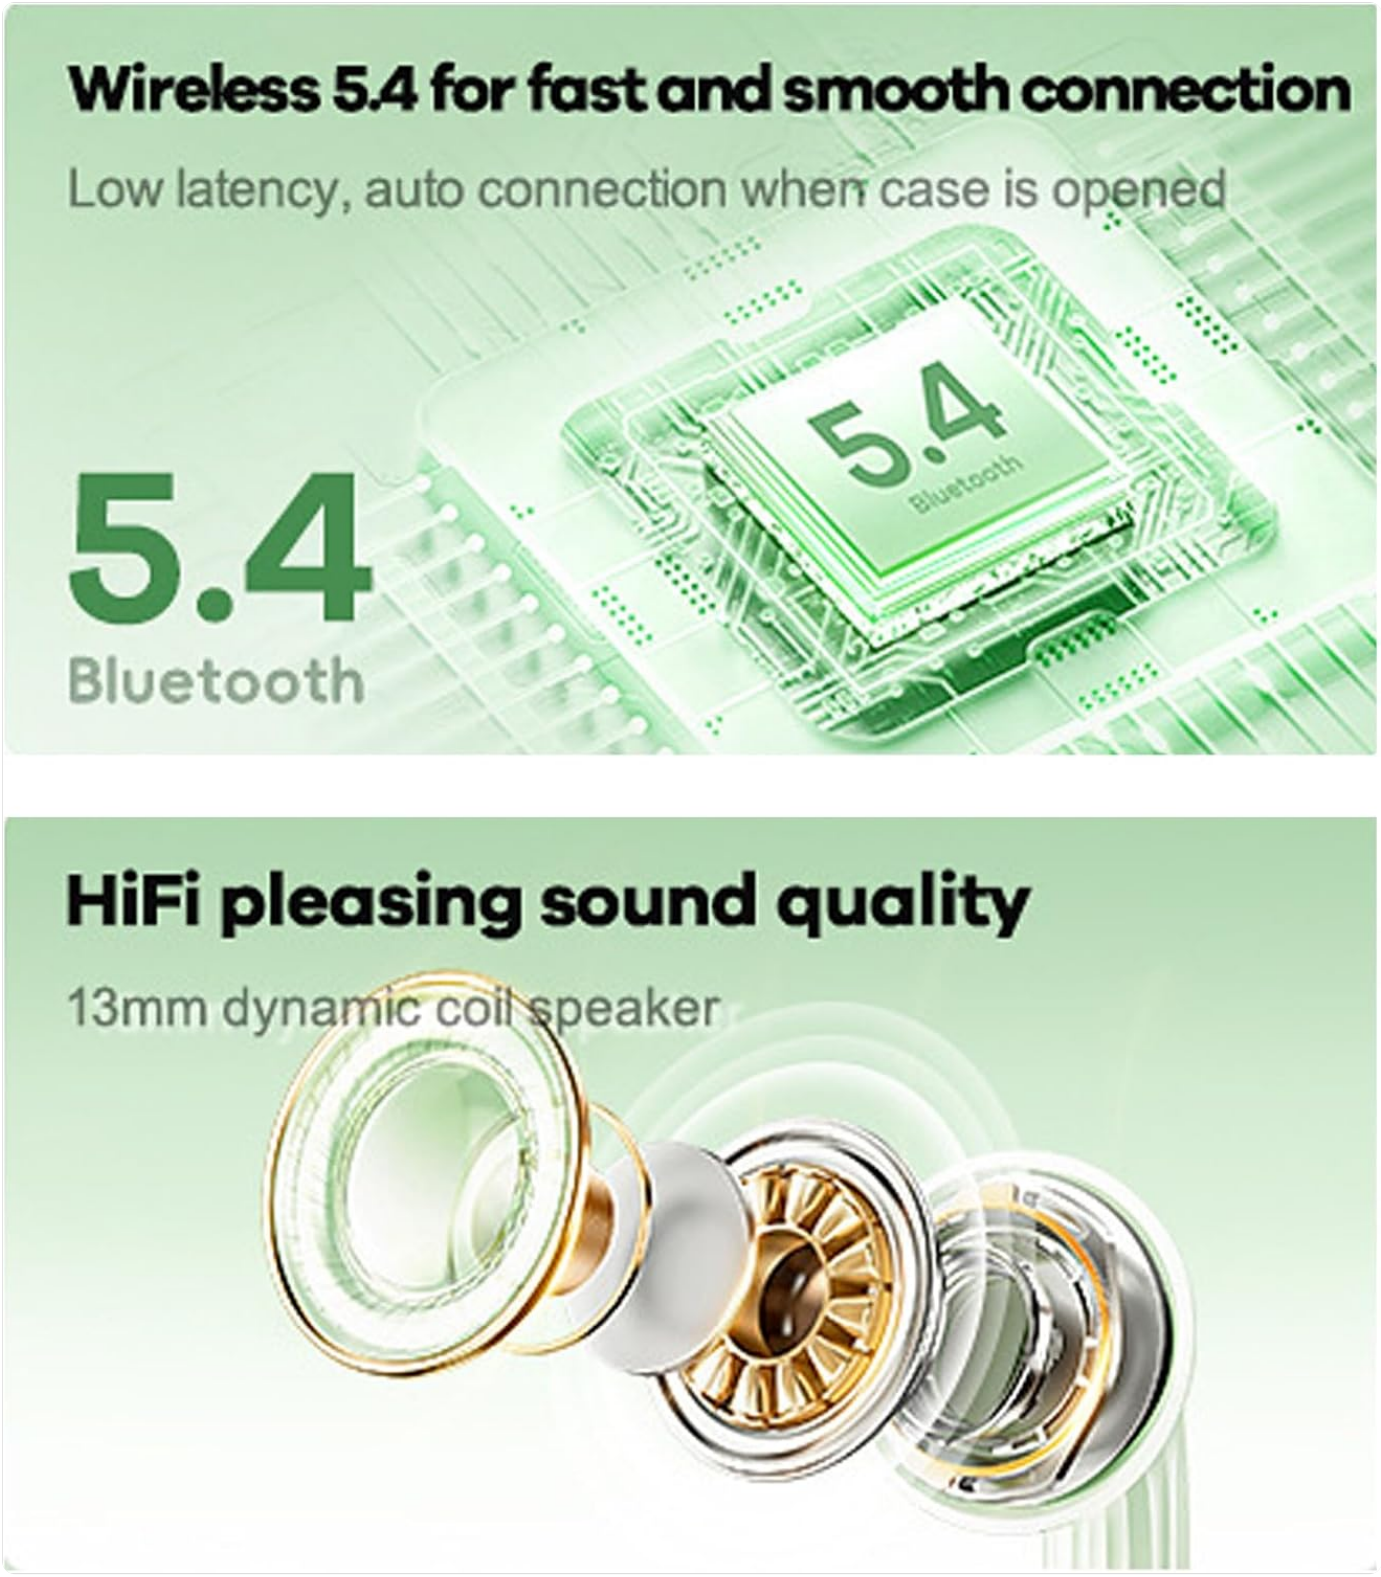


Image: A graphic depicting Bluetooth 5.4 technology, emphasizing fast and smooth connection with low latency. It shows a stylized Bluetooth chip and radiating signal waves.

1. **Initial Pairing:** Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "CozyBuds W27" from the list.
4. Once connected, you will hear an audio prompt, and the indicator light on the earbuds may change.
5. **Automatic Reconnection:** After initial pairing, the earbuds will automatically connect to the last paired device when the charging case is opened, provided Bluetooth is enabled on the device.

5. Operating Instructions

5.1. Smart Touch Controls

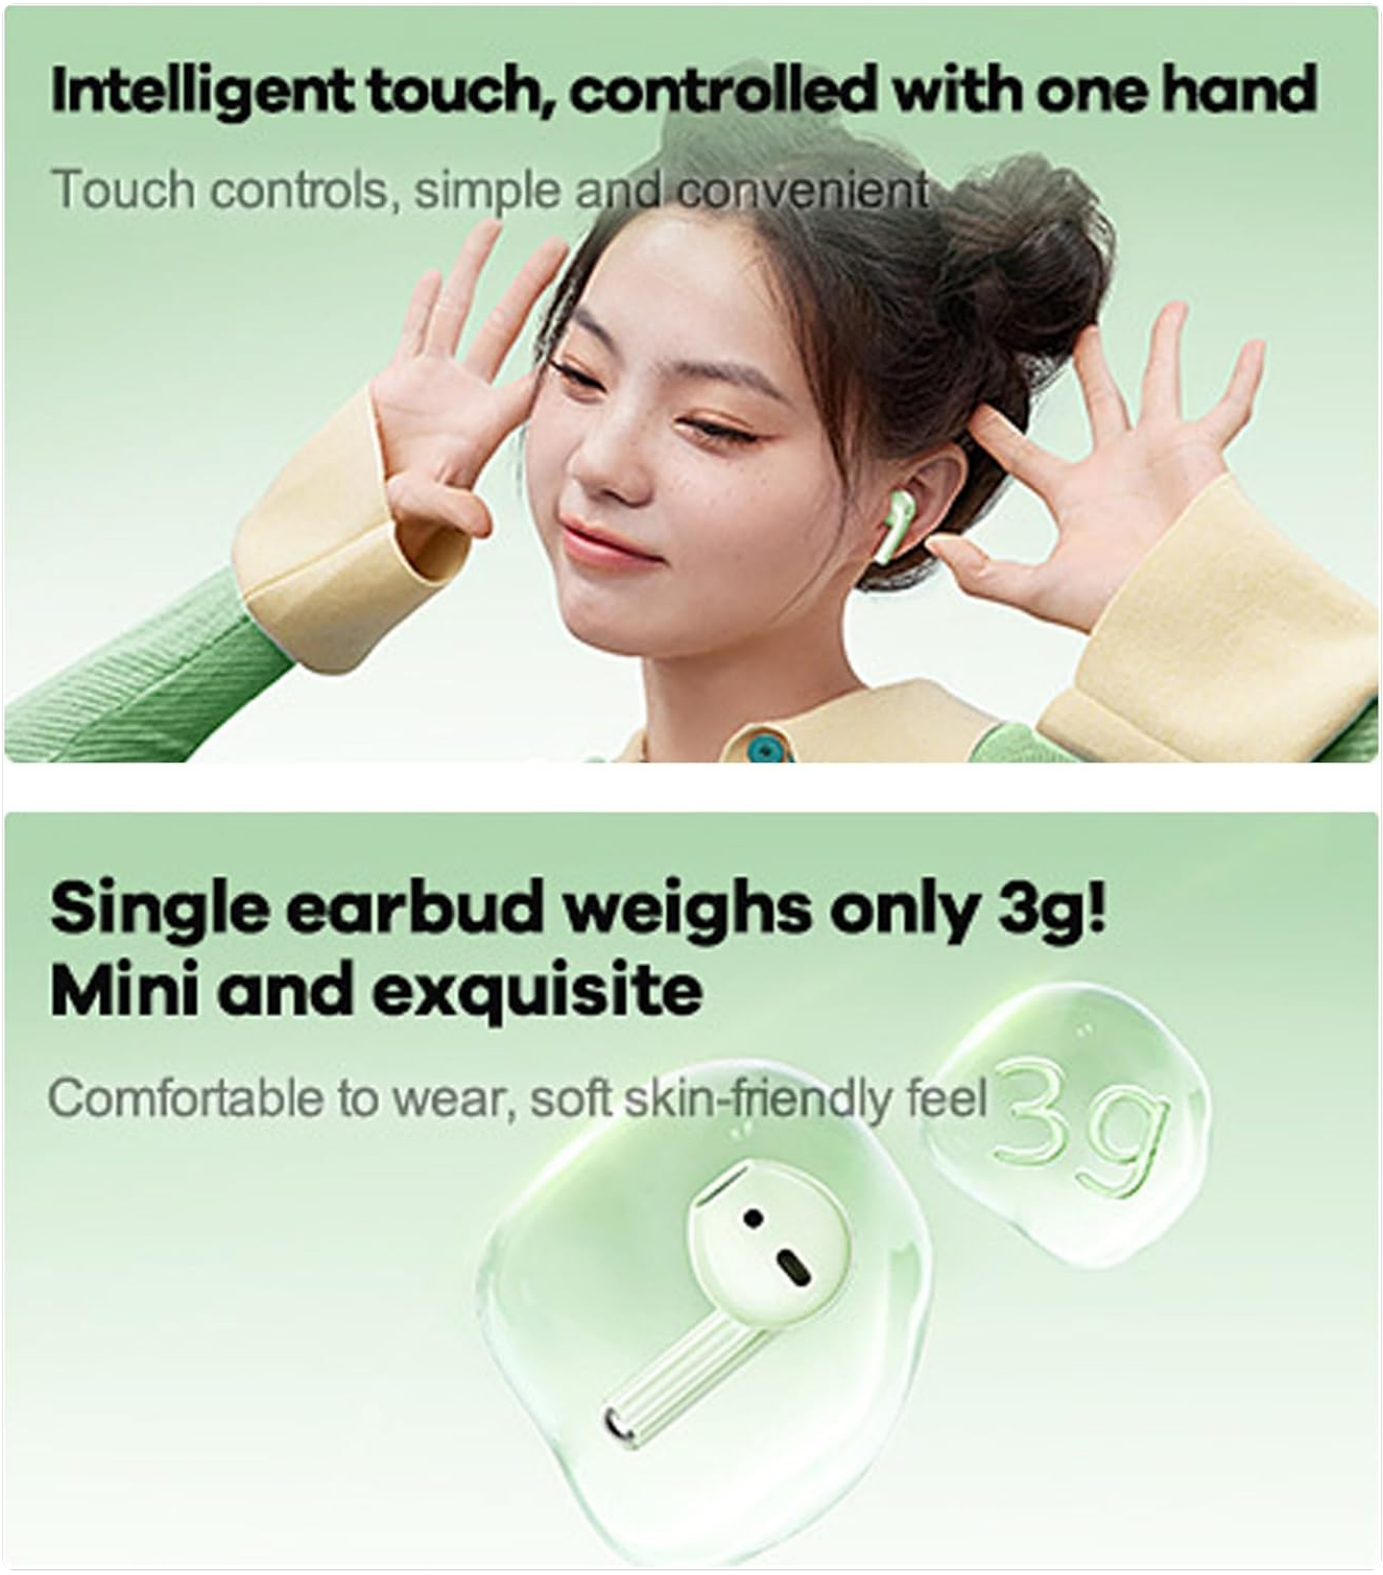


Image: A person demonstrating the use of intelligent touch controls on an earbud. Text overlays highlight that the controls are simple, convenient, and operable with one hand.

The CozyBuds W27 features intuitive touch controls on each earbud. The specific functions may vary slightly, but common operations include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.

- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.

5.2. Power On/Off

- **Power On:** Open the charging case, or press and hold the touch area on both earbuds for 3 seconds if they are out of the case and off.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or press and hold the touch area on both earbuds for 5 seconds.

6. Maintenance

6.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris to maintain proper charging.

6.2. Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid exposing the device to extreme temperatures, humidity, or dust.

7. Troubleshooting

- **Earbuds not pairing:**
  - Ensure both earbuds are charged.
  - Turn off Bluetooth on your device and turn it back on.
  - Delete "CozyBuds W27" from your device's Bluetooth list and attempt to re-pair.
  - Place earbuds back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
- **No sound from one earbud:**
  - Ensure both earbuds are charged.
  - Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).
  - Re-pair the earbuds with your device.
- **Charging issues:**
  - Check the charging cable and power adapter.
  - Ensure the charging contacts on the earbuds and inside the case are clean and free of obstructions.
- **Low volume or poor sound quality:**
  - Adjust the volume on your connected device.
  - Ensure the earbuds are properly seated in your ears.
  - Clean any earwax or debris from the earbud speakers.

8. Specifications

Model Name	CozyBuds W27
Brand	Cosofme

Connectivity Technology	Bluetooth 5.4, Wireless
Form Factor	In Ear
Impedance	20 Ohm
Frequency Response	20 KHz
Earbud Play Time	Up to 4 hours
Charging Case Capacity	250mAh
Total Battery Life (with case)	Up to 30 hours
Charging Time (Case)	Approx. 1.5 hours
Standby Time	160 hours
Product Dimensions	4.4 x 4.4 x 2.1 cm (Case)
Weight	33 g (Total), 3g (Single Earbud)
Included Components	Cable

9. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Cosofme website. Keep your proof of purchase for any warranty claims.

© 2024 Cosofme. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question