Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Arno X-FORCE FLEX 9.60

Arno X-FORCE FLEX 9.60 Cordless Vacuum Cleaner User Manual

Model: X-FORCE FLEX 9.60 | Brand: Arno

1. Introduction

Thank you for choosing the Arno X-FORCE FLEX 9.60 Cordless Vacuum Cleaner. This versatile and powerful device is designed to provide efficient cleaning for all areas of your home. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.



Image 1.1: The Arno X-FORCE FLEX 9.60 Cordless Vacuum Cleaner in its upright configuration.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the battery pack, accessories, or performing maintenance.

- Use only the charger supplied by the manufacturer to recharge.
- Store the vacuum cleaner indoors in a dry place.

3. Product Overview and Components

The Arno X-FORCE FLEX 9.60 is a versatile cordless vacuum cleaner designed for various cleaning tasks. It comes with several accessories to adapt to different surfaces and needs.

Included Components:

- 1 Cordless Vacuum Cleaner (with pre-installed filter)
- 1 Flexible Tube
- 1 Charging Base
- 1 Crevice and Baseboard Tool
- 2 Thick Brushes
- 1 Sofa and Upholstery Brush
- 1 Animal Turbo Brush
- 1 Extra Filter
- 1 Warranty Certificate
- 1 Instruction Manual (this document)



Image 3.1: Overview of the included accessories, including brushes and tools.



Image 3.2: The vacuum cleaner demonstrating its versatility with different assembly configurations.

4. Setup

4.1 Assembly

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach the Flexible Tube:** Connect the flexible tube to the main vacuum body until it clicks securely into place.
3. **Attach the Floor Head:** Connect the desired floor head (e.g., motorized brush) to the other end of the flexible tube.
4. **Handheld Configuration:** For handheld use, detach the flexible tube and attach accessories directly to the main vacuum body.

4.2 Charging the Battery

Before first use, fully charge the battery. The removable 18.5V Lithium-ion battery provides up to 45 minutes of runtime in ECO mode.

1. **Remove Battery:** Press the battery release button and slide the battery pack out of the main unit.
2. **Connect to Charging Base:** Place the battery pack into the charging base. Ensure it is properly seated.
3. **Plug In:** Connect the charging base power adapter to a suitable electrical outlet.
4. **Charge:** The battery indicator lights will show the charging status. A full charge takes approximately 3 hours.
5. **Reinsert Battery:** Once fully charged, remove the battery from the charging base and slide it back into the vacuum cleaner until it clicks.



Image 4.1: The removable battery being charged on its dedicated charging base.

5. Operating the Vacuum Cleaner

5.1 Power On/Off and Suction Modes

The Arno X-FORCE FLEX 9.60 features an intelligent control panel with three suction levels and automatic adjustment.

1. **Power On:** Press the power button on the handle to turn on the vacuum cleaner. It will typically start in ECO mode.

2. **Adjust Suction:** Use the control panel buttons to cycle through the 3 power levels: ECO, Standard, and BOOST.
3. **Automatic Suction Adjustment:** The vacuum cleaner automatically adjusts suction power based on the floor type when using the main motorized brush, optimizing cleaning efficiency.
4. **BOOST Mode:** For stubborn dirt, press and hold the BOOST trigger for maximum suction.
5. **Power Off:** Press the power button again to turn off the vacuum cleaner.



Image 5.1: The intelligent control panel displaying battery autonomy, filter cleaning alert, and power levels.



Image 5.2: The vacuum cleaner's floor head with automatic suction adjustment for different floor types.

5.2 Using the Flexible Tube and LED Light

The exclusive flexible tube technology allows for easy access to hard-to-reach areas, such as under furniture, without bending down.

- **Flexible Cleaning:** Bend the tube at its joint to clean under beds, sofas, and tables.
- **LED Light:** The main motorized brush is equipped with an LED light to illuminate dark areas, making hidden dust and debris visible.



Image 5.3: Demonstrating the flexible tube technology for cleaning under furniture.

5.3 Using Accessories

Select the appropriate accessory for your cleaning task:

- **Crevice and Baseboard Tool:** Ideal for narrow spaces, corners, and edges.
- **Thick Brushes:** Suitable for removing stubborn dirt from various surfaces.
- **Sofa and Upholstery Brush:** Designed for cleaning fabric surfaces like sofas, chairs, and curtains.
- **Animal Turbo Brush:** Specifically designed for efficient removal of pet hair from upholstery and carpets.

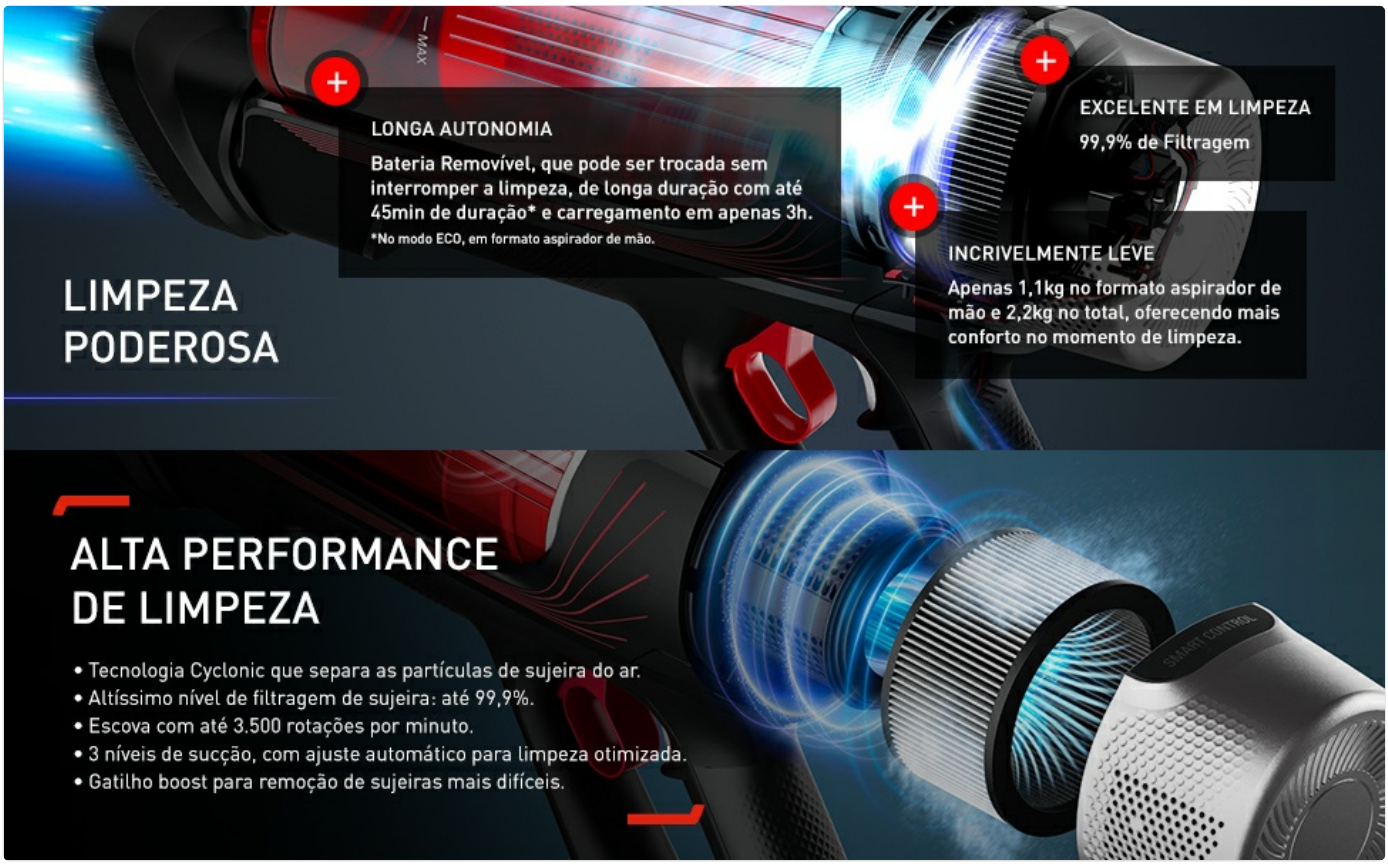


Image 5.4: The Animal Turbo Brush effectively removing pet hair from a pet bed.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your Arno X-FORCE FLEX 9.60.

6.1 Emptying the Dustbin

The 450ml dustbin is designed for easy and hygienic emptying, avoiding contact with dirt.

1. **Detach Dustbin:** Press the dustbin release button and remove the dustbin from the main unit.
2. **Empty Contents:** Hold the dustbin over a trash can and open the bottom flap to release the collected dirt.
3. **Reattach Dustbin:** Close the flap and reattach the dustbin to the vacuum cleaner until it clicks securely.

6.2 Cleaning the Filters

The vacuum cleaner features a 99.9% filtration system with a washable HEPA filter and an extra filter for convenience.

1. **Remove Filters:** With the dustbin detached, carefully remove the HEPA filter and any other internal filters.
2. **Wash Filters:** Rinse the washable filters under cold running water until the water runs clear. Do not use detergents.
3. **Dry Filters:** Allow the filters to air dry completely for at least 24 hours before reinserting them. Ensure they are completely dry to prevent damage to the motor.
4. **Reinsert Filters:** Place the dry filters back into the dustbin, ensuring they are correctly positioned.
5. **Replace Filters:** Replace filters periodically (e.g., every 6-12 months, depending on usage) to maintain optimal suction and filtration.

6.3 Cleaning Brushes and Accessories

- **Motorized Brush:** Regularly check the motorized brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it.

- **Other Accessories:** Wipe down all accessories with a damp cloth as needed. Ensure they are dry before storage.

7. Troubleshooting

If you encounter any issues with your vacuum cleaner, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly inserted.	Ensure battery is fully charged and correctly inserted.
Low suction power	Dustbin is full, filters are clogged, or an attachment is blocked.	Empty dustbin, clean or replace filters, check for blockages in the tube or attachments.
Motorized brush not spinning	Brush roll is jammed with debris or attachment is not properly connected.	Remove any tangled hair or debris from the brush roll. Ensure the floor head is securely attached.
Short battery runtime	Battery not fully charged, or operating in BOOST mode frequently.	Ensure battery is fully charged. Use ECO mode for longer runtime. Battery life naturally degrades over time.

If the problem persists after trying these steps, please contact customer support.

8. Specifications

- **Brand:** Arno
- **Model Name:** X-FORCE FLEX 9.60
- **Model Number:** 7211005253
- **Power:** 250 Watts
- **Battery Type:** 18.5V Lithium-ion (Removable)
- **Run Time:** Up to 45 minutes (in ECO mode)
- **Charging Time:** Approximately 3 hours
- **Dustbin Capacity:** 450 ml
- **Filtration:** 99.9% HEPA Filter (Washable)
- **Weight:** 1.1 kg (handheld), 2.2 kg (total)
- **Dimensions (L x W x H):** 112 cm x 24.8 cm x 23.4 cm
- **Noise Level:** 82 Decibels
- **Suction Levels:** 3 (ECO, Standard, BOOST) with automatic adjustment
- **Special Features:** Foldable, Lightweight, LED Light, Cordless, Flexible Tube, Automatic Suction Adjustment
- **Recommended Surfaces:** All floors (carpet, hard floors, car, sofa, ceiling)

9. Warranty and Support

9.1 Warranty Information

Your Arno X-FORCE FLEX 9.60 Cordless Vacuum Cleaner comes with a warranty. Please refer to the included **Warranty Certificate** for specific terms, conditions, and duration of your product's warranty. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, spare parts, or any questions not covered in this manual, please contact Arno customer support. Contact details can typically be found on the Arno official website or on your warranty certificate.

10. Product Videos

No official product videos were available in the provided data to embed in this manual. For visual guides or demonstrations, please visit the official Arno website or their authorized channels.

© 2024 Arno. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DGY52NYY

More documents and user manuals: **https://manuals.plus/**