Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY DG11Q1-01 DG11Q1-02

ALLIMITY DG11Q1-01 / DG11Q1-02 Universal AC Remote Control User Manual

For BEKO and Arcelik Air Conditioners

1. Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your ALLIMITY DG11Q1-01 or DG11Q1-02 universal replacement AC remote control. This remote is designed to be compatible with various BEKO and Arcelik air conditioner models. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

2. Product Overview

The ALLIMITY DG11Q1-01 / DG11Q1-02 is a direct replacement remote control, requiring no programming or pairing. Simply insert batteries to begin operation.

2.1 Remote Control Layout





Image 1: Front view of the remote control, displaying the LCD screen at the top and an array of circular function buttons below.

2.2 Remote Control Dimensions

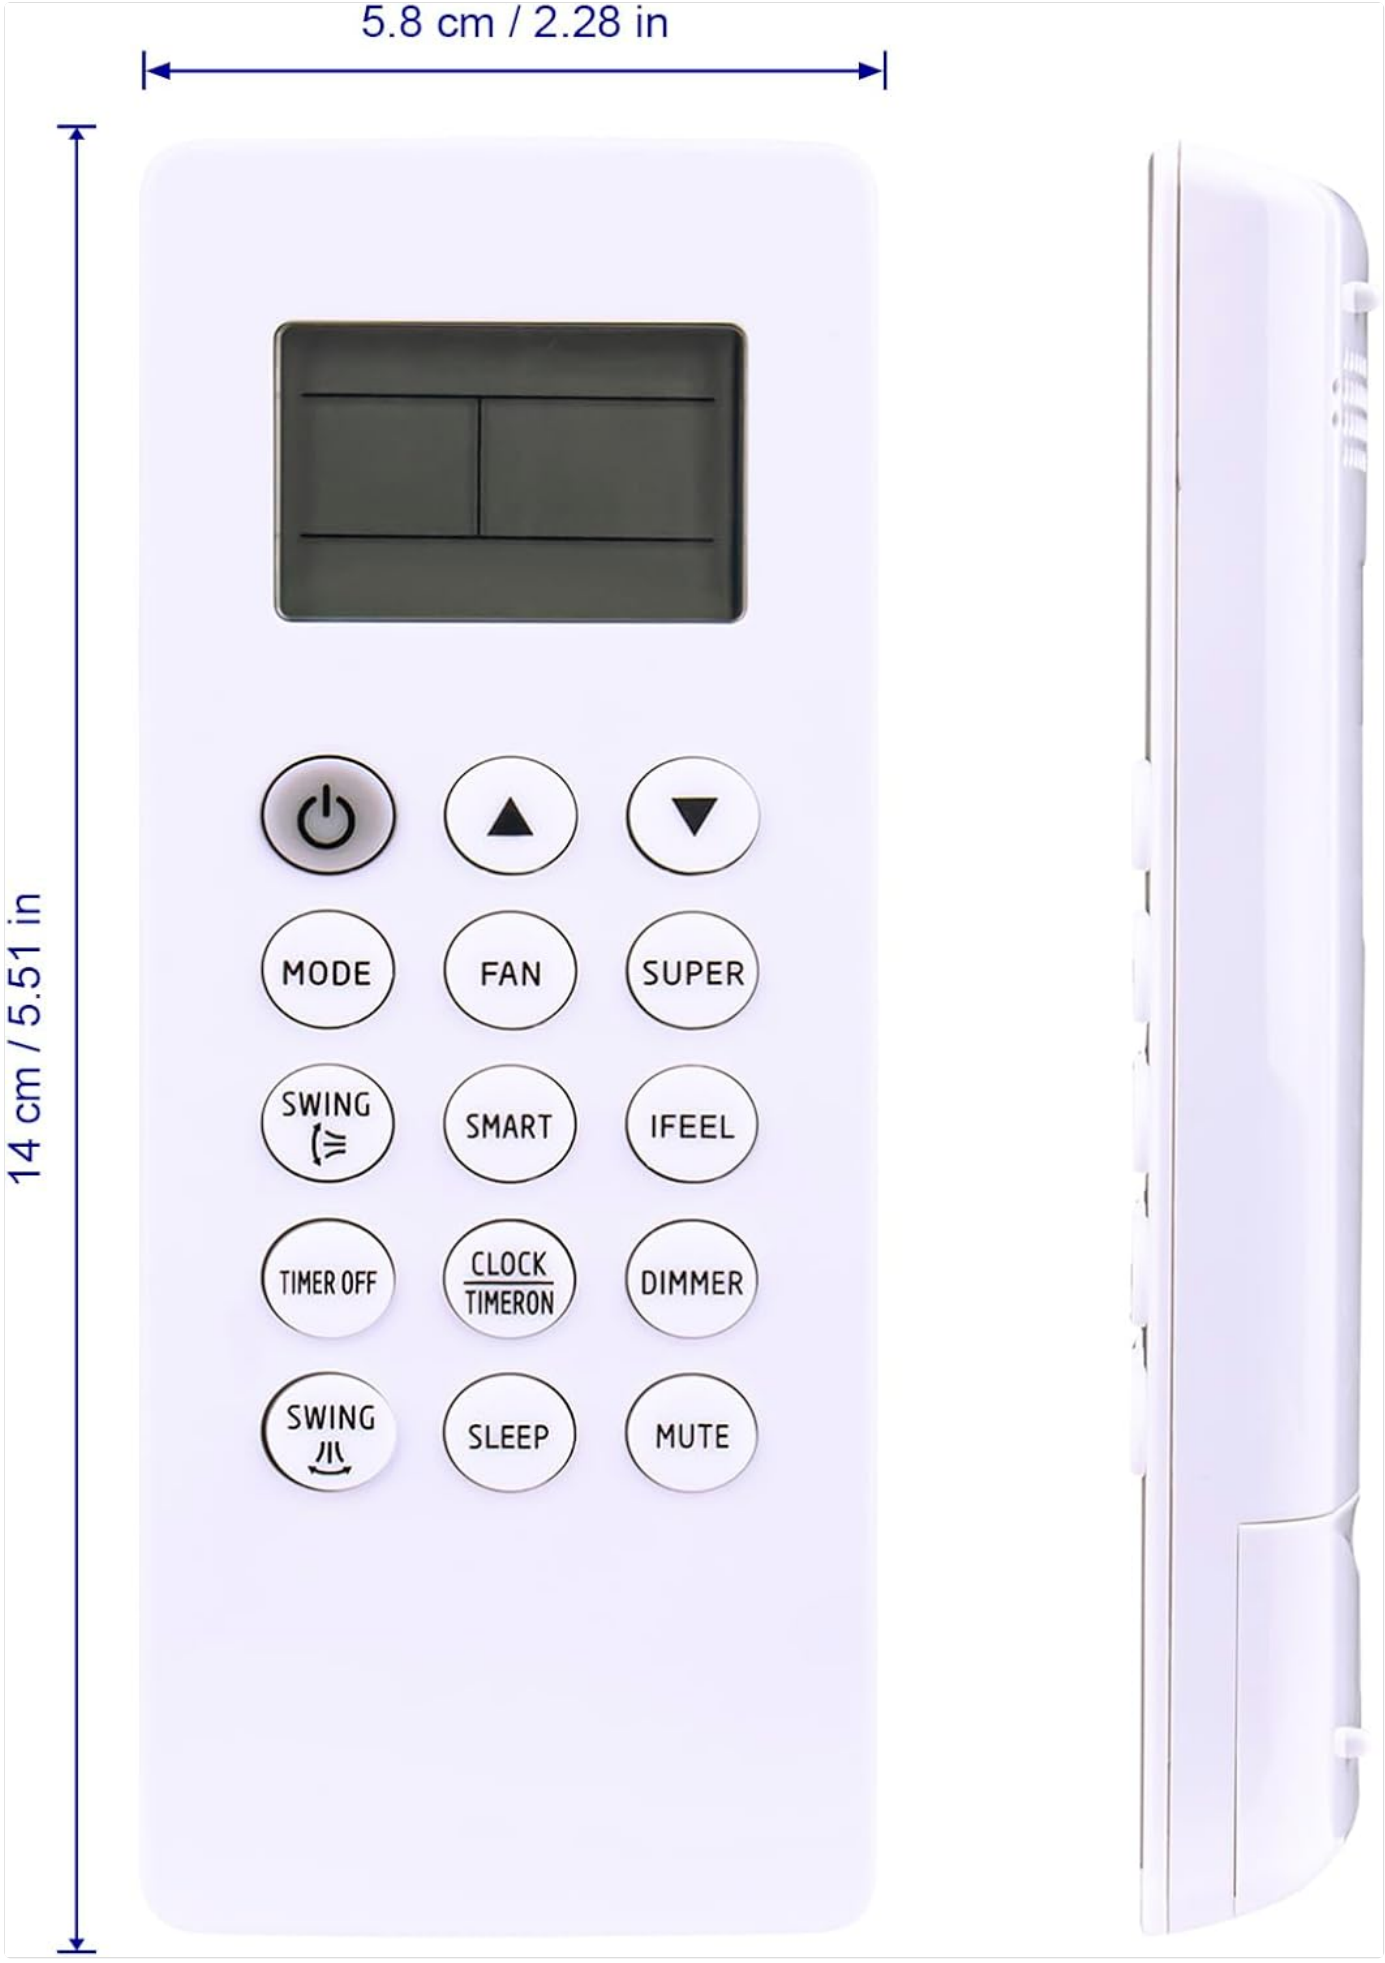


Image 2: Side view of the remote control, illustrating its approximate dimensions: 14 cm (5.51 inches) in length and 5.8 cm (2.28 inches) in width.

3. Setup

3.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 3: Back view of the remote control with the battery cover removed, revealing the battery slots.

Once batteries are installed, the remote is ready for use with your compatible BEKO or Arcelik air conditioner.

4. Operating Instructions

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the air conditioner.

4.1 Button Functions

Button	Function
Power ( )	Turns the air conditioner ON or OFF.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
FAN	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
SUPER	Activates or deactivates the rapid cooling/heating function.
▲ (Up Arrow)	Increases temperature setting or adjusts timer settings.
▼ (Down Arrow)	Decreases temperature setting or adjusts timer settings.
SWING (≧)	Controls the horizontal louver swing.
SWING (∫∫)	Controls the vertical louver swing.
SMART	Activates intelligent operating mode, often adjusting settings automatically based on room conditions.
IFEEL	Activates the 'I Feel' function, which measures temperature at the remote's location for more precise control.
TIMER OFF	Sets a timer for the air conditioner to turn OFF.
CLOCK / TIMER ON	Sets the current time or sets a timer for the air conditioner to turn ON.
DIMMER	Adjusts the brightness of the air conditioner's display panel.
SLEEP	Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep.
MUTE	Mutes audible alerts or sounds from the air conditioner.

5. Maintenance

5.1 Battery Replacement

Replace batteries when the remote control's range decreases or if the display becomes dim. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

6. Troubleshooting

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote control range is reduced.	Low battery power. Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the air conditioner's receiver.
Air conditioner does not respond to commands.	Remote not compatible with AC unit. AC unit is unplugged or powered off.	Verify compatibility with your specific BEKO or Arcelik model. Check AC unit power supply.
Display on remote is dim or blank.	Low battery power.	Replace batteries.

7. Specifications

- **Model Numbers:** DG11Q1-01, DG11Q1-02
- **Compatibility:** Universal replacement for BEKO and Arcelik Air Conditioners
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** Approximately 6 x 2 x 0.5 inches (15.24 x 5.08 x 1.27 cm)
- **Weight:** Approximately 2.57 ounces (72.86 grams)
- **Color:** Black
- **Special Feature:** Ergonomic design

8. Warranty and Support

This ALLIMITY remote control is designed for reliable performance. For specific warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DH2J4RR8

More documents and user manuals: **https://manuals.plus/**