Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EaseZen FE-7127

EaseZen Cordless Calf Massager Instruction Manual

Model: FE-7127-Black

1. Introduction

The EaseZen Cordless Calf Massager is designed to provide air compression massage with heat and vibration therapy for circulation and muscle recovery. This portable device offers wireless freedom, allowing for flexible use on calves, thighs, and arms. It features multiple modes and intensity levels to customize your massage experience.



Image: EaseZen Cordless Calf Massager in use, highlighting its portable design and application.

2. Important Safety Information

- Do not use on injured or inflamed areas.
- Avoid prolonged use on the same area to prevent burns.
- Keep away from heat and open flames.
- Do not submerge in water.
- Allow the massager to cool down before storing.
- Charge on a fire-resistant surface.

- Do not use while sleeping or in a bathtub or shower.

3. What's Included

Your EaseZen Cordless Calf Massager package includes the following items:

- Air Compression Calf Massager (2 units)
- Type-C Charging Cable
- User Manual
- Extension Piece (2 units)
- High-End Packaging (for storage)



Image: Contents of the EaseZen Cordless Calf Massager package, showing the massagers, charging cable, manual, and extension pieces.

4. Setup and First Use

4.1 Charging the Device

Before first use, fully charge both massager units. The device features a built-in 2500 mAh lithium-ion battery and a universal Type-C port.

1. Locate the Type-C charging port on each massager unit.
2. Connect the provided Type-C charging cable to the port.
3. Connect the other end of the cable to any USB power source (e.g., laptop, adapter, power bank).
4. A full charge takes approximately 3.5 hours. The indicator lights will show charging status.

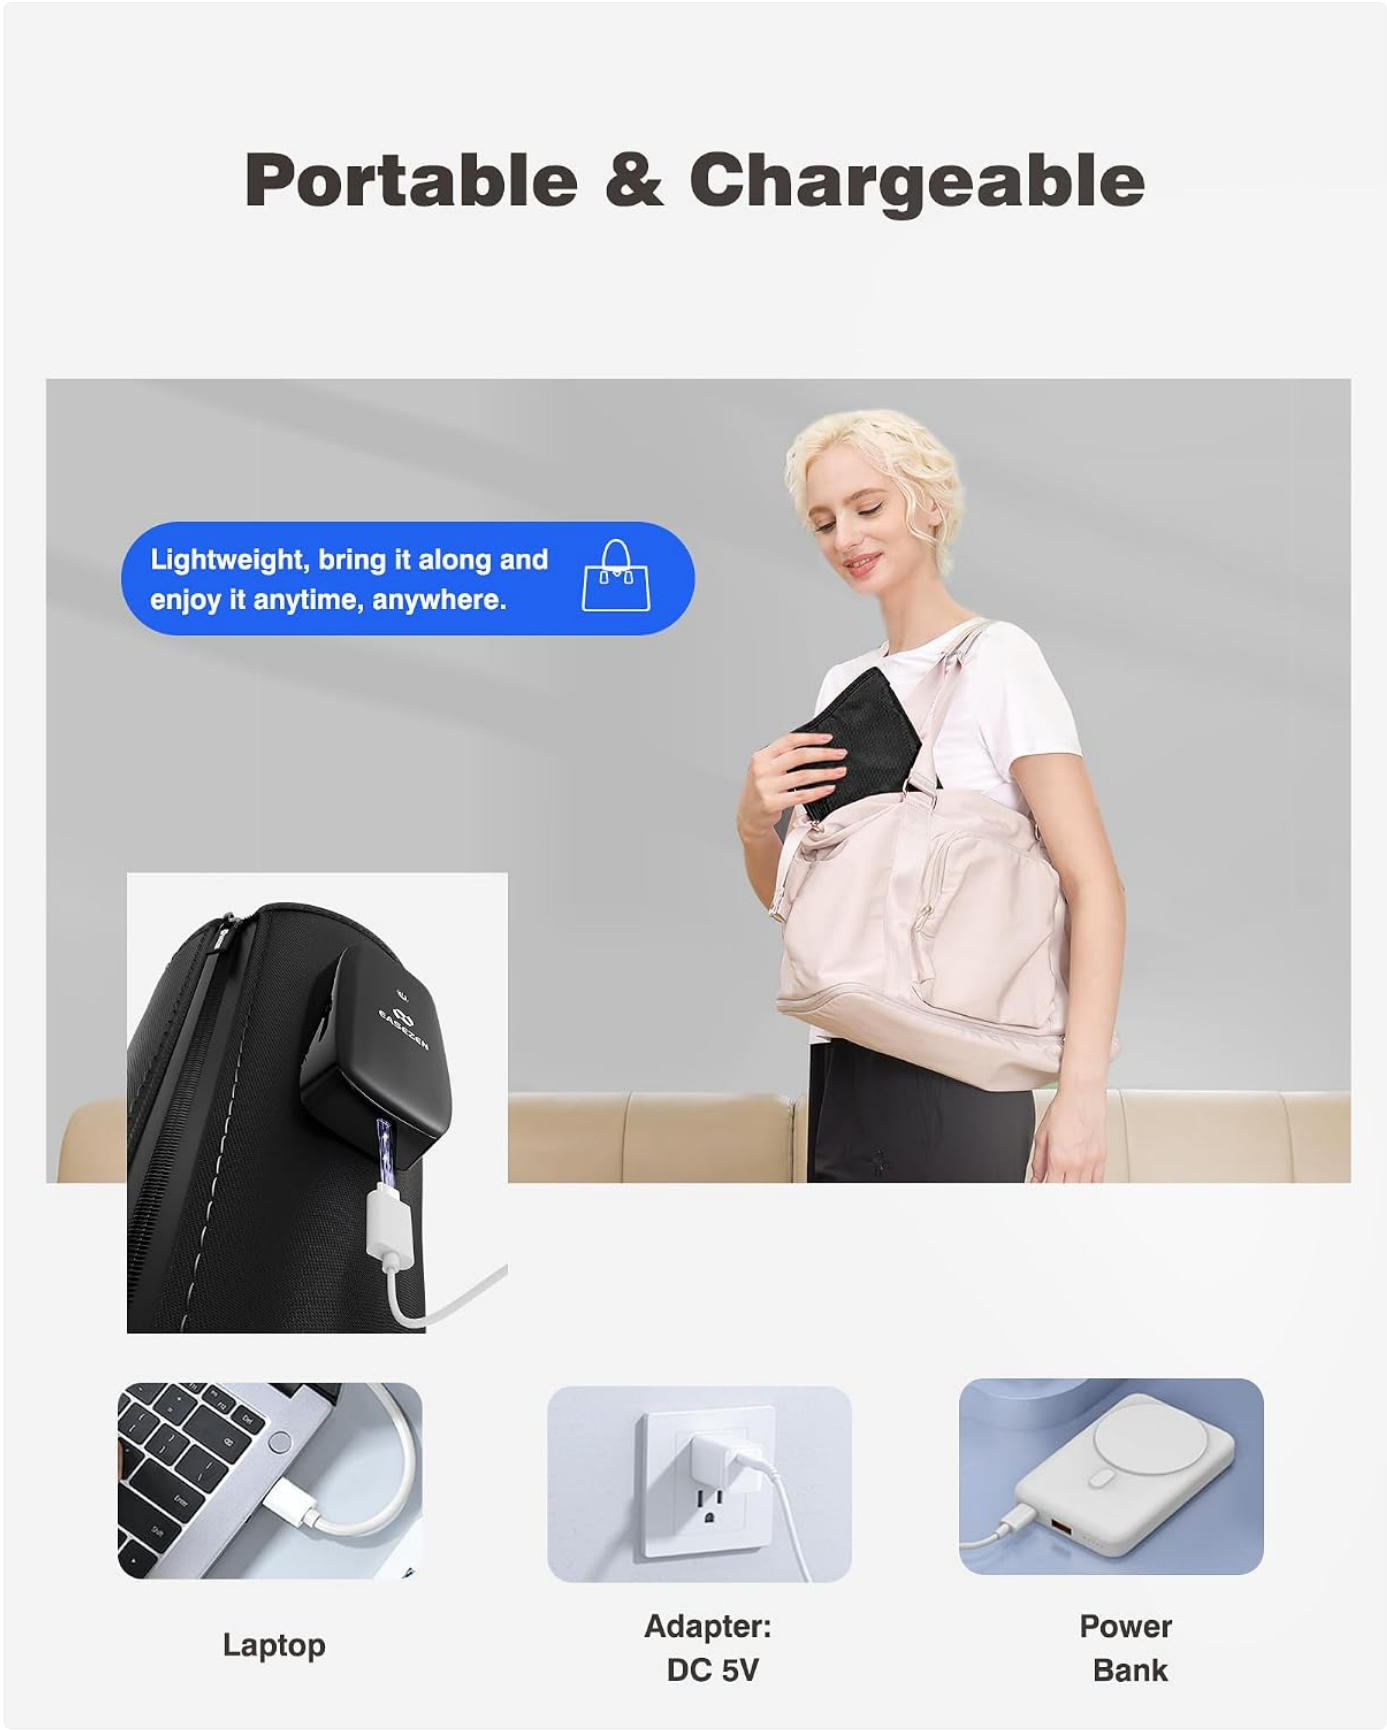


Image: Charging the EaseZen Cordless Calf Massager using a Type-C cable with various power sources.

4.2 Attaching and Securing the Massager

The massagers are designed for easy application. They can be used on calves, thighs, or arms.

1. Confirm the left and right direction of each massager unit.
2. Place the massager around your calf, thigh, or arm in the appropriate position.
3. Secure the massager using the zipper and large-caliber Velcro straps. Ensure a snug but comfortable fit.

4. If the fit is too tight or too loose, adjust the Velcro or use the included extension pieces.

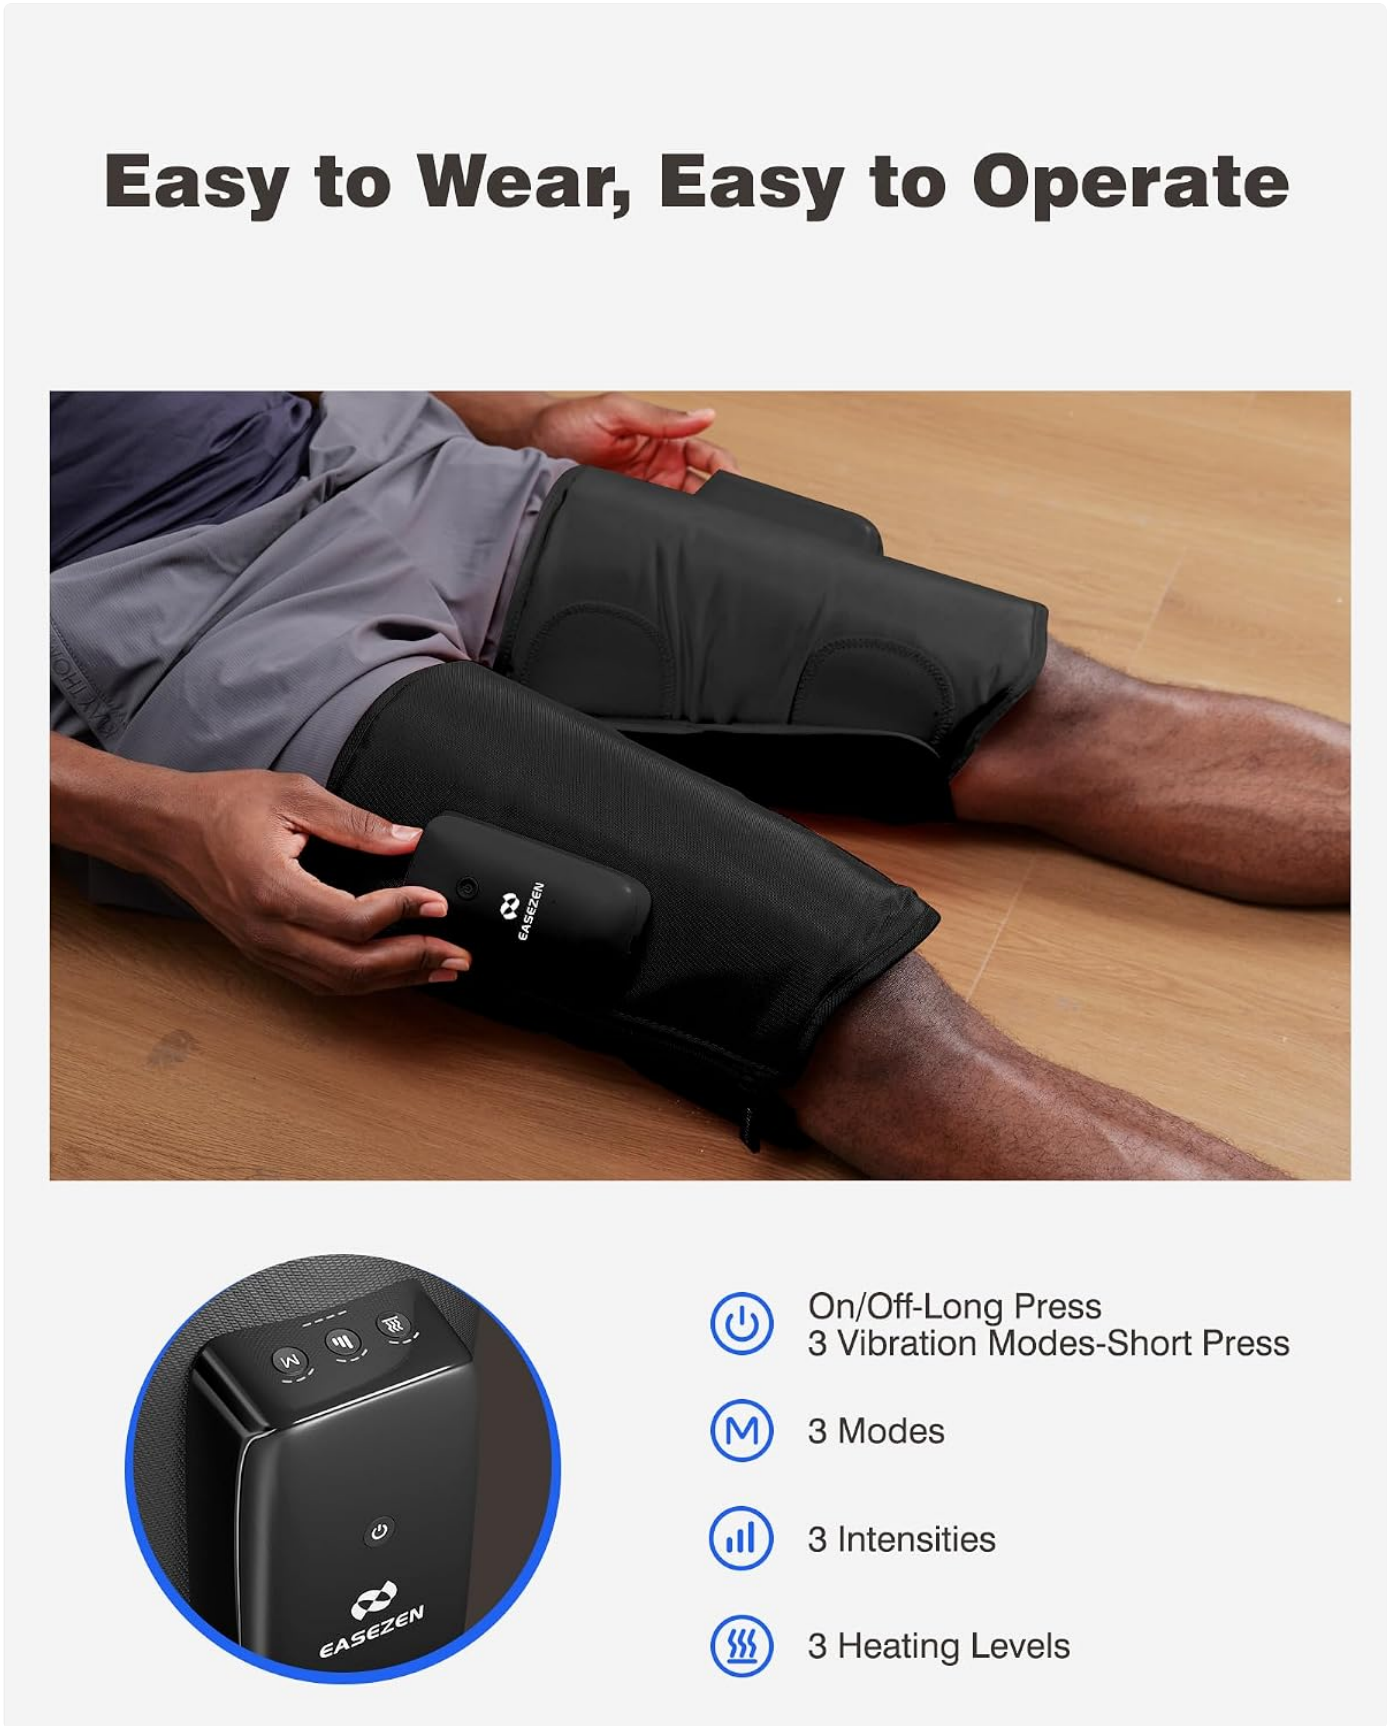


Image: Step-by-step guide on how to wear the massager correctly.

5. Operating Instructions

The control panel on each unit allows you to easily manage the massage settings.



Image: Control panel of the EaseZen Cordless Calf Massager.

- **Power On/Off:** Long press the power button () to turn the device on or off.
- **Modes:** Press the 'M' button to cycle through 3 different massage modes. These modes mimic manual kneading with 2x2 air chambers.
- **Intensity Levels:** Press the intensity button (☰) to select from 3 intensity levels (280mmHg for relaxing, 310mmHg for daily use, 345mmHg for professional/athlete).
- **Heating Levels:** Press the heat button (♨) to choose from 3 heating levels (100.4°F, 109.4°F, 118.4°F).

- **Vibration Modes:** Short press the vibration button (⌐) to select from 3 vibration modes.

The device is equipped with 2x2 air chambers that inflate and deflate to provide a compression massage, promoting blood circulation and relieving muscle tension.

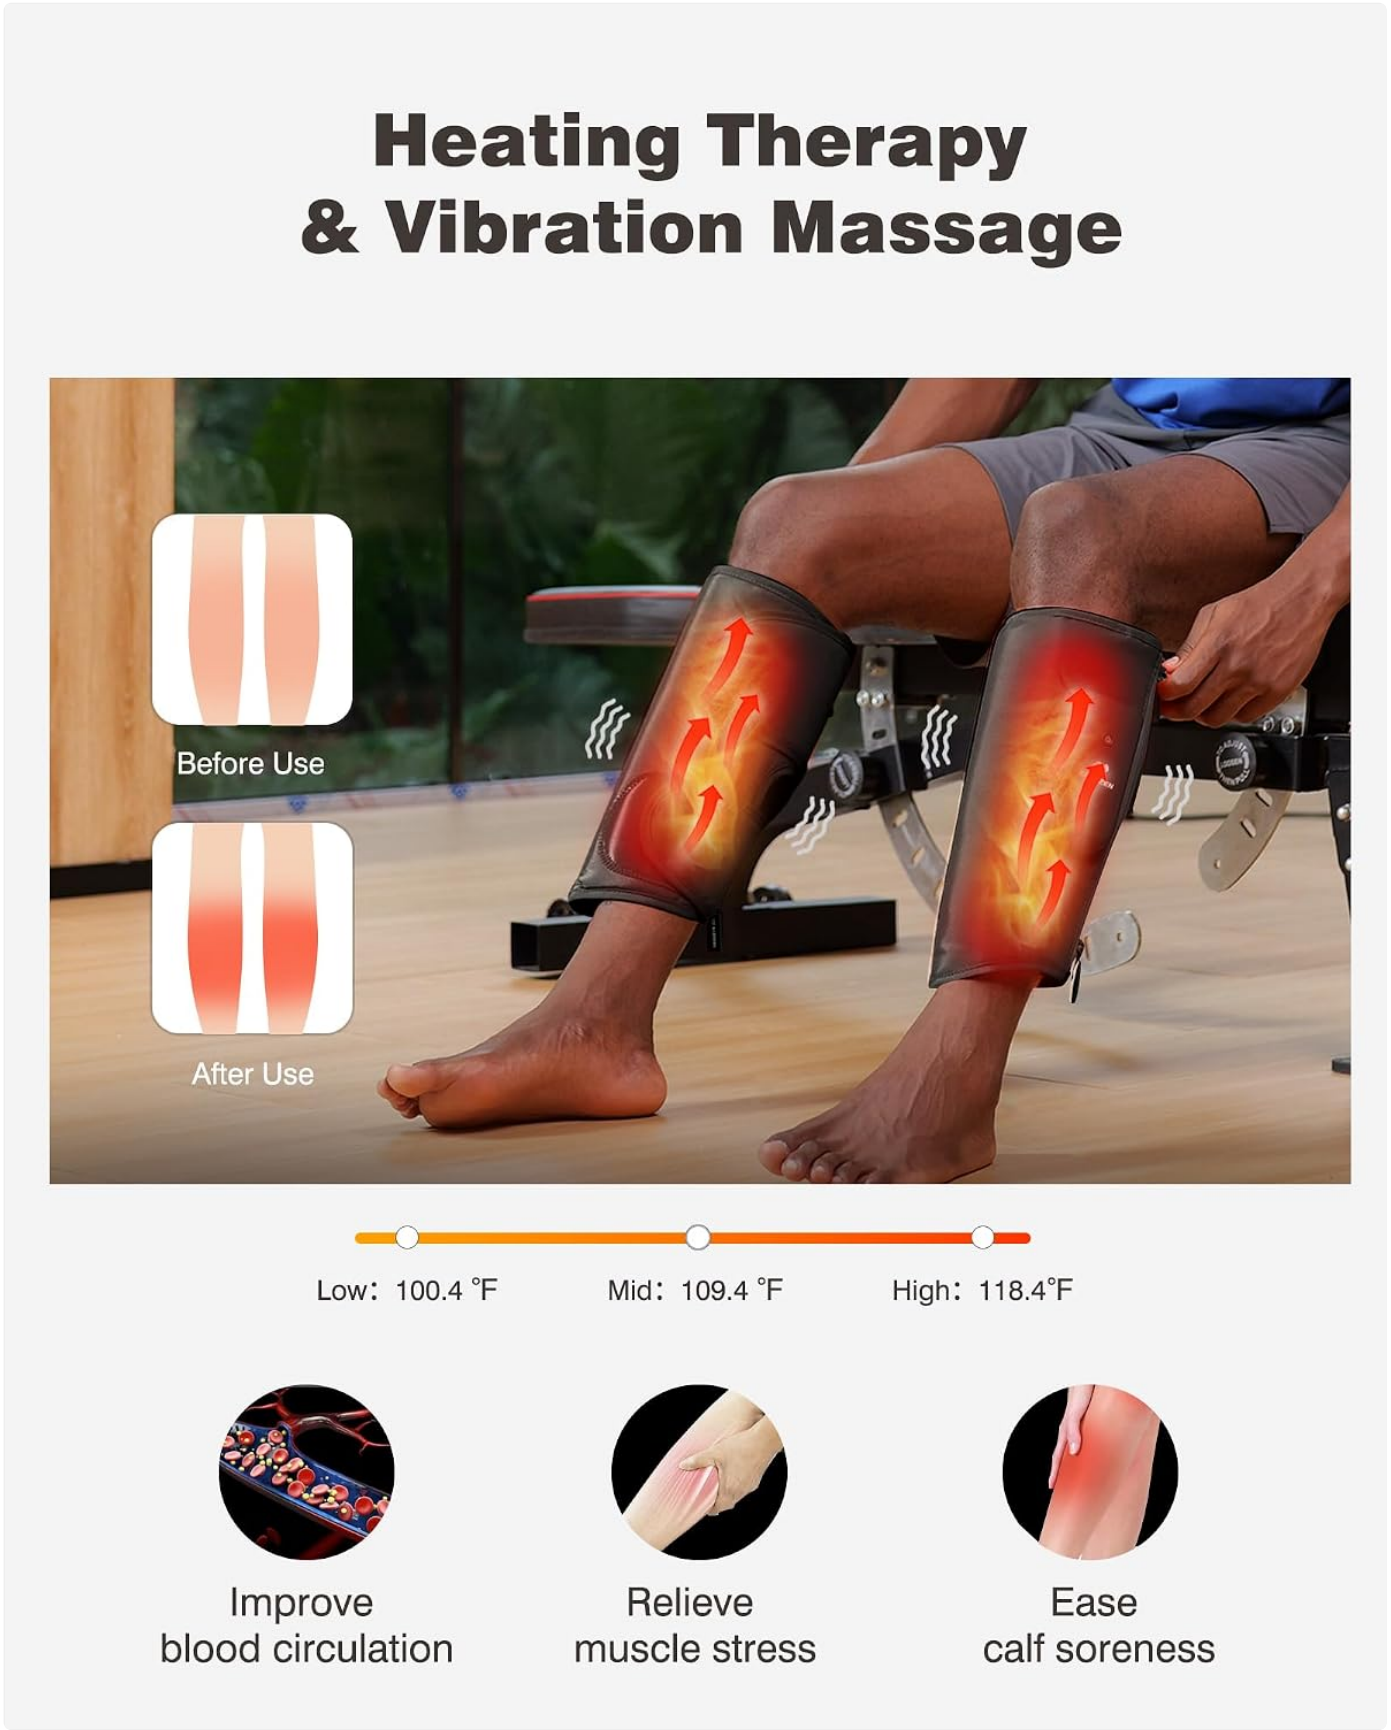


Image: Heat therapy function with three temperature levels.

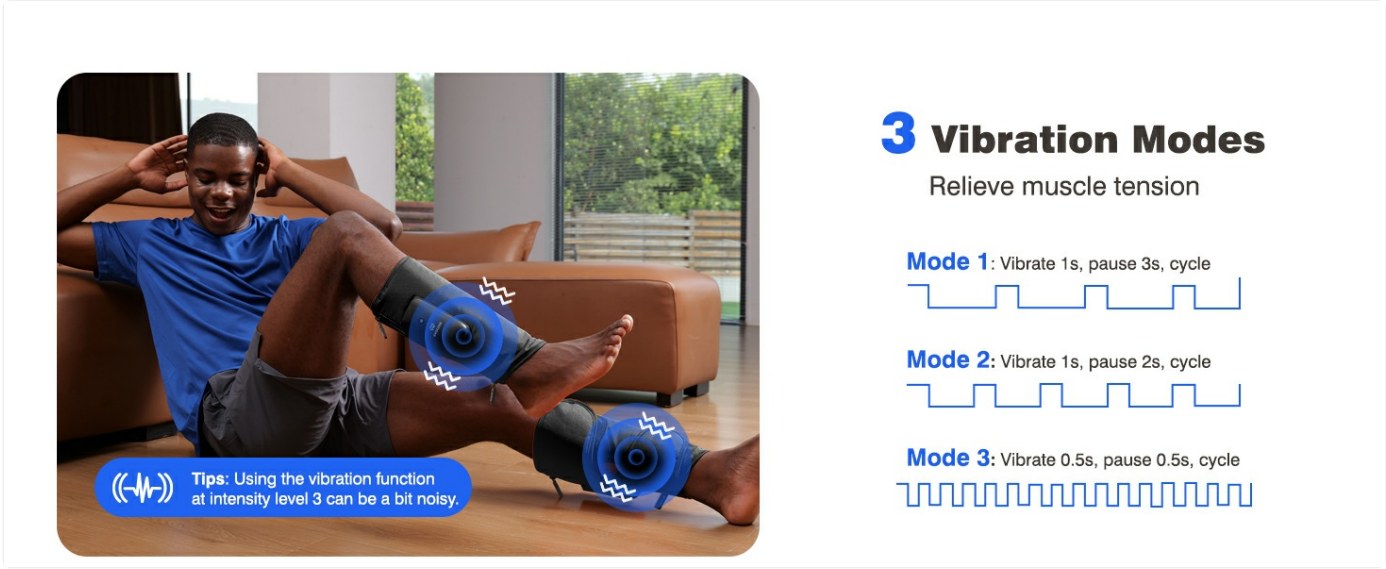


Image: Visual representation of massage modes and intensity levels.

6. Adjusting the Fit with Extension Pieces

The massager comes with two extension pieces to accommodate various leg and arm sizes, ensuring a comfortable and effective massage for more users.

1. If the massager feels too tight, or if you need to use it on a larger area (e.g., thighs), attach an extension piece.
2. Align the Velcro on the extension piece with the Velcro on the massager unit.
3. Press firmly to secure the extension piece, increasing the overall length and circumference.
4. Adjust the fit as needed to ensure comfort and proper compression.

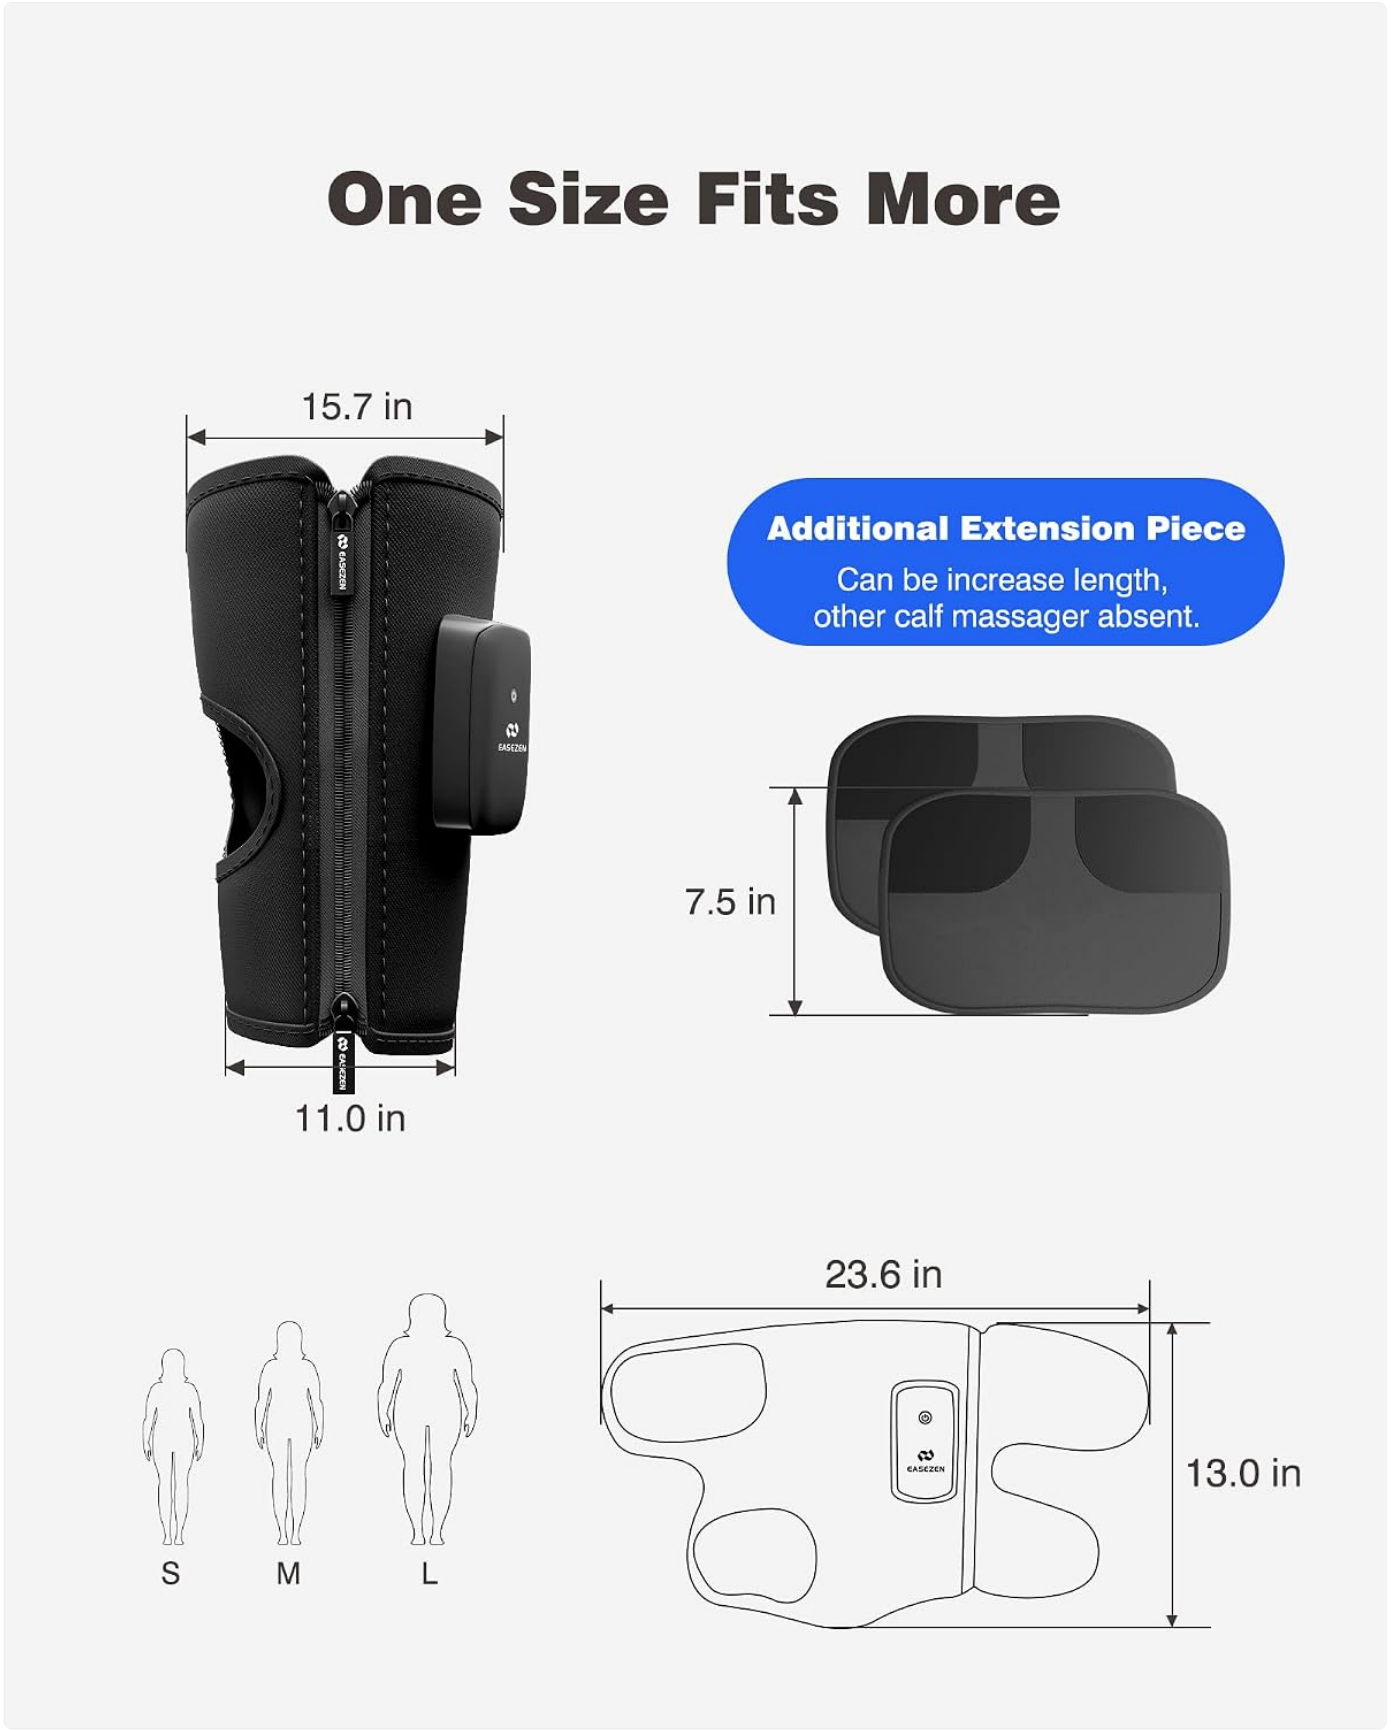


Image: Dimensions of the massager and how to use extension pieces for a customized fit.

7. Multi-Purpose Application

The cordless design allows for versatile use on different body parts:

- **Calves:** Ideal for relieving muscle soreness and improving circulation after exercise or long periods of standing.
- **Thighs:** Use with extension pieces for compression and relaxation of thigh muscles.

- **Arms:** Can be applied to arms for muscle recovery and tension relief.



Image: Demonstrating the massager's use on calves, arms, and thighs.

8. Maintenance and Care

- Clean the massager with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

- Ensure the massager is fully charged before long-term storage to maintain battery health.

9. Troubleshooting

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Weak compression:** Check if the massager is securely fastened. If using extension pieces, ensure they are properly attached. Increase intensity level.
- **No heat:** Ensure the heat function is activated via the heat button. Allow a few minutes for the heat to build up.
- **Vibration is loud:** The vibration can be louder at the highest setting. If you prefer a quieter massage, switch to a lower vibration mode or turn off the vibration function.
- **Discomfort during use:** Loosen the fit slightly or reduce the intensity level. Ensure the massager is not used on injured or inflamed areas.

10. Specifications

Product Dimensions	21.65 x 9.45 x 9.06 inches
Item Weight	2.4 Pounds
Model Number	FE-7204B (Note: Product title indicates FE-7127-Black, please verify model number on packaging)
Power Source	Battery Powered (Built-in 2500 mAh Lithium-ion battery)
Material	Nylon
Manufacturer	EaseZen

11. Warranty and Support

The EaseZen cordless calf massager comes with a **1-year warranty**, offering free replacements if anything goes wrong within the first year. For support or warranty claims, please contact EaseZen customer service through their official channels or the retailer where the product was purchased.
Visit the EaseZen Store on Amazon for more information and contact options.

© 2026 EaseZen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DH2JNMNV

More documents and user manuals: **https://manuals.plus/**