Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall FC10

oneisall 4-in-1 Pet Grooming Kit Instruction Manual

Model: FC10

Brand: oneisall

Introduction

The oneisall 4-in-1 Pet Grooming Kit is a versatile tool designed for comprehensive pet grooming. This kit includes multiple interchangeable heads for various grooming needs, such as full-body trimming, paw pad grooming, and nail grinding. It features a quiet operation, long-lasting battery, and an integrated LED light for enhanced precision and safety during use.

Product Overview and What's Included

The oneisall 4-in-1 Pet Grooming Kit provides a complete solution for your pet's grooming needs. The package includes the following components:

- Main Grooming Device with LED Light
- Standard Dog Clippers Blade Attachment
- Dog Paw Trimmer Blade Attachment
- Dog Hair Trimmer Curved Blade Attachment
- Dog Nail Grinder Attachment
- 8 Guide Combs (various lengths: 2mm, 3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- Type-C Charging Cable
- Maintenance Oil



Figure 1: Complete oneisall 4-in-1 Pet Grooming Kit with all included attachments.

Key Features

- **4-in-1 Versatility**: Easily switch between a standard electric dog trimmer, a dog paw trimmer blade, a dog nail grinder, and a precision silent dog clippers curved blade head to address all grooming areas from head to paw.
- **Independent LED Light**: An integrated LED light can be controlled separately, providing enhanced visibility and precision, especially for delicate areas like paw pads and nails, reducing the risk of accidental cuts.

- **Cordless and Quiet Operation**: Designed for dogs, cats, and other pets, the clippers operate below 50 decibels, minimizing noise to prevent startling your pet. The cordless design offers freedom of movement for grooming indoors or outdoors.
- **Efficient Trimming**: Equipped with a 1.8-inch wide blade and a powerful 7000 RPM motor, these clippers offer superior grooming performance, reducing overall grooming time compared to standard clippers.
- **Long-lasting 2000mAh Battery**: The rechargeable 2000mAh battery provides extended operating time, suitable for grooming multiple pets or larger breeds. A visible battery life display helps monitor power levels, and the Type-C charging cable ensures convenient charging.



Figure 2: The 4 interchangeable cutter heads for various grooming needs (Body, Face, Nails, Paw).



Figure 3: The independent LED light provides clear visibility for precise and safe grooming, especially for paw pads.

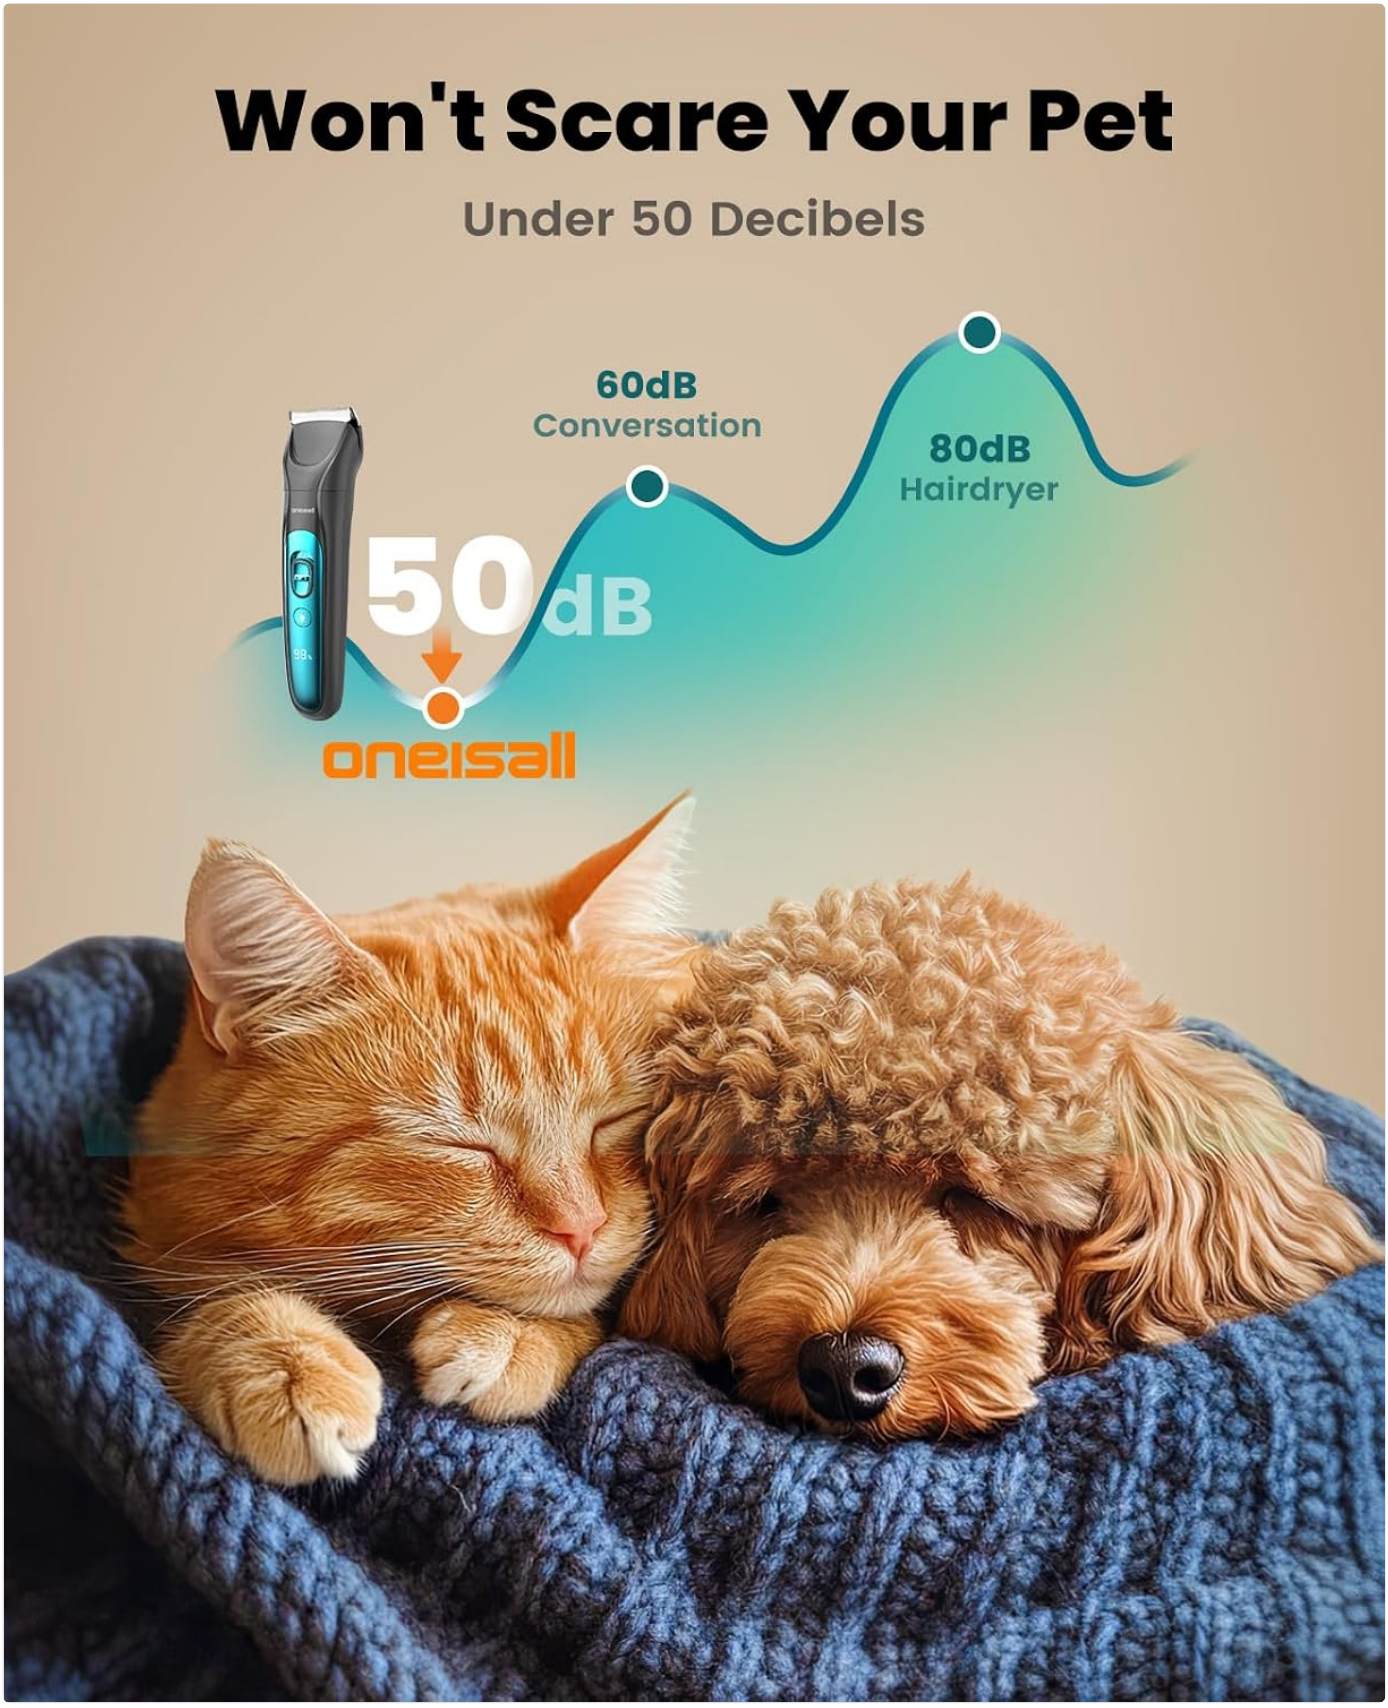


Figure 4: The clippers operate quietly, below 50 decibels, to ensure a comfortable experience for pets.

Setup

Charging the Device

1. Ensure the device is turned off before charging.
2. Connect the Type-C charging cable to the charging port at the bottom of the device.

3. Plug the other end of the cable into a compatible USB power adapter (not included) or a computer's USB port.
4. The battery display on the device will indicate the charging status. A full charge typically takes approximately 3 hours.
5. Once fully charged, disconnect the charging cable. The device can operate for up to 5 hours on a full charge.

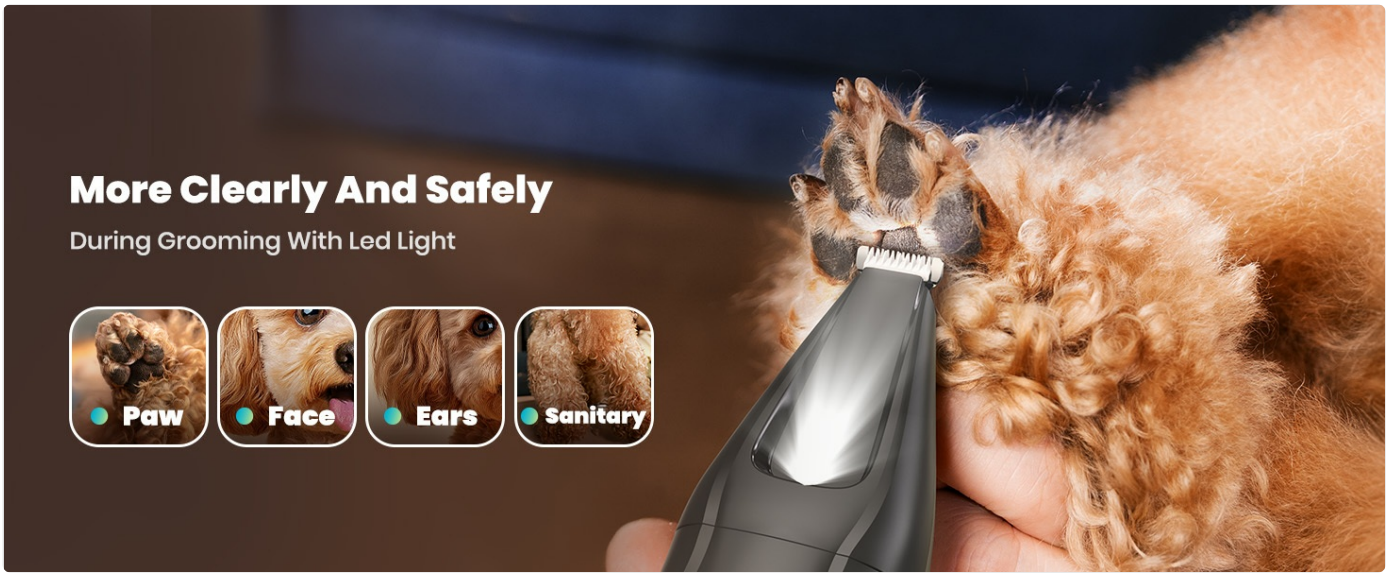


Figure 5: The device features a Type-C charging port and a clear battery display for convenience.

Attaching and Detaching Blades/Heads

1. To attach a blade or head, align the attachment with the main body of the device and gently push until it clicks into place.
2. To detach, firmly grasp the attachment and pull it away from the device.

Operating Instructions

General Operation

1. **Power On/Off**: Press the main power button to turn the device on or off.
2. **LED Light Control**: Press the separate LED light button to activate or deactivate the integrated light for improved visibility.

Using the Clippers (Standard, Paw, Curved Blades)

1. Select the appropriate blade attachment (standard, paw, or curved) for the grooming area.
2. For body trimming, attach one of the 8 guide combs to achieve desired hair length. Ensure the comb is securely fastened.
3. Hold the device firmly and gently guide the clippers through your pet's fur in the direction of hair growth.
4. Use the LED light for better visibility in hard-to-reach or sensitive areas.



Figure 6: The 1.8-inch wide blade and 7000 RPM motor ensure efficient and smooth trimming.



Figure 7: The kit includes 8 guide combs to achieve various hair lengths for different grooming styles.

Using the Nail Grinder

1. Attach the nail grinder head to the device.
2. Gently hold your pet's paw and carefully place their nail into one of the grinding ports.
3. Grind the nail in short intervals, checking frequently to avoid grinding too much or causing discomfort.
4. The LED light can be used to illuminate the nail, helping to identify the quick and prevent over-grinding.



Figure 8: The nail grinder attachment makes nail care easy and safe with its strong power and integrated light.

Maintenance

Cleaning the Blades

1. After each use, detach the blade head from the device.
2. Use the included cleaning brush to remove any trapped hair from the blades.

3. The blades are washable. Rinse them under running water to thoroughly clean. Ensure they are completely dry before reattaching or storing.
4. Apply a few drops of the provided maintenance oil to the blades regularly to ensure smooth operation and prolong their lifespan.

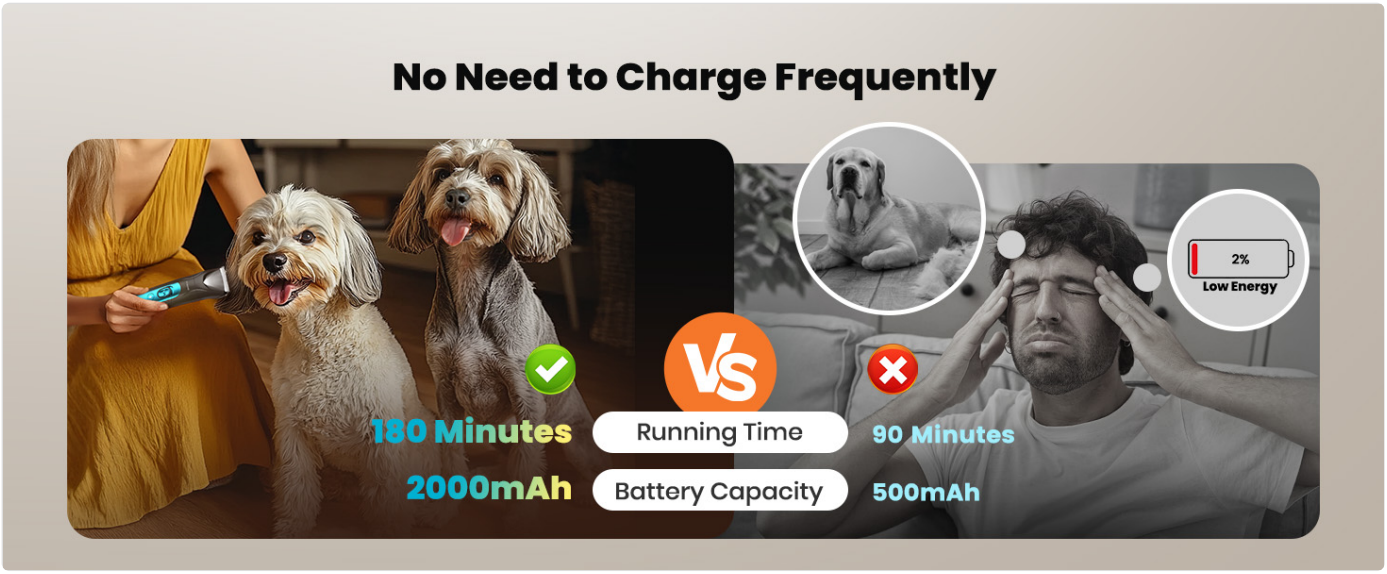


Figure 9: The detachable blades are designed for easy cleaning under running water.

Storage

Store the device and all attachments in a dry, cool place, away from direct sunlight and moisture. Keep out of reach of children and pets.

Troubleshooting

Problem	Possible Cause	Solution
Device not turning on.	Low battery; device not charged.	Charge the device fully using the provided Type-C cable.
Blades not cutting effectively or pulling hair.	Blades are dull, dirty, or not properly oiled. Hair is matted.	Clean and oil the blades. Ensure the blade is properly attached. Brush your pet's hair before grooming to remove tangles.
Nail grinder is slow or ineffective.	Grinding stone is worn or dirty.	Clean the grinding stone. If worn, consider replacing the attachment if available.
Device is making unusual noise.	Blades are clogged or not properly aligned.	Turn off the device, remove and clean the blade head, then reattach it securely.

Specifications

- **Model Number**: FC10
- **Battery Capacity**: 2000 mAh
- **Motor Speed**: 7000 RPM
- **Blade Width**: 1.8 inches
- **Charging Method**: Type-C USB
- **Charging Time**: Approximately 3 hours
- **Working Time**: Up to 5 hours

- **Noise Level**: Below 50 dB
- **Product Dimensions**: 1 x 7 x 2 inches (182 x 45 x 40 mm)
- **Item Weight**: 0.48 Pounds (216g)
- **Recommended Uses**: Ear, Paws, Face, Legs, Body
- **Color**: Blue



Figure 10: Detailed product dimensions and technical specifications.

Warranty and Support

oneisall offers a 2-year warranty on this product. For any questions, concerns, or support needs, please contact oneisall customer service. They provide 24-hour customer service to assist you.
Contact information can typically be found on the product packaging or the official oneisall website.

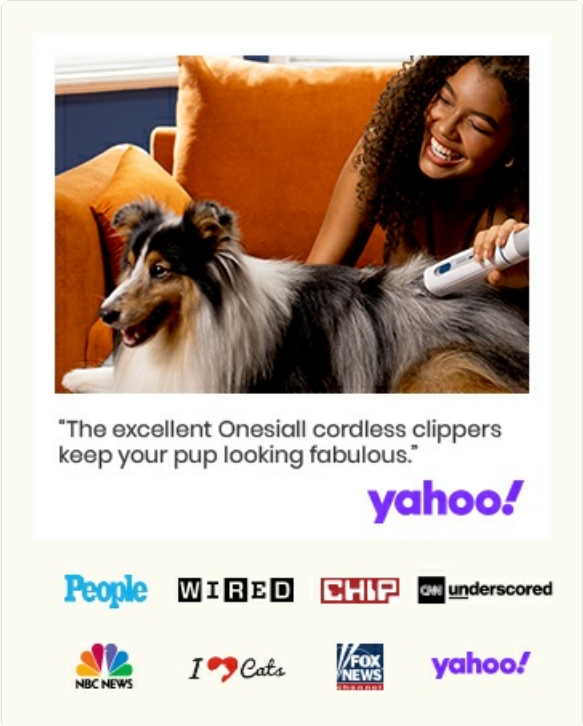


Figure 11: Information regarding customer service and product warranty.

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHD2V9J2

More documents and user manuals: **https://manuals.plus/**