Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bell+Howell 6445

Bell+Howell Elegant Cordless Table Lamps (Model 6445)

Instruction Manual

Introduction

Thank you for choosing the Bell+Howell Elegant Cordless Table Lamps. This manual provides essential information for the safe and efficient operation of your new lamps. These rechargeable LED lamps offer touch activation, dimming capabilities, and three distinct light settings, designed for versatile indoor use.



Image: Two Bell+Howell Elegant Cordless Table Lamps demonstrating different light settings.

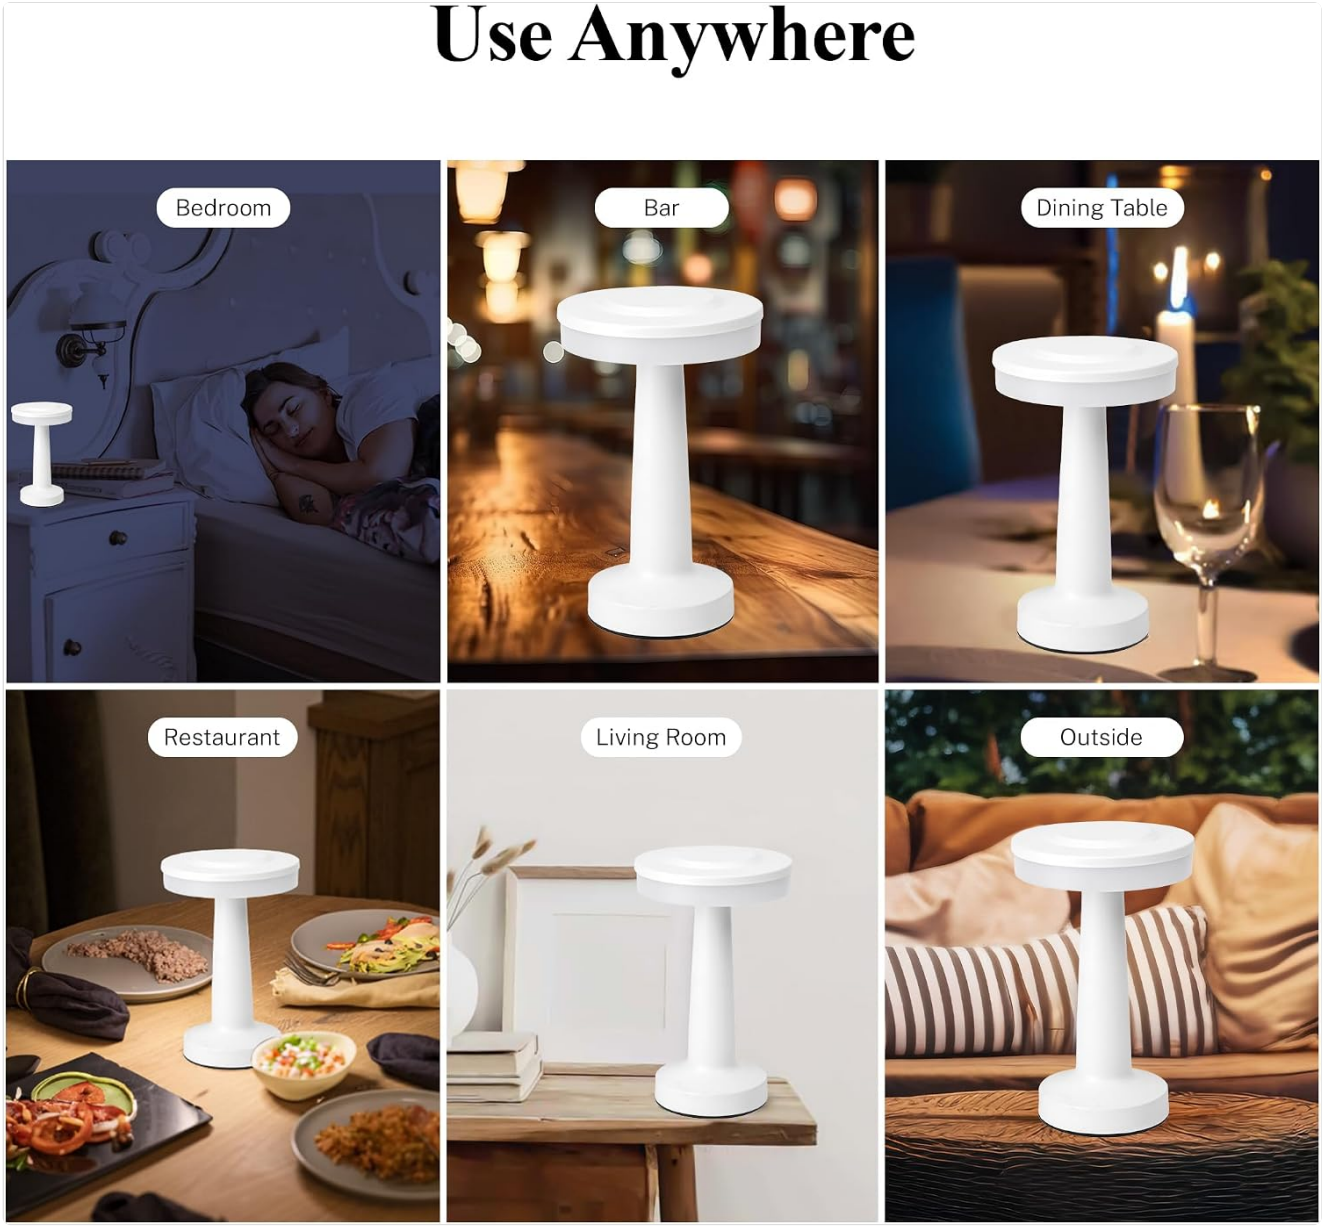


Image: The Bell+Howell lamp used in diverse environments, highlighting its portability.

What's in the Box

Your package should contain the following items:

- 2 x Bell+Howell Elegant Cordless Table Lamps
- 2 x USB-C Charging Cables (31.5 inches each)



Image: The Bell+Howell lamp with its USB-C charging cable.

Setup

1. **Initial Charge:** Before first use, fully charge both lamps. Connect the provided USB-C cable to the charging port on the lamp and plug the other end into a compatible USB power adapter (not included). The charging time is approximately 3.5 to 4.5 hours.
2. **Placement:** Place the lamps on a stable, flat surface. These lamps are designed for indoor use.



Image: Lamp dimensions and battery performance details.

Operating Instructions

1. **Power On/Off:** Gently tap the top surface of the lamp to turn it on or off.



Image: Demonstrating the touch activation feature.

2. **Change Light Settings:** With the lamp on, tap the top surface repeatedly to cycle through the three available light modes:
    - **Warm Light:** For a cozy and inviting ambiance.
    - **White Light:** A neutral, bright illumination.
    - **Daylight:** Simulates natural outdoor light.



Image: The three distinct light settings: White, Warm, and Natural Daylight.

3. **Adjust Brightness (Dimming):** To dim or brighten the light, tap and hold your finger on the top surface of the lamp. The brightness will gradually change. Release your finger when the desired brightness level is reached.

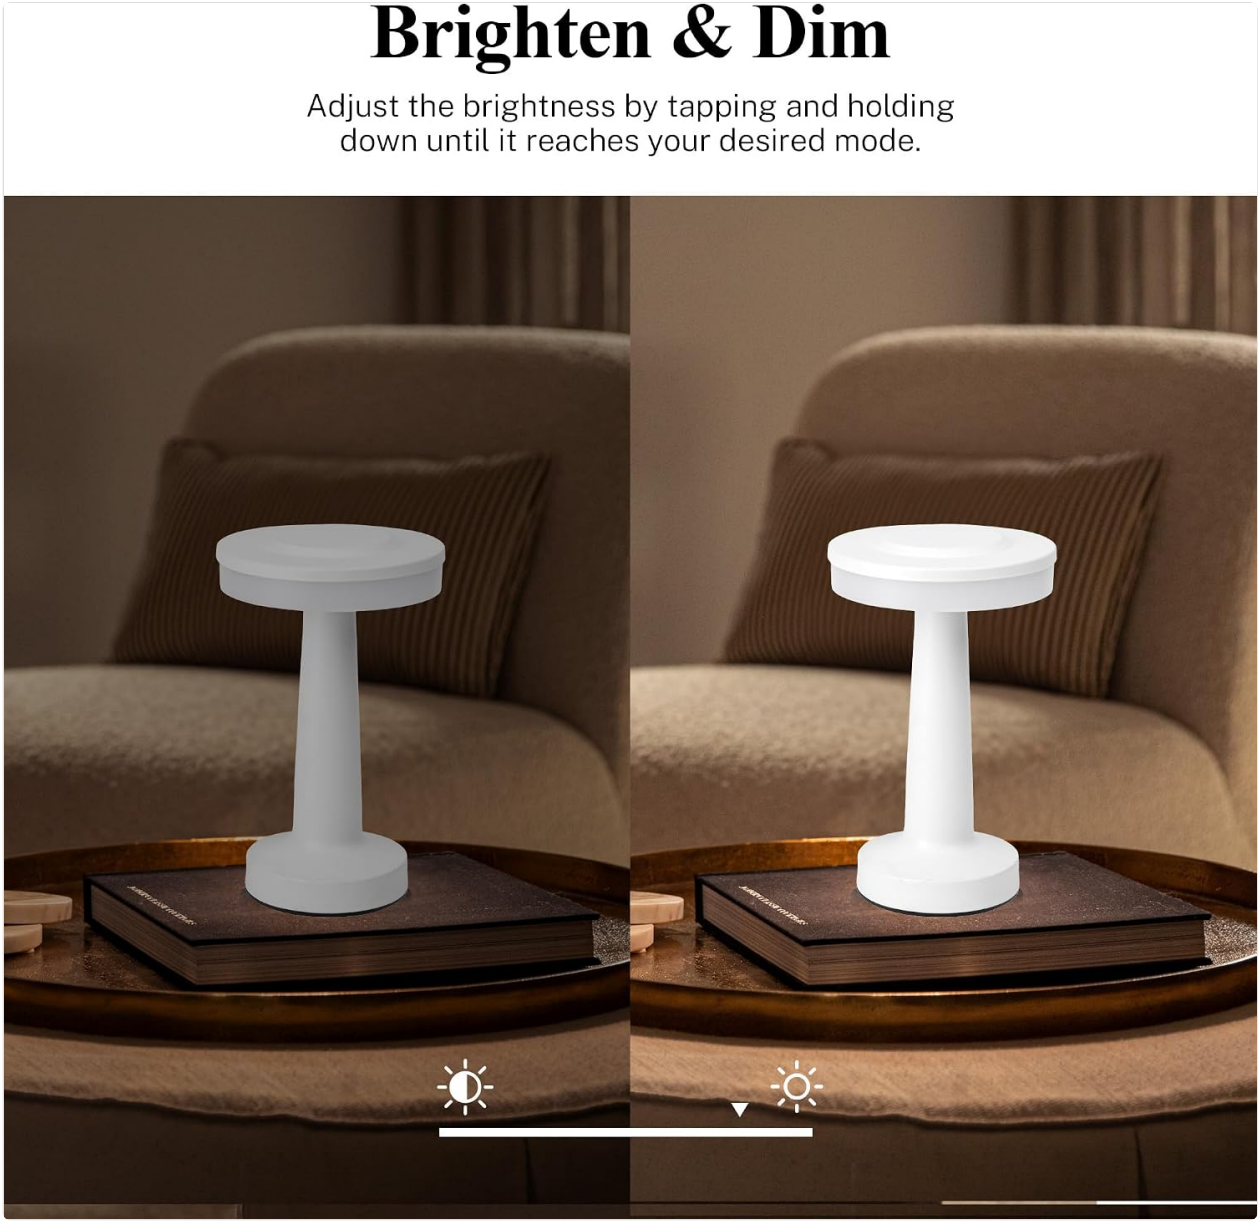


Image: Comparison of dim and bright light settings.

Maintenance

- **Cleaning:** To clean the lamp, ensure it is turned off and disconnected from any charging cable. Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place. It is recommended to fully charge the lamp before storing and to recharge it every few months to maintain battery health.
- **Battery Care:** Avoid fully depleting the battery frequently. Recharge the lamp when the light output noticeably diminishes.

Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp using the provided USB-C cable.

Problem	Possible Cause	Solution
Lamp does not respond to touch.	Insufficient contact or internal issue.	Ensure firm and direct contact with the touch surface. If the issue persists after charging, contact customer support.
Light output is dim or inconsistent.	Low battery or dimming setting.	Recharge the lamp. Tap and hold the touch surface to adjust brightness.
Lamp wobbles on a flat surface.	Uneven base or surface.	Ensure the lamp is placed on a completely flat and stable surface. Inspect the lamp's base for any irregularities.

Specifications

Feature	Detail
Brand	Bell+Howell
Model Name	Bell+Howell Table Lamp 2Pack (Model 6445)
Product Dimensions	4.8"D x 4.8"W x 7.67"H
Item Weight	2.4 pounds (for the set)
Light Source Type	LED
Power Source	Battery Powered (Rechargeable via USB-C)
Special Features	Color Changing (3 modes), Dimmable, Lightweight, Rechargeable, Touch Activated
Material	Iron (Base), Plastic (Shade)
Finish Type	Matte
Indoor/Outdoor Usage	Indoor
Charge Time	3.5 - 4.5 Hours
Run Time	4.5 - 5.5 Hours (depending on brightness setting)

Warranty Information

Bell+Howell products are designed for reliability and performance. For specific warranty details regarding your Elegant Cordless Table Lamps, please refer to the warranty card included with your purchase or visit the official Bell+Howell website. Keep your proof of purchase for any warranty claims.

Customer Support

If you have any questions, require assistance, or encounter issues not covered in this manual, please contact Bell+Howell customer support. Contact information can typically be found on the product packaging or the official Bell+Howell website.

Online Resources: For additional information and support, you may visit theBell+Howell Store on Amazon.

© 2024 Bell+Howell. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHFZD1YP

More documents and user manuals: **https://manuals.plus/**