Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JYX L7 Blue

JYX YH-FR-L7-Blue Portable Bluetooth Speaker User Manual

Model: L7 Blue

Introduction

This manual provides detailed instructions for the safe and efficient use of your JYX YH-FR-L7-Blue Portable Bluetooth Speaker. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: The JYX YH-FR-L7-Blue Portable Bluetooth Speaker, showcasing its compact design and integrated handle.

Important Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and other liquids to prevent electric shock or damage.
- Use only the specified charging cable and power adapter.
- Dispose of the battery and speaker according to local regulations.

Product Overview

Package Contents

- JYX YH-FR-L7-Blue Portable Bluetooth Speaker
- USB Type-C Charging Cable
- User Manual

Speaker Components and Controls

Familiarize yourself with the speaker's control panel and ports as illustrated below:

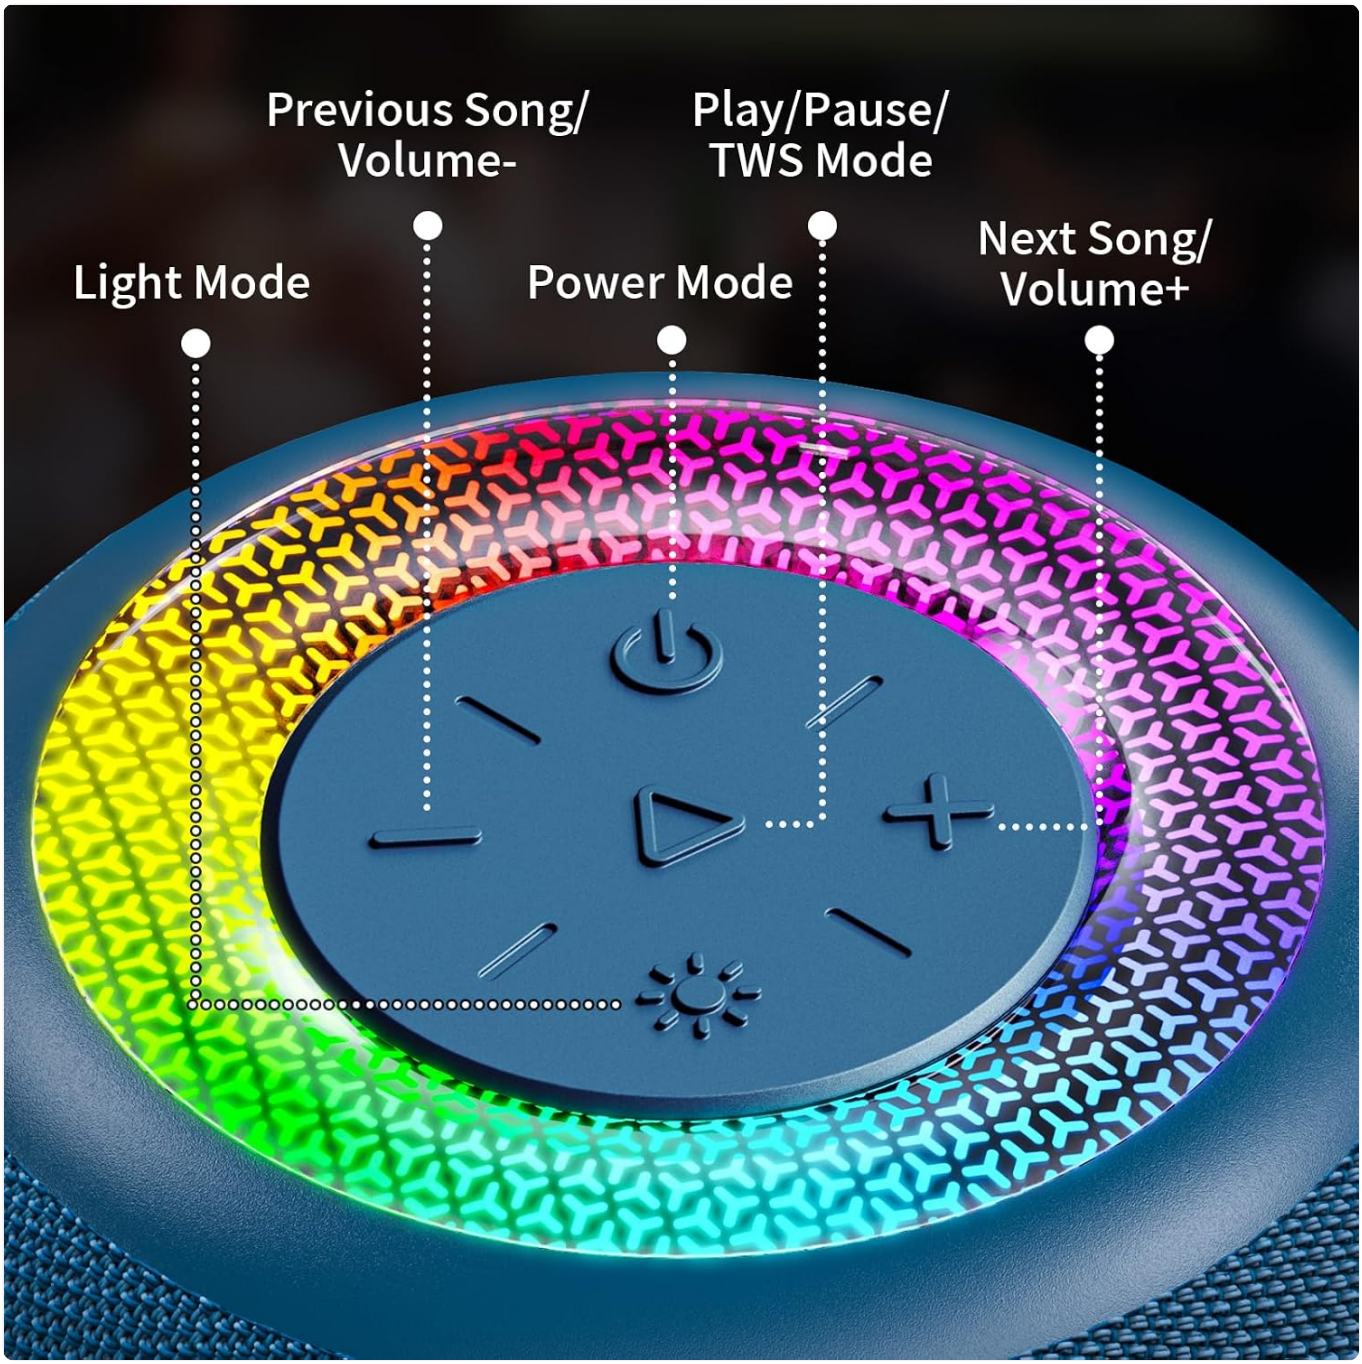


Image: Detailed view of the speaker's top control panel, showing buttons for power, play/pause, volume, and light mode.

1. **Light Mode Button:** Press to cycle through different RGB light effects.
2. **Previous Song** / **Volume Down Button:** Short press for previous track, long press to decrease volume.
3. **Power Mode Button:** Press and hold to power on/off the speaker.
4. **Play**/**Pause** / **TWS Mode Button:** Short press to play or pause audio. Long press to initiate True Wireless Stereo (TWS) pairing.
5. **Next Song** / **Volume Up Button:** Short press for next track, long press to increase volume.



Image: The speaker displaying its compact dimensions (8.3 cm height, 9.5 cm width) and various input options including Bluetooth 5.3, TF Card slot, and Type-C charging port.

- **Type-C Port:** For charging the speaker.
- **TF Card Slot:** For playing audio directly from a TF (MicroSD) card.

Setup

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB Type-C cable to the speaker's Type-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status. A full charge provides approximately 24 hours of playtime.

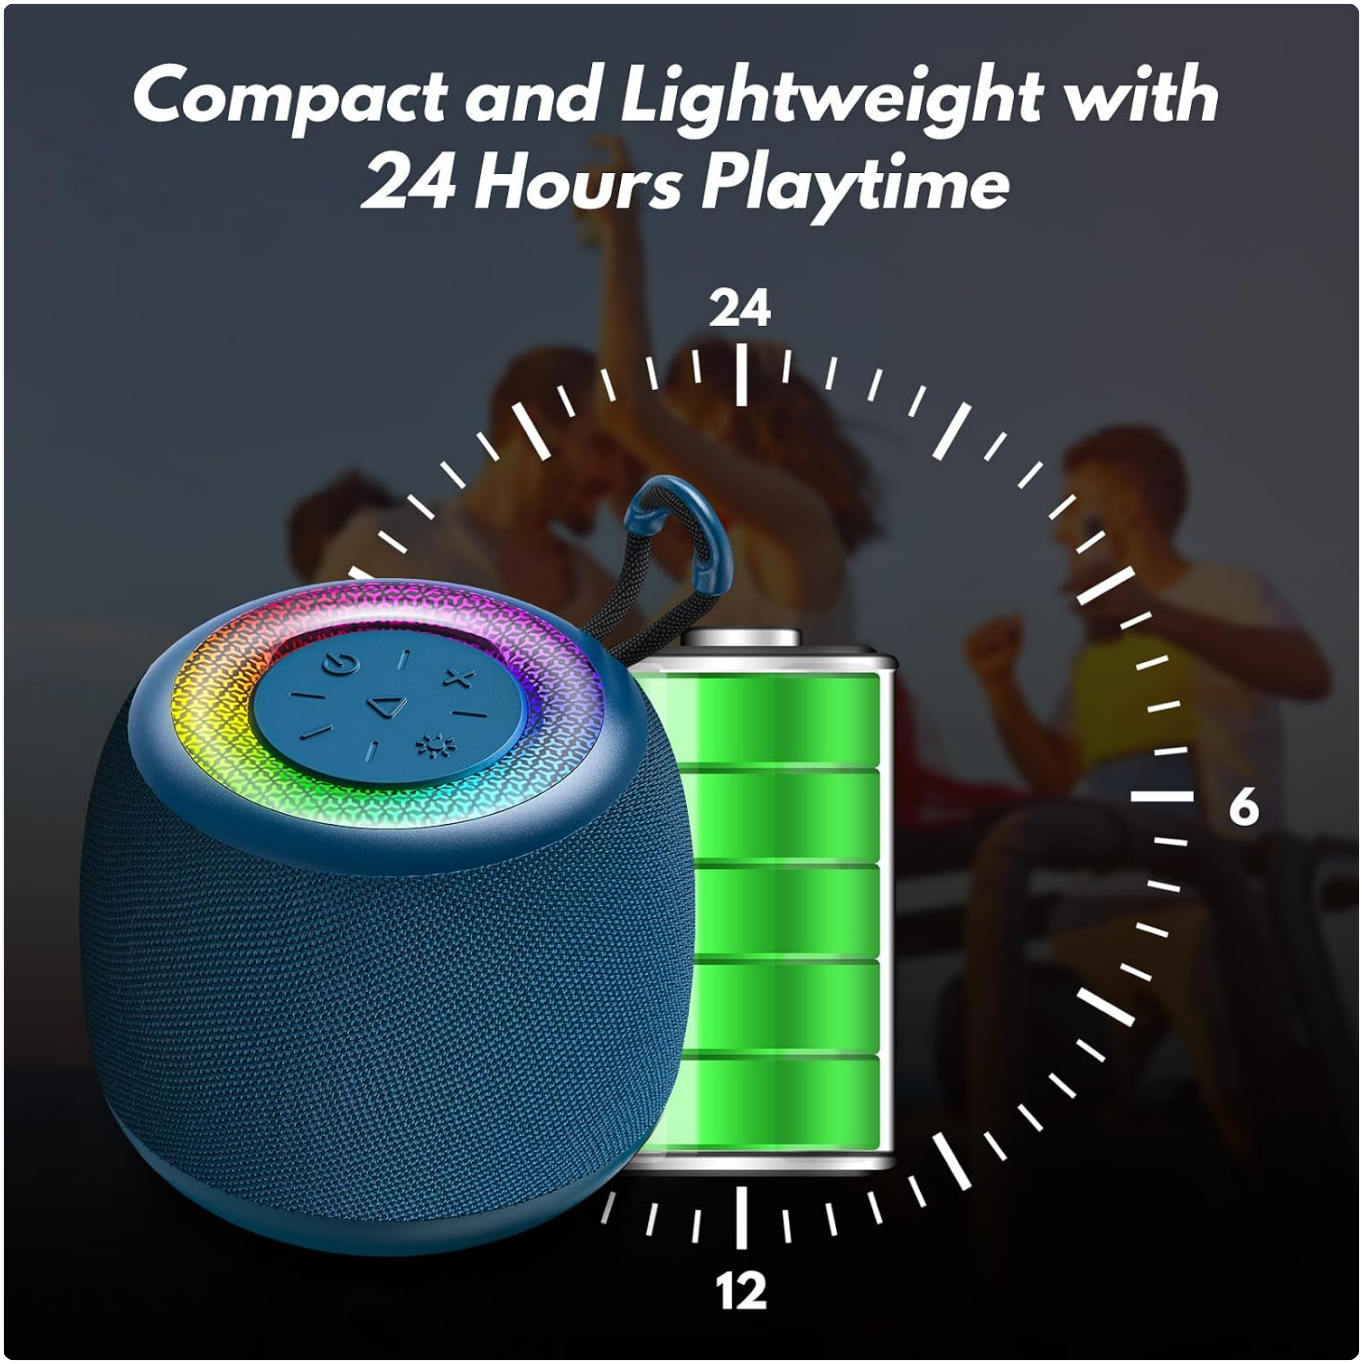


Image: The speaker next to a battery icon and a clock indicating 24 hours of playtime, highlighting its long battery life.

Powering On/Off

- **To Power On:** Press and hold the **Power Mode** button for approximately 3 seconds until you hear an audible prompt and the indicator light illuminates.
- **To Power Off:** Press and hold the **Power Mode** button for approximately 3 seconds until you hear an audible prompt and the indicator light turns off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing blue light).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "JYX YH-FR-L7-Blue" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the blue indicator light will remain solid.

True Wireless Stereo (TWS) Pairing

To achieve an immersive stereo sound experience, you can pair two JYX YH-FR-L7-Blue speakers together.



Image: Two JYX YH-FR-L7-Blue speakers positioned to demonstrate True Wireless Stereo pairing for an immersive audio experience.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers (this will be the primary speaker), long press the **Play/Pause / TWS Mode** button for approximately 3 seconds. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for the secondary speaker. Once connected, both speakers will emit an audible confirmation.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. Audio will play through both speakers in stereo.

Operating Instructions

Audio Playback

- **Play/Pause:** Short press the **Play/Pause** button.

- **Volume Up:** Long press the **Next Song / Volume Up** button.
- **Volume Down:** Long press the **Previous Song / Volume Down** button.
- **Next Track:** Short press the **Next Song / Volume Up** button.
- **Previous Track:** Short press the **Previous Song / Volume Down** button.

Light Modes

The speaker features multiple RGB light modes. Press the **Light Mode** button to cycle through the available lighting effects.



Image: Three JYX YH-FR-L7-Blue speakers showcasing their vibrant RGB light shows, illustrating the dynamic lighting effects.

TF Card Playback

Insert a TF (MicroSD) card with audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playing music. Use the playback controls as described above.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the Type-C cable.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing blue light). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget the speaker from your device's Bluetooth list and try pairing again. Restart both the speaker and your device.
No sound.	Check the volume level on both the speaker and your connected device. Ensure the speaker is successfully paired via Bluetooth or that the TF card is properly inserted. If using TWS, ensure both speakers are correctly paired to each other and then to your device.
TWS pairing fails.	Ensure both speakers are fully charged and not connected to any other Bluetooth device. Place the speakers close to each other during TWS pairing. Repeat the TWS pairing steps carefully.

Specifications

Feature	Detail
Brand	JYX
Model Name	L7 Blue
Product Dimensions	11.8 x 8.8 x 9.7 cm
Item Weight	370 g
Connectivity Technology	Bluetooth 5.3
Speaker Maximum Output Power	15 Watts
Audio Output Mode	Stereo
Speaker Type	Outdoor
Special Features	LED Light, Lightweight, Portable

Feature	Detail
Mounting Type	Handlebar Mount
Batteries	1 Lithium Polymer battery (included)
Recommended Uses	Business/Party/Home Theater/Gaming/Theater/Travel, For Music Players
Compatible Devices	Smartphone, Tablet

Warranty and Support

JYX products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official JYX website.
If you encounter any issues or have questions about your JYX YH-FR-L7-Blue speaker, please contact JYX customer support for assistance. Contact details can typically be found on the product packaging or the official JYX website.

© 2025 JYX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHH15YZ1

More documents and user manuals: **https://manuals.plus/**