Rowenta GZ7540WO

Rowenta X-Clean 10 Cordless Vacuum Cleaner and Washer User Manual

Model: GZ7540WO

1. Introduction

The Rowenta X-Clean 10 is a versatile 2-in-1 cordless vacuum cleaner and washer designed to provide a complete, fast, and effortless cleaning experience for all types of hard floors. It vacuums and washes in a single pass, making it ideal for tiles, parquet, vinyl, and thin carpets. Its self-propelled Narwal roller and 180° flat design ensure thorough cleaning even in hard-to-reach areas. This manual provides essential information for the safe and efficient operation and maintenance of your appliance.



Figure 1.1: The Rowenta X-Clean 10 in its upright position, showcasing its sleek design and included accessories like the cleaning brush, charging base, and an additional roller.

2. Safety Instructions

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before cleaning or performing any maintenance.
- Do not immerse the appliance, battery, or charging base in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only Rowenta recommended cleaning solutions. Do not use bleach, foaming agents, acids, greasy, or corrosive liquids.
- Do not use the appliance to pick up flammable or combustible liquids, or anything that is burning or smoking.

- Store the appliance indoors in a dry place.
- This appliance is for household use only.

3. Package Contents

Verify that all components are present in the package:

- Rowenta X-Clean 10 Cordless Vacuum Cleaner and Washer Unit
- Charging Base
- Charger
- Cleaning Brush
- Additional Roller



Figure 3.1: Visual representation of the Rowenta X-Clean 10 and its included accessories: the main unit, an additional roller, a cleaning brush, and the charging and cleaning base.

4. Setup

1. **Assembly:** Attach the handle to the main body of the vacuum cleaner until it clicks into place.
2. **Charging:** Place the appliance on its charging base. Connect the charger to the base and plug it into a power outlet. The LED screen will indicate the charging status. Ensure the appliance is fully charged before first use (approximately 1 hour of autonomy).
3. **Fill Water Tank:** Locate the clean water tank. Fill it with clean water, and if desired, add a small amount of Rowenta-approved multi-purpose gentle cleaning solution. Do not exceed the MAX fill line.
4. **Install Dirty Water Tank:** Ensure the dirty water tank is correctly installed and empty before starting.

5. Operating Instructions

The Rowenta X-Clean 10 is designed for intuitive and efficient cleaning.

5.1. Powering On and Modes

Press the power button to turn on the appliance. The intuitive LED screen will display the current mode and battery level. The appliance features a smart sensor that automatically detects the dirt level in real-time and adjusts suction power and water flow for optimized cleaning.

- **Automatic Mode:** The appliance intelligently adapts its power and water flow based on detected dirt.
- **Suction Only Mode:** For dry vacuuming. Note that the brush may still get slightly damp.
- **Ultra Mode:** For heavily soiled areas, providing maximum cleaning power.



Figure 5.1: Key features including 180° flat design, up to 60 min autonomy, automatic cleaning & drying, and automatic dirt detection.



Figure 5.2: The advanced technology of the X-Clean 10, featuring smart sensors, an intuitive LED screen, and voice assistance for guided cleaning.

5.2. Cleaning Performance

The X-Clean 10 vacuums and washes all hard floors simultaneously. Its self-propelled Narwal roller makes cleaning effortless, weighing only 0.8 kg in hand during operation. The 180° flat design allows it to easily reach under low furniture and into corners.



Figure 5.3: The Rowenta X-Clean 10 in action, demonstrating its ability to vacuum and wash all hard floors in a single pass, leaving the roller clean.



Figure 5.4: The 180° flat design of the Rowenta X-Clean 10, allowing it to easily clean under furniture as low as 14 cm.

5.3. Battery Autonomy

The appliance offers up to 60 minutes of autonomy on a single charge, suitable for quick daily clean-ups or deep cleaning of larger areas.



Figure 5.5: The Rowenta X-Clean 10 being used in various rooms, highlighting its 60-minute autonomy for comprehensive cleaning on a single charge.

5.4. Anti-Tangle Roller

The anti-tangle microfiber roller efficiently captures pet hair, long hair, and dust without getting blocked, ensuring smooth operation even on heavily used floors.



Figure 5.6: Close-up of the Rowenta X-Clean 10's anti-tangle system, showing how it prevents hair from wrapping around the roller.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your Rowenta X-Clean 10.

6.1. Automatic Cleaning and Drying

The appliance features an automatic two-step self-cleaning system:

1. **Roller Self-Cleaning:** The exclusive Narwal double rotation cleans the roller in depth, eliminating residues and stains effortlessly.
2. **Automatic Drying at 65°C:** A centrifugal drying cycle removes moisture from the brush, preventing bacteria formation and unpleasant odors. This ensures the appliance is always clean, dry, and ready for use.



Figure 6.1: The Rowenta X-Clean 10's automatic cleaning and drying system on its base, showing the roller being cleaned (blue light) and dried at 65°C (orange light).

6.2. Emptying and Cleaning Tanks

- **Dirty Water Tank:** The appliance separates liquid and solid dirt in the dirty water tank, making emptying easier. Empty the dirty water tank after each use.
- **Clean Water Tank:** Refill the clean water tank as needed during operation.



Figure 6.2: The double filtration system of the Rowenta X-Clean 10, illustrating the automatic separation of liquid and solid dirt in the dirty water tank for easy emptying.

6.3. Roller Cleaning (Manual)

The roller should be cleaned manually once a week under the tap using dish soap and thorough rinsing.

7. Troubleshooting

If you encounter issues with your Rowenta X-Clean 10, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Low battery; not charged.	Place on charging base and ensure it is plugged in. Allow to charge fully.
Poor suction or cleaning performance.	Dirty water tank full; clean water tank empty; roller clogged; suction channel blocked.	Empty dirty water tank. Refill clean water tank. Clean the roller. Check for blockages in the suction channel and remove any debris.
Water leaks or leaves streaks.	Dirty water tank not properly installed; roller too wet; incorrect cleaning solution.	Ensure dirty water tank is securely in place. Run automatic drying cycle. Use only recommended cleaning solutions.
Unpleasant odor.	Roller or tanks not properly cleaned/dried.	Perform automatic cleaning and drying cycle. Manually clean roller and tanks thoroughly.
Voice assistance not working.	Volume too low or feature disabled.	Check settings on the LED screen to adjust voice assistance volume or enable/disable it.

8. Specifications

Feature	Specification
Brand	Rowenta
Model Number	GZ7540WO
Color	White
Product Dimensions (L x W x H)	23 x 27 x 116 cm
Item Weight	4.15 Kilograms
Power	200 Watts
Autonomy	Up to 60 minutes
Special Feature	Cordless, Self-propelled, 180° Flat Design, Automatic Self-Cleaning & Drying, Voice Assistance, Smart Dirt Detection, Anti-tangle Roller
Filter Type	2 filters
Clean Water Tank Capacity	0.79 Liters
Dirty Water Tank Capacity	0.67 Liters
Recommended Use	Hard Floors

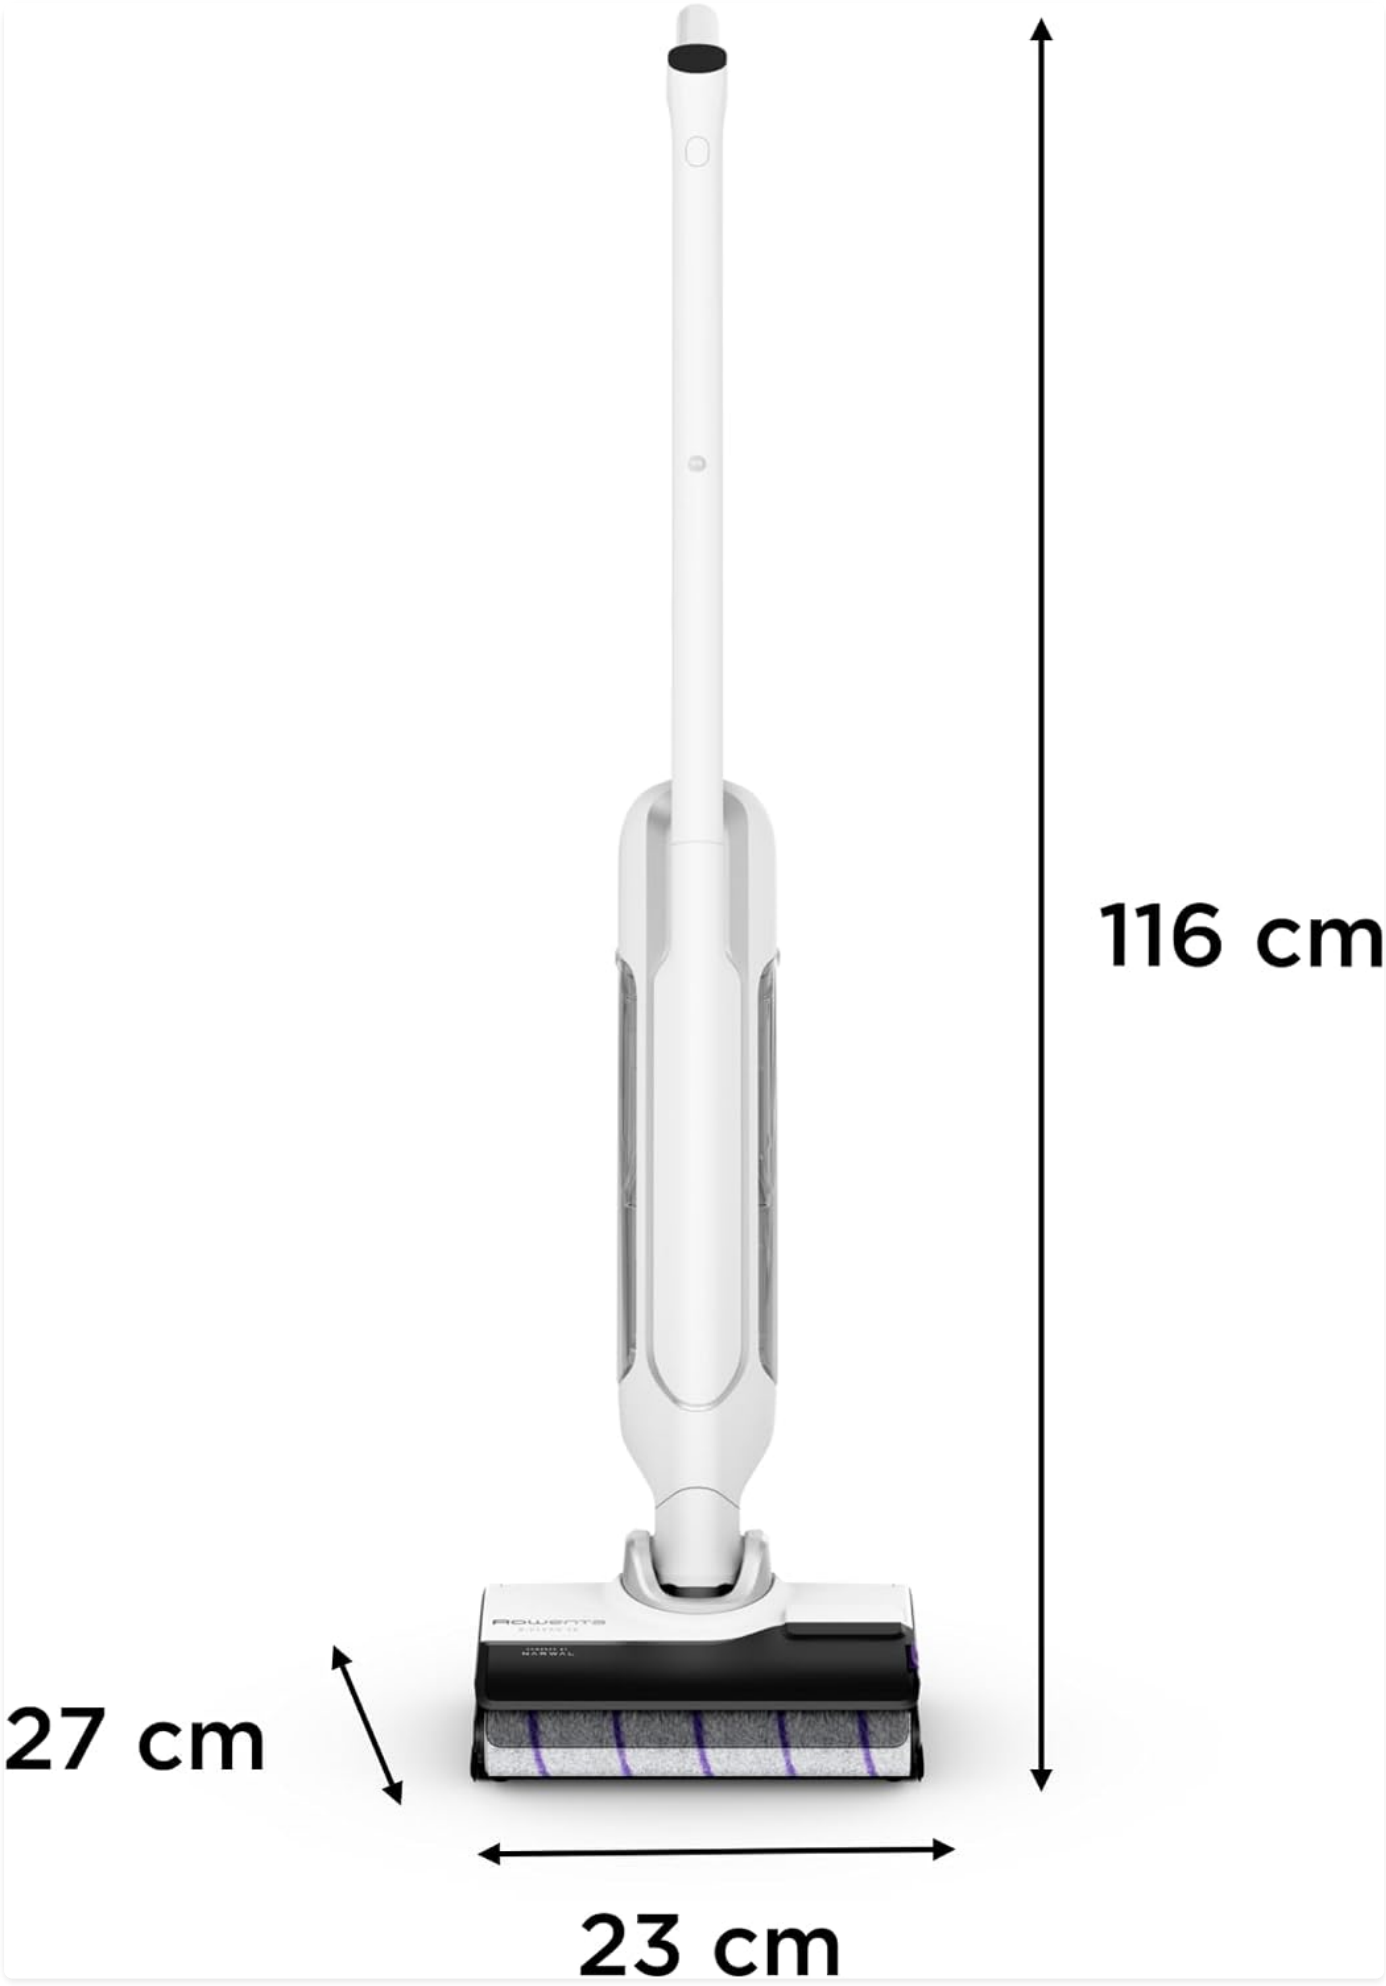


Figure 8.1: Dimensions of the Rowenta X-Clean 10, showing its height of 116 cm, width of 27 cm, and depth of 23 cm.

9. Warranty and Support

Rowenta is committed to providing quality products and support.

- **Spare Parts Availability:** Rowenta commits to keeping spare parts available for 15 years after purchase for the majority of its products.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Rowenta customer service through their official website or the contact information provided in your product packaging.

© 2025 Rowenta. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question