RadioShack Wireless Keyboard & Mouse Combo 2.4G

RadioShack Wireless Keyboard & Mouse Combo 2.4G User Manual

Model: Wireless Keyboard & Mouse Combo 2.4G

1. Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your RadioShack Wireless Keyboard & Mouse Combo 2.4G. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. Package Contents

Verify that all items are present in the package:

- 1 x RadioShack Wireless Keyboard
- 1 x RadioShack Wireless Mouse
- 1 x USB Nano Receiver (typically stored inside the mouse or keyboard)
- 1 x User Manual (this document)



Image: The RadioShack Wireless Keyboard and Mouse Combo, showing both devices in white.

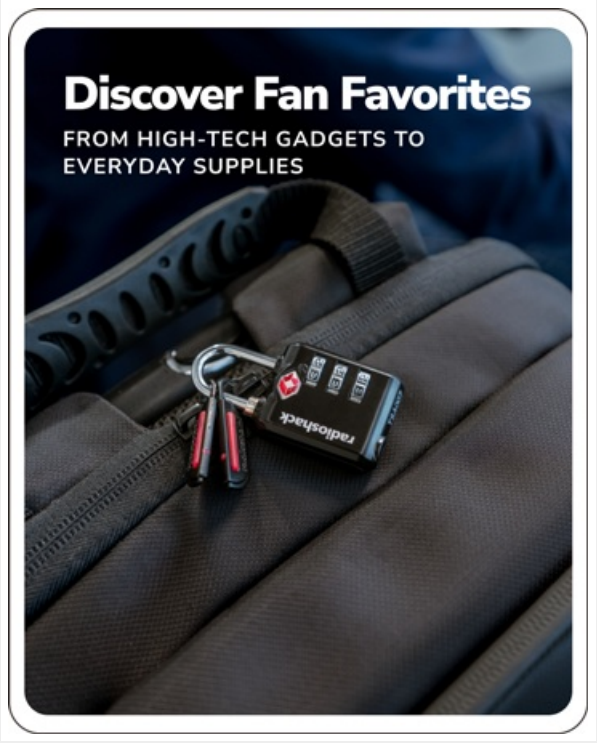


Image: A graphic indicating the package contents: one combo wireless keyboard and mouse.

3. Setup Instructions

1. **Insert Batteries (if applicable):** If your keyboard or mouse uses replaceable batteries, open the battery compartment (usually on the underside) and insert the required batteries, ensuring correct polarity. If rechargeable, ensure devices are charged.
2. **Locate USB Receiver:** The USB nano receiver is typically stored in a compartment on the underside of the mouse or keyboard for safekeeping during transport. Remove it carefully.
3. **Connect Receiver:** Plug the USB nano receiver into an available USB port on your computer or laptop.
4. **Power On Devices:** Turn on the keyboard and mouse using their respective power switches (usually located on the underside).
5. **Automatic Connection:** The devices should automatically connect to your computer. No additional drivers are typically required for standard functionality.

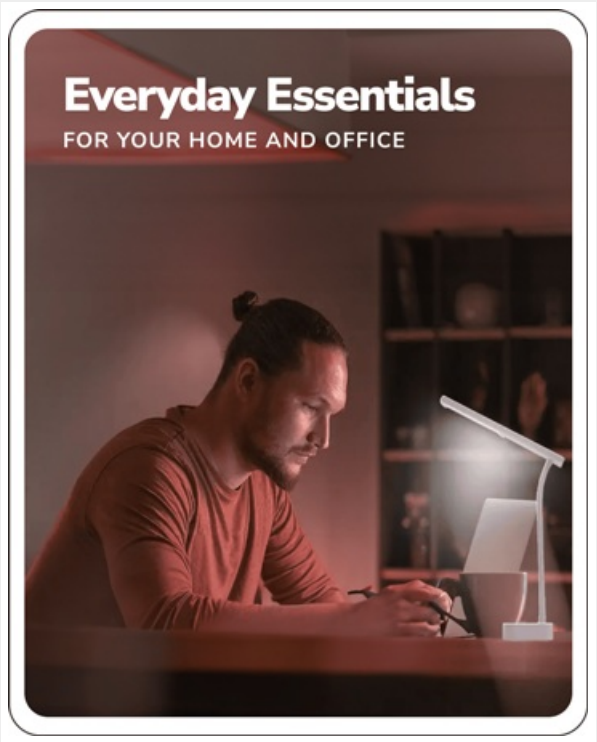


Image: A graphic highlighting key features: Snap-in USB nano receiver, 3 million keystrokes, Wireless and rechargeable, 2.4 GHz connection.

4. Operating Instructions

4.1 Keyboard Usage

- **Typing:** Begin typing as you would with any standard keyboard. The keys are designed for quiet and responsive feedback.
- **Function Keys:** Use the **Fn** key in combination with the F1-F12 keys for multimedia controls and other shortcuts (e.g., volume, play/pause, brightness). Refer to the icons on the keys for specific functions.
- **Ergonomics:** The slim profile and ergonomic design promote a natural hand position for comfortable extended use.

4.2 Mouse Usage

- **Movement:** Move the mouse on a flat surface to control the cursor on your screen.
- **Clicking:** Use the left and right buttons for primary and secondary clicks.
- **Scrolling:** The scroll wheel allows for vertical scrolling through documents and web pages.
- **DPI:** The mouse operates at a resolution of 1000 DPI for precise tracking.

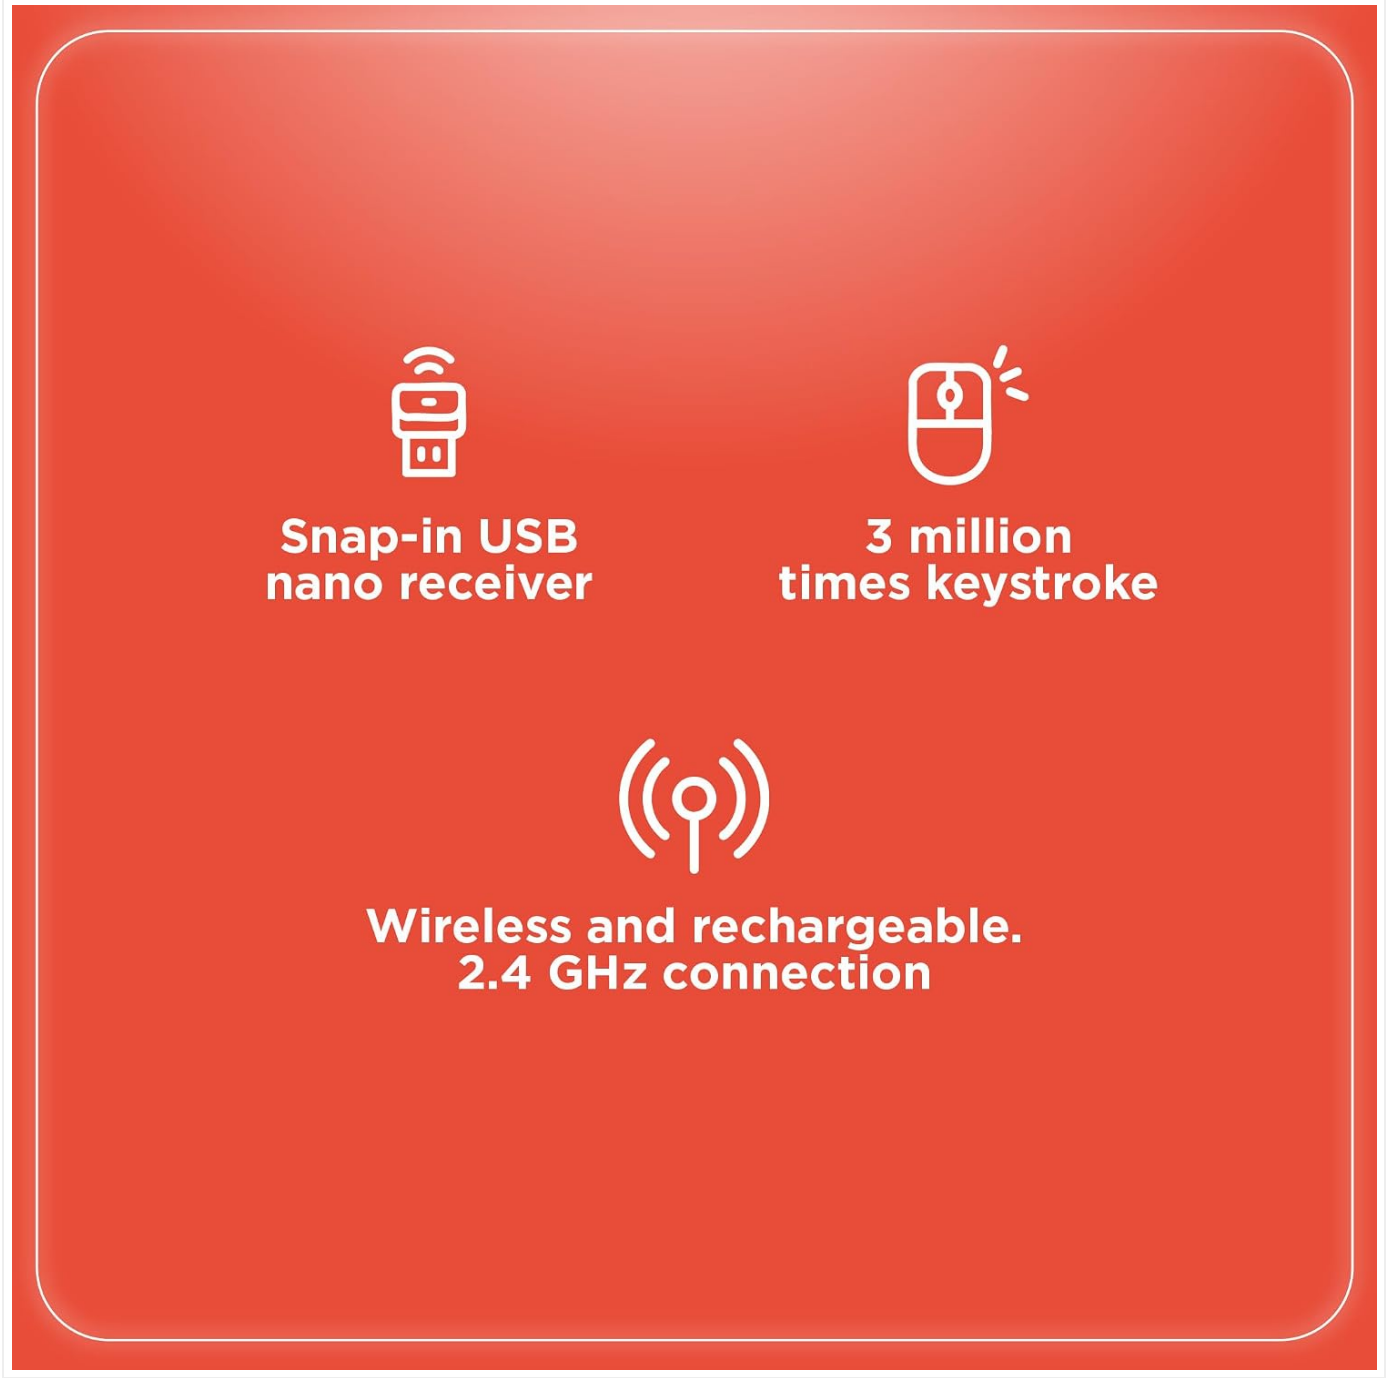


Image: A close-up view of the RadioShack wireless keyboard, highlighting the round keys and layout.

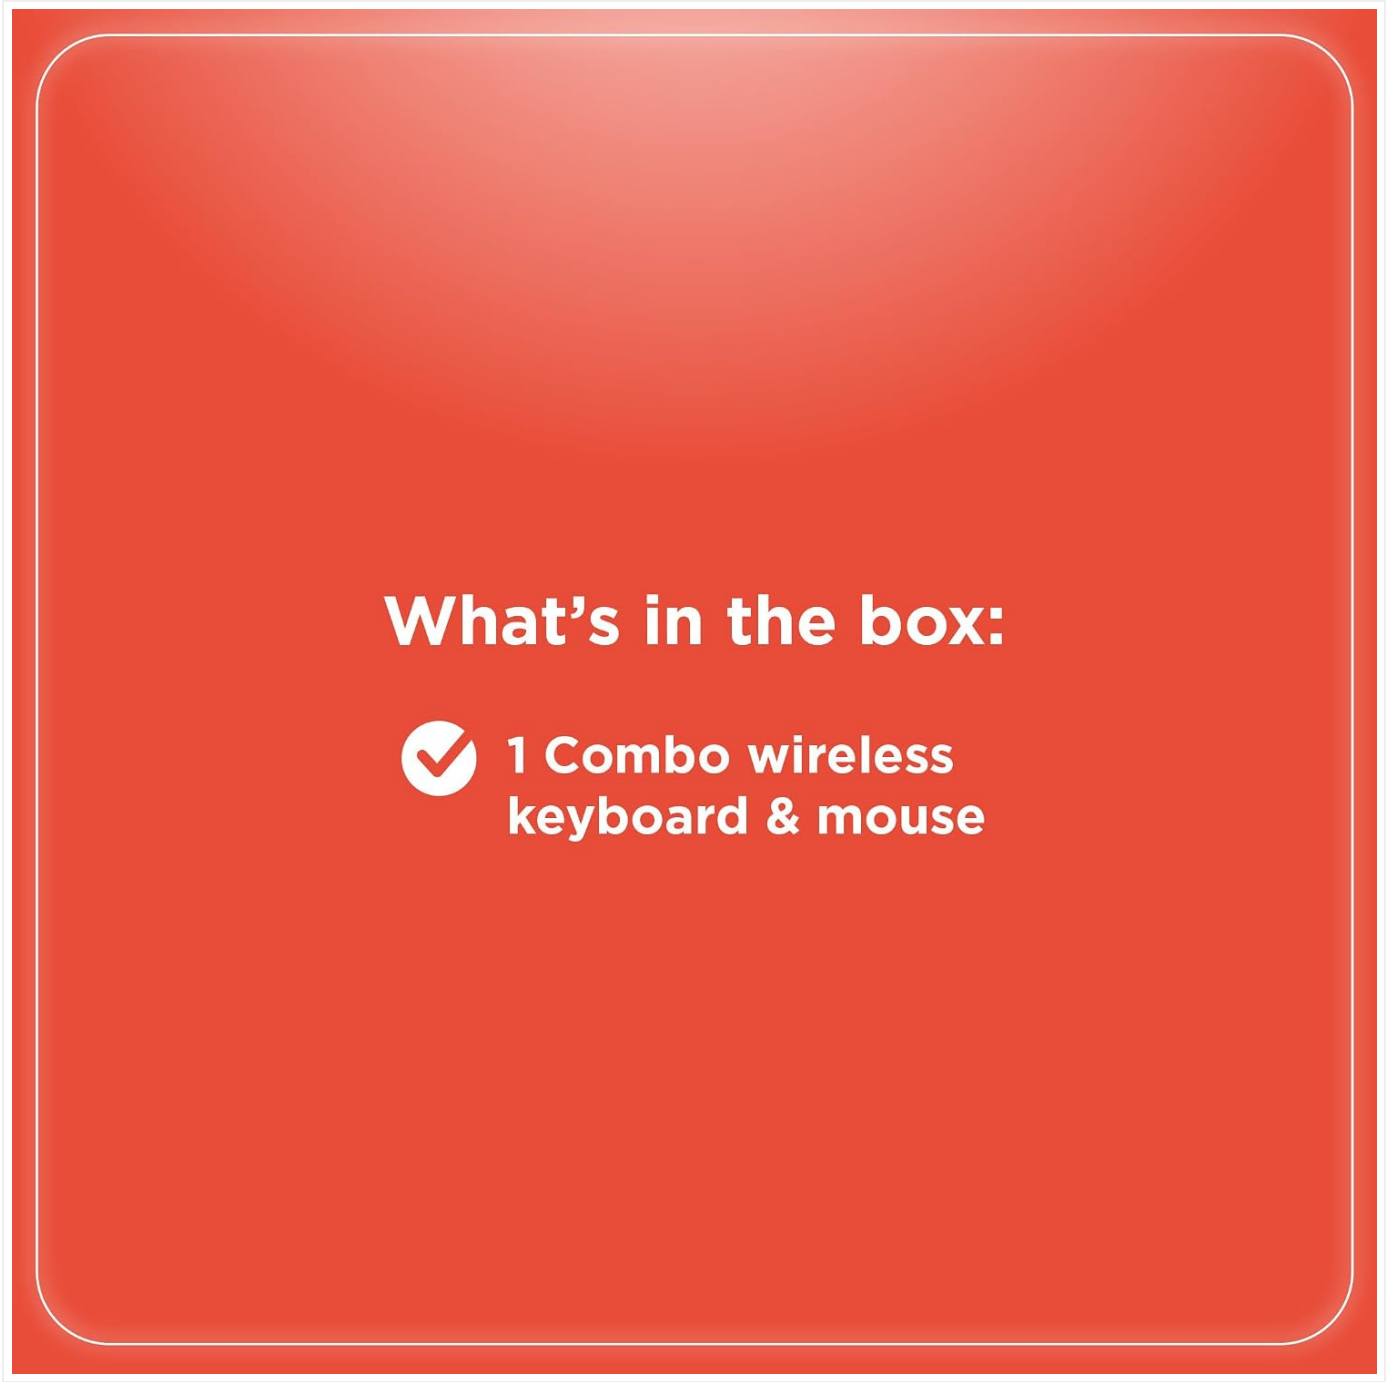


Image: The RadioShack wireless mouse, showing its ergonomic design and scroll wheel.

[redacted]

Video: A demonstration of the RadioShack Wireless Keyboard and Mouse Combo in use, showing a person typing and using the mouse, along with headphones.

5. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the devices.
- **Storage:** When not in use for extended periods, turn off the devices to conserve battery life. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If using replaceable batteries, remove them if the devices will not be used for a long time to prevent leakage. For rechargeable devices, follow manufacturer guidelines for charging cycles.

6. Troubleshooting

Problem	Possible Cause	Solution
Devices not responding	◦ Low battery ◦ USB receiver not connected ◦ Devices not powered on ◦ Interference	◦ Replace/recharge batteries. ◦ Ensure USB receiver is firmly plugged into a working USB port. ◦ Turn on the keyboard and mouse. ◦ Move devices closer to the receiver or away from other wireless devices.
Laggy or erratic cursor/typing	◦ Low battery ◦ Distance from receiver ◦ Surface for mouse	◦ Replace/recharge batteries. ◦ Reduce distance between devices and receiver (max 394 inches). ◦ Use the mouse on a suitable, non-reflective surface or a mouse pad.
Connection lost frequently	◦ Interference ◦ Weak signal	◦ Try a different USB port. ◦ Ensure no large metal objects are between the devices and the receiver. ◦ Re-pair the devices if a pairing button is available (check device underside).

7. Specifications

- **Brand:** RadioShack
- **Model:** Wireless Keyboard & Mouse Combo 2.4G
- **Connectivity Technology:** 2.4 GHz Wireless (USB Receiver)
- **Color:** White
- **Keyboard Features:** Portable, Ergonomic Design, Quiet Keys
- **Mouse Features:** 1000 DPI Resolution, Ergonomic Design
- **Working Distance:** Up to 394 inches (approximately 10 meters)
- **Keystroke Lifespan:** Up to 3 million times
- **Compatible Devices:** PCs, Laptops, Tablets (with USB port)
- **Package Dimensions:** 14.45 x 5.35 x 1.34 inches
- **Item Weight:** 1.01 pounds



Image: A graphic indicating the working distance of up to 394 inches.



Image: A graphic detailing the mouse specifications: up to 3 million keystrokes and 1000 DPI resolution.

8. Warranty and Support

For warranty information or technical support, please contact RadioShack customer service. Details can typically be found on the product packaging or the official RadioShack website.

Website: RadioShack Official Store

© 2024 RadioShack. All rights reserved.