Eureka RapidWash 630

Eureka RapidWash 630 Cordless Wet Dry Cleaner Instruction Manual

Model: RapidWash 630 | Brand: Eureka

1. Introduction

This manual provides essential information for the safe and effective use of your Eureka RapidWash 630 Cordless Wet Dry Cleaner. This appliance is designed for vacuuming and mopping hard floors, offering a comprehensive cleaning solution. Please read all instructions carefully before initial use and retain this manual for future reference.



Image: The Eureka RapidWash 630 Cordless Wet Dry Cleaner, showcasing its sleek design and integrated water tanks.

2. What's in the Box

Verify that all components are present upon unpacking your Eureka RapidWash 630.



Image: A visual representation of all items included in the Eureka RapidWash 630 packaging.

- Main Unit
- Handle
- Charging Base
- Accessory Holder
- Filter
- Cleaning Solution
- Brush Roller
- Cleaning Brush
- Adapter

3. Assembly

1. **Attach the Handle:** Insert the handle into the main unit until it clicks securely into place.
2. **Place on Charging Base:** Position the assembled unit onto the charging base. Ensure it is properly seated for charging.
3. **Organize Accessories:** Use the accessory holder to store the cleaning brush and spare filter.

4. Operation

4.1 Filling Water Tanks

- The clean water tank has a capacity of 700ml. Fill it with clean water and, if desired, the recommended cleaning solution.
- The dirty water tank has a capacity of 600ml. Ensure it is empty before starting a cleaning cycle.

4.2 Powering On/Off and Operating Modes

Press the power button to turn the unit on or off. The RapidWash 630 features multiple operating modes:

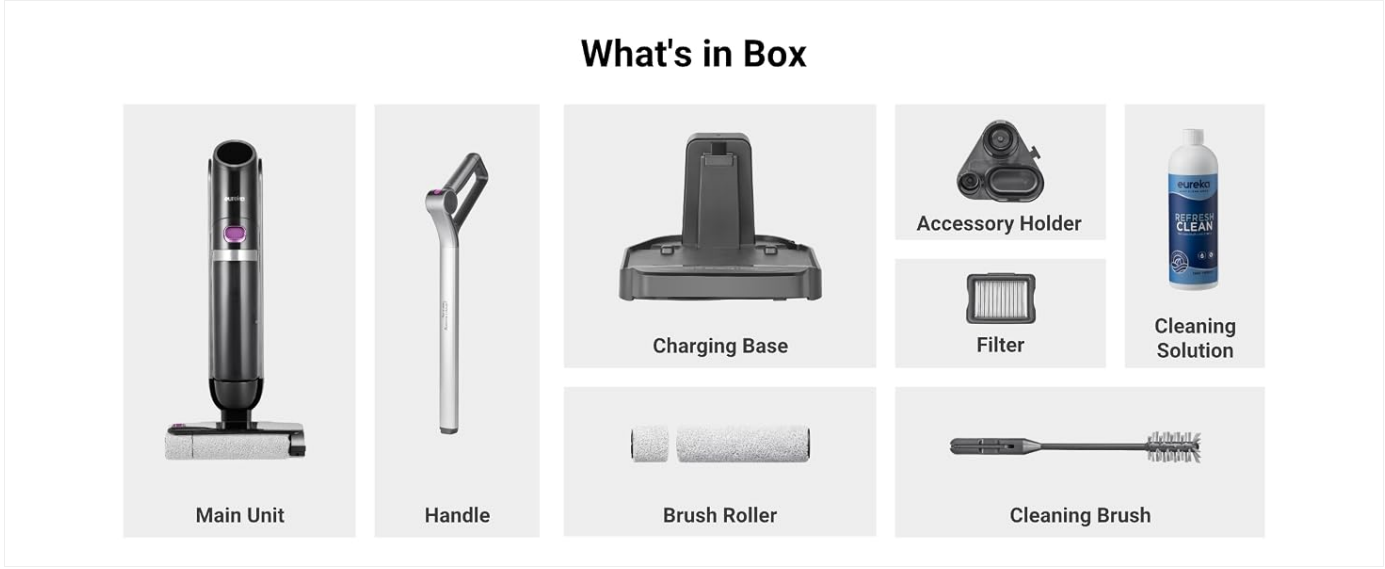


Image: The intuitive LED display showing available cleaning modes and battery status.

- **Auto Mode:** Utilizes AI-powered smart detection to assess floor dirt levels and automatically adjusts suction and water output for efficient cleaning.
- **Turbo Mode:** Provides maximum power for stubborn stains, cleaning up to 40% faster than previous models.
- **Dry Mode:** Quickly absorbs water without spraying, suitable for bathrooms or humid conditions.

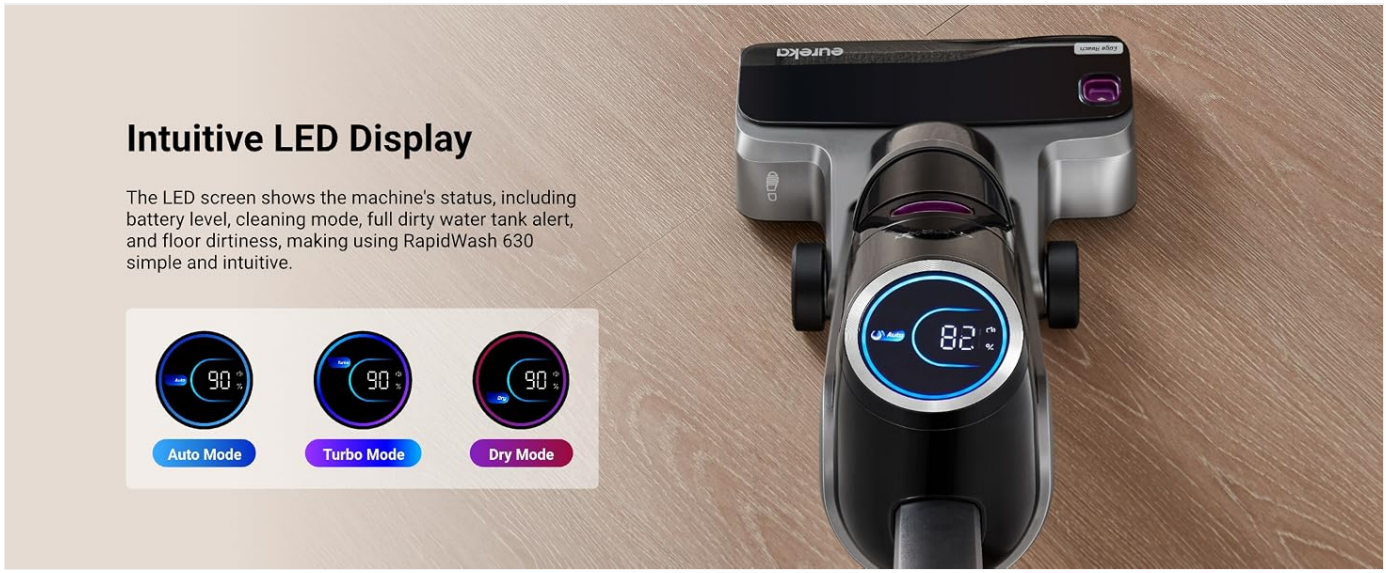


Image: The RapidWash 630 operating in Auto Mode, demonstrating its smart detection capabilities.



Image: The RapidWash 630 in Turbo Mode, effectively cleaning a liquid spill on a hard floor.

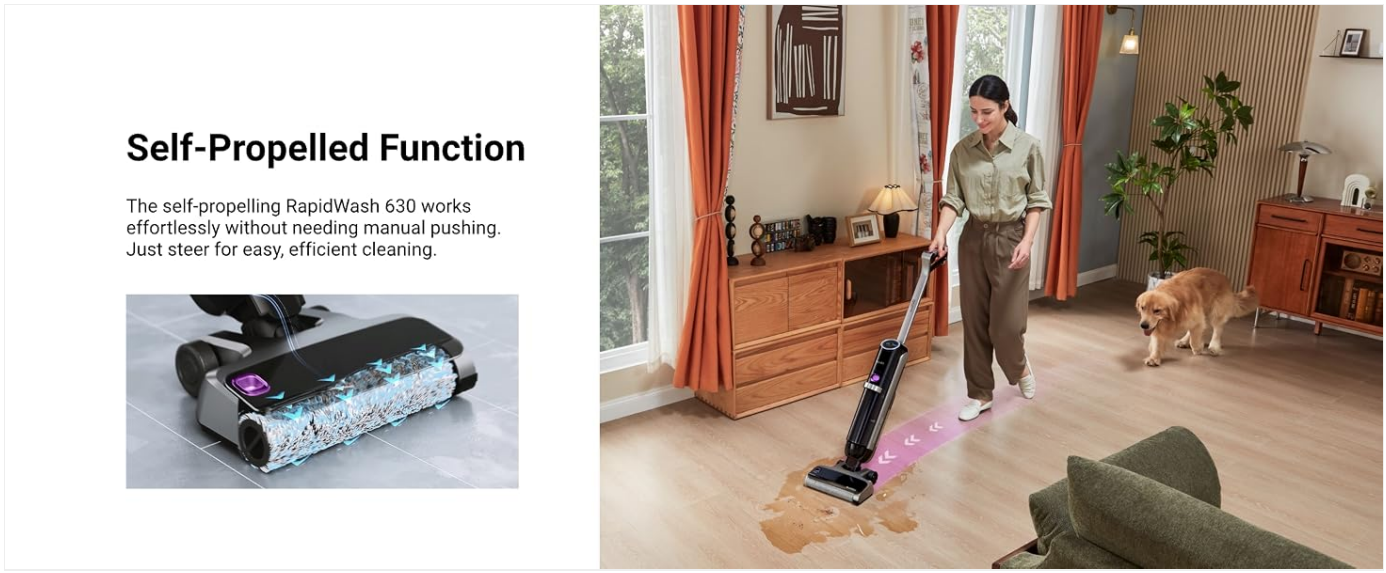


Image: The RapidWash 630 operating in Dry Mode, absorbing moisture from a floor.

4.3 Cleaning Features

- **170° Reclinable Design:** The unit reclines up to 170°, allowing access under furniture with a height clearance of 21.3cm or more. An anti-drip water duct prevents backflow during reclined operation.
- **Edge-Cleaning Brush:** The innovative roller brush design ensures cleaning up to 0mm from walls, thoroughly cleaning edges and corners.
- **Self-Propelled Function:** The RapidWash 630 is designed to move effortlessly, reducing manual pushing during operation.
- **Informative Voice Prompts:** For accessibility, the unit provides voice prompts for status updates such as low battery or charging. This feature can be toggled on or off.
- **Low Noise Design:** Engineered to operate at a reduced noise level (74dB), minimizing disturbance.



Image: The RapidWash 630 reclined at 170 degrees, demonstrating its ability to clean under low furniture.

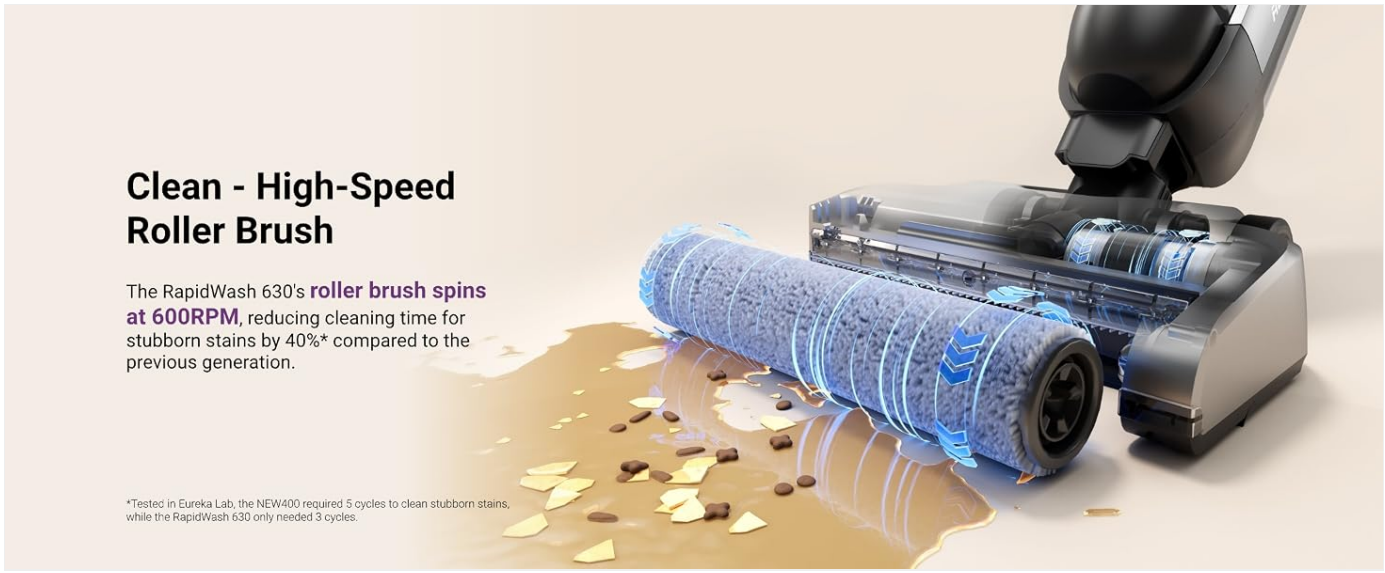


Image: The edge-cleaning brush design of the RapidWash 630, showing its ability to clean close to walls.

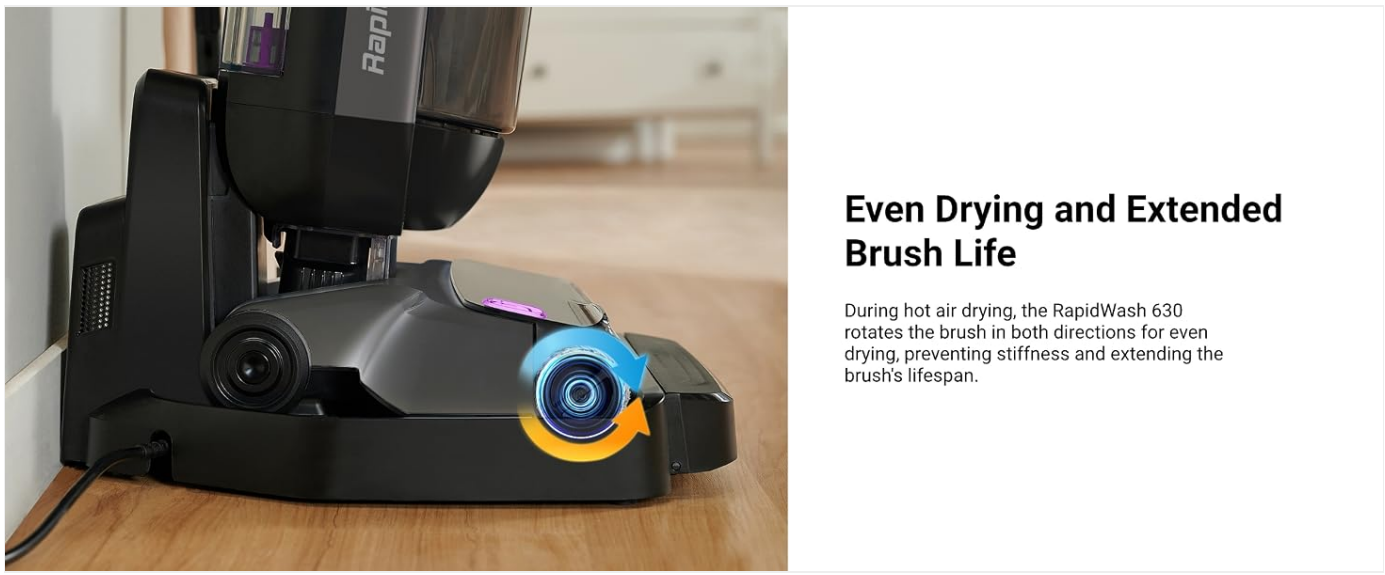


Image: The self-propelled function of the RapidWash 630, illustrating ease of movement during cleaning.

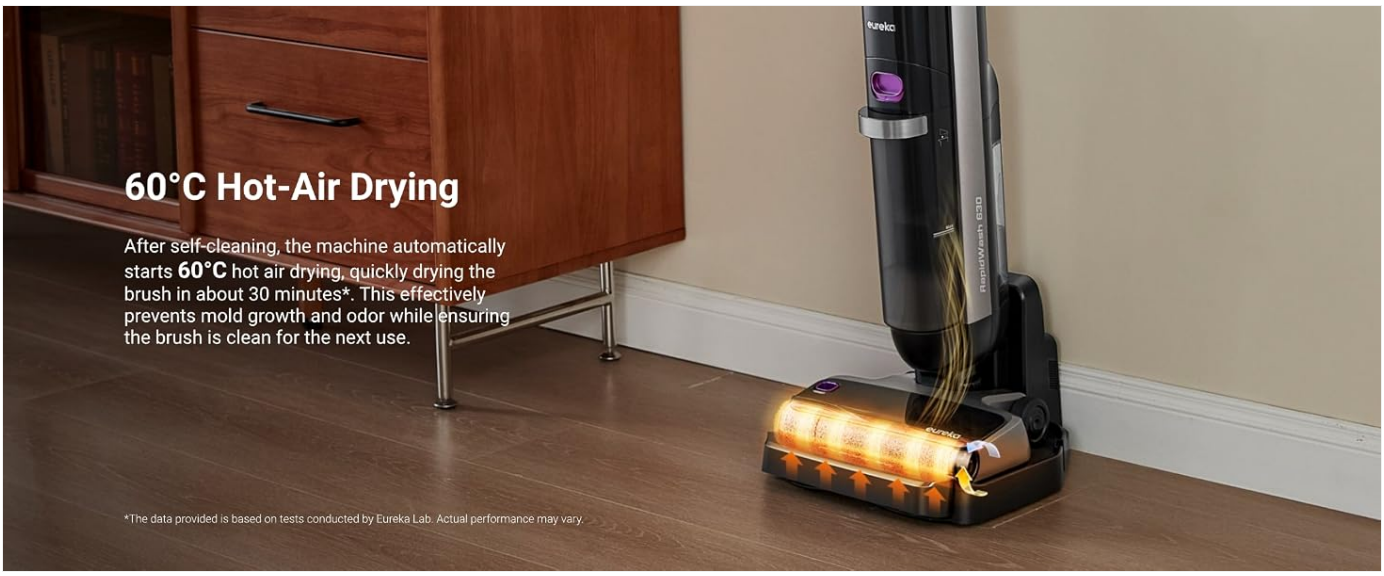


Image: A close-up of the RapidWash 630's control panel, indicating voice prompt functionality.



Image: The RapidWash 630 operating with minimal noise, suitable for homes with pets or children.

5. Maintenance

5.1 Self-Cleaning Cycle

After each use, place the vacuum mop in the cleaning base and initiate the self-cleaning cycle. This process rinses the roller brush and includes 60°C hot air drying, which dries the brush in approximately 30 minutes, preventing mold growth and odors.

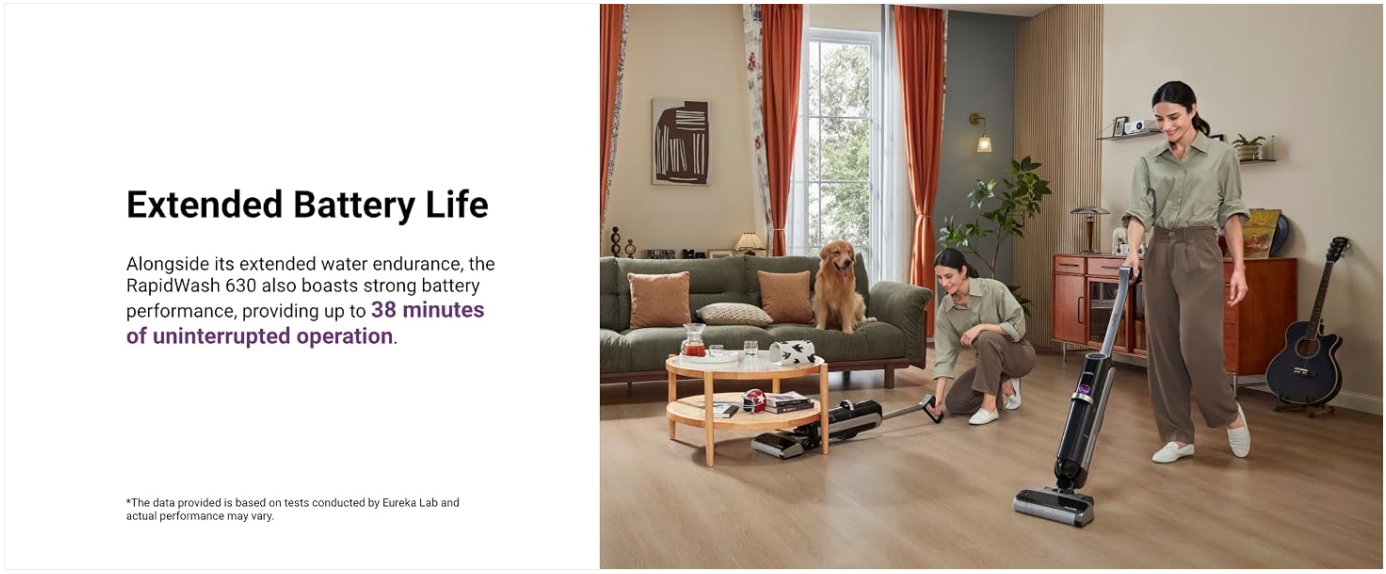


Image: The RapidWash 630 undergoing its self-cleaning cycle while docked on the charging base.



Image: The hot air drying function of the RapidWash 630, showing warm air circulating to dry the brush roller.

5.2 Emptying Dirty Water Tank

Regularly empty the dirty water tank after each cleaning session to maintain hygiene and optimal performance. The tank has a 600ml capacity.

5.3 Cleaning Brush Roller

The RapidWash 630 features an anti-tangle design with a built-in comb and scraper to minimize hair wrap. For thorough cleaning, remove the brush roller and clean any remaining debris or tangled hair using the provided cleaning brush.



Image: A close-up view of the RapidWash 630's brush head, highlighting the anti-tangle comb and scraper.

5.4 Cleaning Filter

The unit is equipped with a HEPA filter. Periodically clean or replace the filter as recommended in the maintenance schedule to ensure consistent suction and air quality.

6. Troubleshooting

If you encounter issues with your RapidWash 630, refer to the following common problems and solutions:

- **Unit not powering on:** Ensure the unit is fully charged. Check if the charging base is properly connected to power.
- **Reduced suction or poor cleaning performance:**
  - Check if the dirty water tank is full and needs emptying.
  - Inspect the brush roller for tangled hair or debris and clean it.
  - Verify that the clean water tank has sufficient water and solution.
  - Clean or replace the HEPA filter.
- **Error prompts on LED display:** Refer to the specific error code displayed on the LED screen and consult the full user manual for detailed instructions. Common alerts may indicate a full dirty water tank or a clogged brush roller.
- **Battery life shorter than expected:** Ensure the unit is fully charged before use. Battery performance can vary based on cleaning mode and floor type. The 4000mAh battery provides up to 38 minutes of operation.

7. Specifications

Feature	Detail
Brand	Eureka
Model Name	RapidWash 630

Feature	Detail
Special Feature	Washable Filter, Wet/Dry
Filter Type	HEPA Filter
Is Cordless?	Yes
Clean Water Tank Capacity	0.7 Liters (700ml)
Dirty Water Tank Capacity	0.6 Liters (600ml)
Wattage	350 watts
Maximum Suction	21.6 kPa
Form Factor	Stick
Color	Purple
Product Dimensions	10.63"L x 9.25"W x 45.67"H
Battery Life	Up to 38 minutes
Indoor/Outdoor Usage	Indoor
Item Weight	10.14 pounds
UPC	840296512869

8. Warranty and Support

For warranty information, please refer to the documentation included with your purchase. For customer service and technical support, please contact Eureka directly.

Customer Service: 1-800-282-2886

© 2025 Eureka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question