Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

topzee AF200EDK

topzee 2.1QT Small Compact Air Fryer

Model: AF200EDK

Introduction

Thank you for choosing the topzee 2.1QT Small Compact Air Fryer. This versatile appliance is designed to make your cooking experience easier and healthier, offering 4-in-1 functions including Air Fry, Roast, Bake, and Reheat. With its compact design and user-friendly features, it's perfect for individuals or small households. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Important Safety Instructions

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not place anything on top of the appliance.
- Hot air is released through the air outlet opening on the back of the appliance. Keep a safe distance from the air outlet.
- Do not fill the basket beyond the MAX line indicated.
- Always ensure the basket and crisper plate are properly inserted before operating.

Product Overview

Components

- Main Unit with Control Panel

- Removable Basket
- Nonstick Crisper Plate

Key Features

- **2.1QT Capacity:** Ideal for 1-2 people, perfect for single servings, snacks, or small meals.
- **4-in-1 Cooking Functions:** Air Fry, Roast, Bake, and Reheat for versatile meal preparation.
- **Up to 98% Less Oil:** Enjoy crispy textures with significantly less oil compared to traditional frying methods.
- **Adjustable Temperature Control:** Ranges from 120°F to 400°F (50°C to 200°C).
- **Integrated 60-Minute Timer:** For precise cooking control.
- **Quiet Operation:** Designed for minimal noise during use.
- **Nonstick & Dishwasher Safe:** Detachable accessories are easy to clean.
- **BPA-Free Materials:** Ensures safe food preparation.
- **Compact & Portable:** Weighs less than 5 pounds, saving counter space.



The ultralight and compact design maximizes your countertop space.



Enjoy good meals for 1-2 people with quiet operation (52dB).

Setup

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the air fryer.
2. **Clean Components:** Wash the removable basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper ventilation.
4. **First Use:** It is recommended to run the air fryer empty for about 10 minutes at 350°F (175°C) before first use to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

Operating Instructions

General Operation

1. Plug the air fryer into a grounded wall outlet.
2. Press the **ON/OFF** button to turn on the appliance. The digital display will illuminate.
3. Place the food into the basket, ensuring not to overfill.




The topzee 2.1QT Air Fryer is ready for cooking.

Cooking Functions (4-in-1)

The topzee air fryer offers four primary cooking functions:

- **Air Fry:** For crispy results with minimal oil.
- **Roast:** Ideal for meats and vegetables.
- **Bake:** Perfect for desserts and pastries.
- **Reheat:** To warm up leftovers quickly and efficiently.

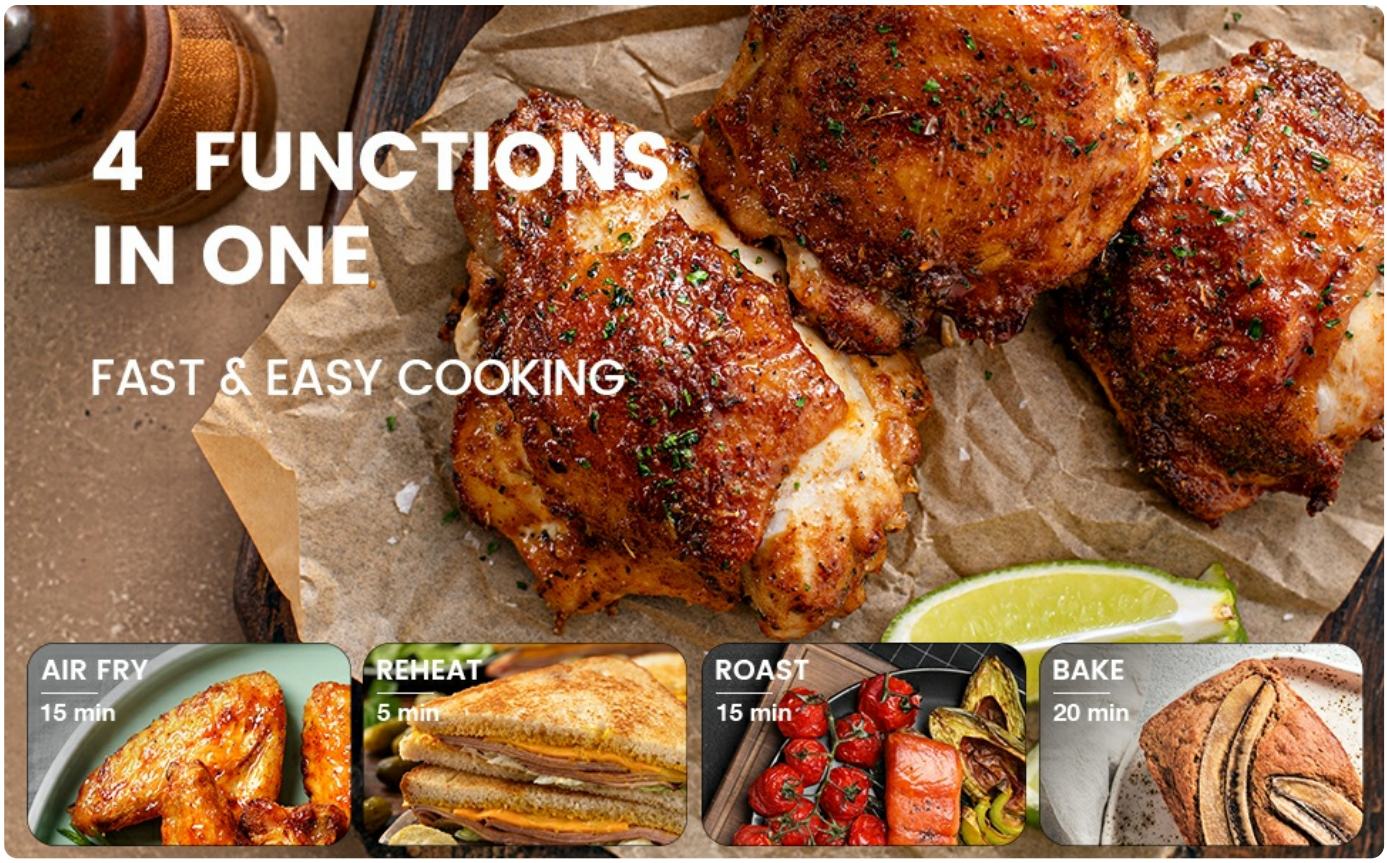

Explore the 4 functions in one for fast and easy cooking.

Adjusting Temperature and Time

1. After turning on, use the central dial to select your desired temperature (120°F-400°F).
2. Press the **Temp/Time Setting** button to switch to time adjustment. Use the dial to set the cooking time (1-60 minutes).
3. Press the **START/PAUSE** button to begin cooking.



Intuitive design with smart presets for effortless cooking.

Pre-set Programs

The air fryer comes with convenient pre-set programs for common foods. These are indicated on the top of the unit and on the digital display:

- Fries (400°F, 14-19 min)
- Pizza (400°F, 15-20 min)
- Drumstick (400°F, 18-23 min)
- Steak (360°F, 20-25 min)
- Fish or Shrimp (360°F, 12-18 min)
- Meatball (360°F, 14-19 min)
- Dehyd (140°F, 4-12h)

To use a pre-set program, simply rotate the dial to select the desired food icon, then press START/PAUSE.

Shaking Food

For even cooking and crispiness, some recipes may require shaking the food halfway through the cooking process. The air fryer may beep to remind you to shake the basket. To do this, carefully pull out the basket, shake the contents, and then reinsert the basket firmly. The cooking will resume automatically.

Official product video demonstrating the compact size and ease of use of the topzee 2.1QT Air Fryer, showcasing various foods being cooked.

Maintenance and Cleaning

Proper cleaning ensures the longevity and performance of your topzee Air Fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** The removable basket and crisper plate are nonstick and dishwasher safe for convenient cleaning.
- **Hand Washing:** For stubborn food residue, soak the basket and crisper plate in warm, soapy water for about 10 minutes before scrubbing with a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water.
- **Interior:** Clean the interior of the air fryer with a damp cloth and mild detergent. Ensure it is completely dry before next use.



The basket and crisper plate are dishwasher-safe and easy to clean.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet issue; Basket not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Push the basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Basket is overcrowded; Food not shaken.	Cook food in smaller batches. Shake the basket halfway through cooking, especially for smaller items like fries or nuggets.
Food is not crispy.	Not enough oil (for certain foods); Temperature too low; Cooking time too short.	Lightly coat food with oil or cooking spray. Increase temperature or cooking time as needed.
White smoke coming from the appliance.	Greasy residue from previous use; Excess oil/fat from food.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess fat from the basket during cooking.

Specifications

Feature	Detail
Model Name	AF200EDK
Capacity	2.1 Quarts
Product Dimensions	9.4"D x 9.4"W x 12"H
Item Weight	5.74 pounds
Wattage	1000 Watts
Control Method	Touch
Material	Plastic
Special Features	Temperature Control, Timer, Programmable
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Basket, Crisper Plate)
Color	Dark Blue
Country of Origin	China

Warranty and Support

topzee products are designed and manufactured to the highest quality standards. For any questions or concerns regarding your air fryer, please contact our customer support team:

- **Email:** support@topzee.com
- **Phone:** 1-800-770-5222

Please have your model number (AF200EDK) and purchase information ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHKKM2BS

More documents and user manuals: **https://manuals.plus/**