Hunter CCC5C21C68

Hunter 52 Inch Matte Silver Indoor Ceiling Fan User Manual

Model: CCC5C21C68

Introduction

This manual provides instructions for the safe installation, operation, and maintenance of your Hunter 52 Inch Matte Silver Indoor Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference. This fan features a 52-inch blade span, an integrated LED light kit, and is controlled via a pull chain.

Safety Information

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (approximately 19.2 pounds).
- Do not operate the fan with damaged parts.
- Keep hands, clothing, and other objects clear of the fan blades when the fan is operating.

Package Contents

Verify that all components are present before beginning installation.

- Ceiling Fan Motor Housing (Matte Silver)
- Five (5) Light Gray Oak MDF Blades
- Light Kit with Four (4) Clear Glass Shades
- Four (4) 4.7-Watt LED Bulbs (E26 base, A15 shape recommended)
- Pull Chain for Fan Speed Control
- Pull Chain for Light Control
- Mounting Bracket
- Downrod (3-inch)

- Hardware Pack (screws, washers, wire nuts)

Setup and Installation

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

1. Mounting the Fan

1. Secure the mounting bracket to the ceiling junction box. The junction box must be listed for fan support.
2. Attach the downrod to the motor housing and feed electrical wires through the downrod.
3. Carefully lift the fan assembly and hang it from the mounting bracket.



Image: A full view of the Hunter 52 Inch Matte Silver Ceiling Fan, showing the motor housing, five blades, and the four-light kit with clear glass shades. This image illustrates the complete fan assembly.

2. Electrical Connections

1. Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full instruction manual (not included here). Typically, this involves connecting ground, neutral, and live wires.

2. Ensure all connections are secure using wire nuts.

3. Attaching Blades and Light Kit

1. Attach the five fan blades to the blade arms, then secure the blade arms to the motor housing.
2. Install the light kit assembly to the bottom of the motor housing.
3. Screw in the four 4.7-watt LED bulbs into the E26 sockets.
4. Attach the clear glass shades to the light kit.

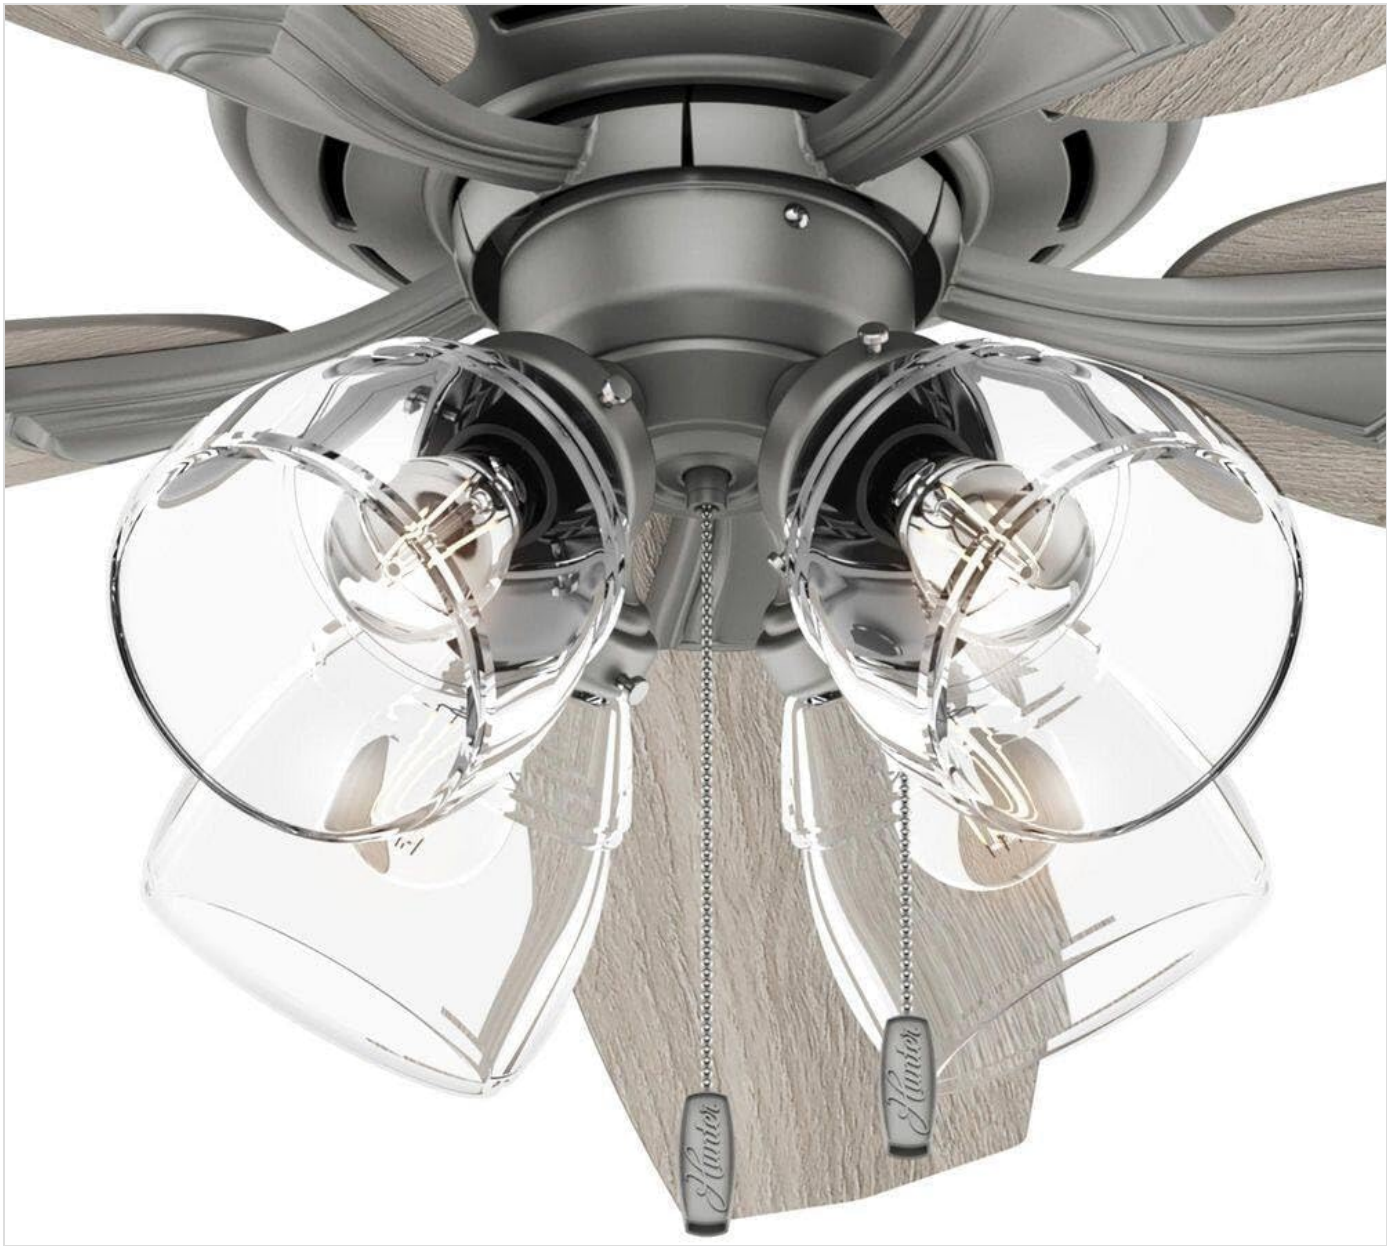


Image: A detailed close-up of the Hunter ceiling fan's light kit, showing the four clear glass shades and the E26 bulb sockets. This highlights the lighting component of the fan.



Image: A close-up view of a Hunter ceiling fan blade arm, showcasing its matte silver finish and the attachment point for the light gray oak blade. This illustrates the design and connection of the blades.

Operating Instructions

Your Hunter ceiling fan is designed for ease of use with pull chain controls.

Fan Speed Control

The fan speed is controlled by one of the pull chains. Each pull cycles through the speeds:

- **1st Pull:** High Speed
- **2nd Pull:** Medium Speed
- **3rd Pull:** Low Speed
- **4th Pull:** Off

Light Control

The light kit is controlled by the other pull chain. Each pull will turn the light On or Off.

Reversible Motor Function

The fan features a reversible WhisperWind motor for year-round comfort. A switch on the motor housing allows you to change the direction of blade rotation.

- **Summer Mode (Counter-clockwise):** Pushes air down, creating a cooling breeze.
- **Winter Mode (Clockwise):** Draws air up, circulating warm air trapped near the ceiling.

To change direction, ensure the fan is off and the blades have stopped completely before flipping the switch.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** The fan uses four 4.7-watt energy-efficient LED bulbs with an E26 base. When replacing, ensure the power is off and allow bulbs to cool before handling.
- **Tightening Fasteners:** Periodically check all screws and fasteners for tightness. Vibration can cause them to loosen over time.

Troubleshooting

Before attempting any repairs, ensure the power is disconnected at the circuit breaker.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; motor switch in off position.	Check circuit breaker; verify all wire connections are secure; ensure pull chain is not in the "off" position.
Fan is noisy	Loose screws on motor housing or blade attachments; unbalanced blades.	Tighten all screws; ensure blades are properly installed and balanced.
Light kit does not work	Loose wire connection; faulty bulb; light pull chain in off position.	Check light kit wiring; replace bulbs; ensure light pull chain is in the "on" position.
Excessive wobbling	Loose mounting bracket; unbalanced blades; incorrect downrod installation.	Ensure mounting bracket is securely fastened; balance blades using a balancing kit (not included); verify downrod is installed correctly.

Specifications

Brand:
Hunter

Model Number:
CCC5C21C68

Product Dimensions:
52"D x 52"W x 18.89"H

Color:
Matte Silver

Blade Material:
Engineered Wood (Light Gray Oak MDF)

Number of Blades:
5

Motor Type:
WhisperWind Reversible Motor

Number of Speeds:
3

Control Type:
Pull Chain Control

Light Kit:
Integrated, 4-light design with clear glass shades

Bulb Type:
4 x 4.7-Watt LED (E26 base, A15 shape recommended)

Voltage:
120 volts

Air Flow Capacity:
3523 cfm

Estimated Yearly Energy Cost:
$12 (based on 12 cents per kWh and 6.4 hours use per day, excluding lights)

Item Weight:
19.2 pounds

Indoor/Outdoor Usage:
Indoor

Certification:
ETL listed

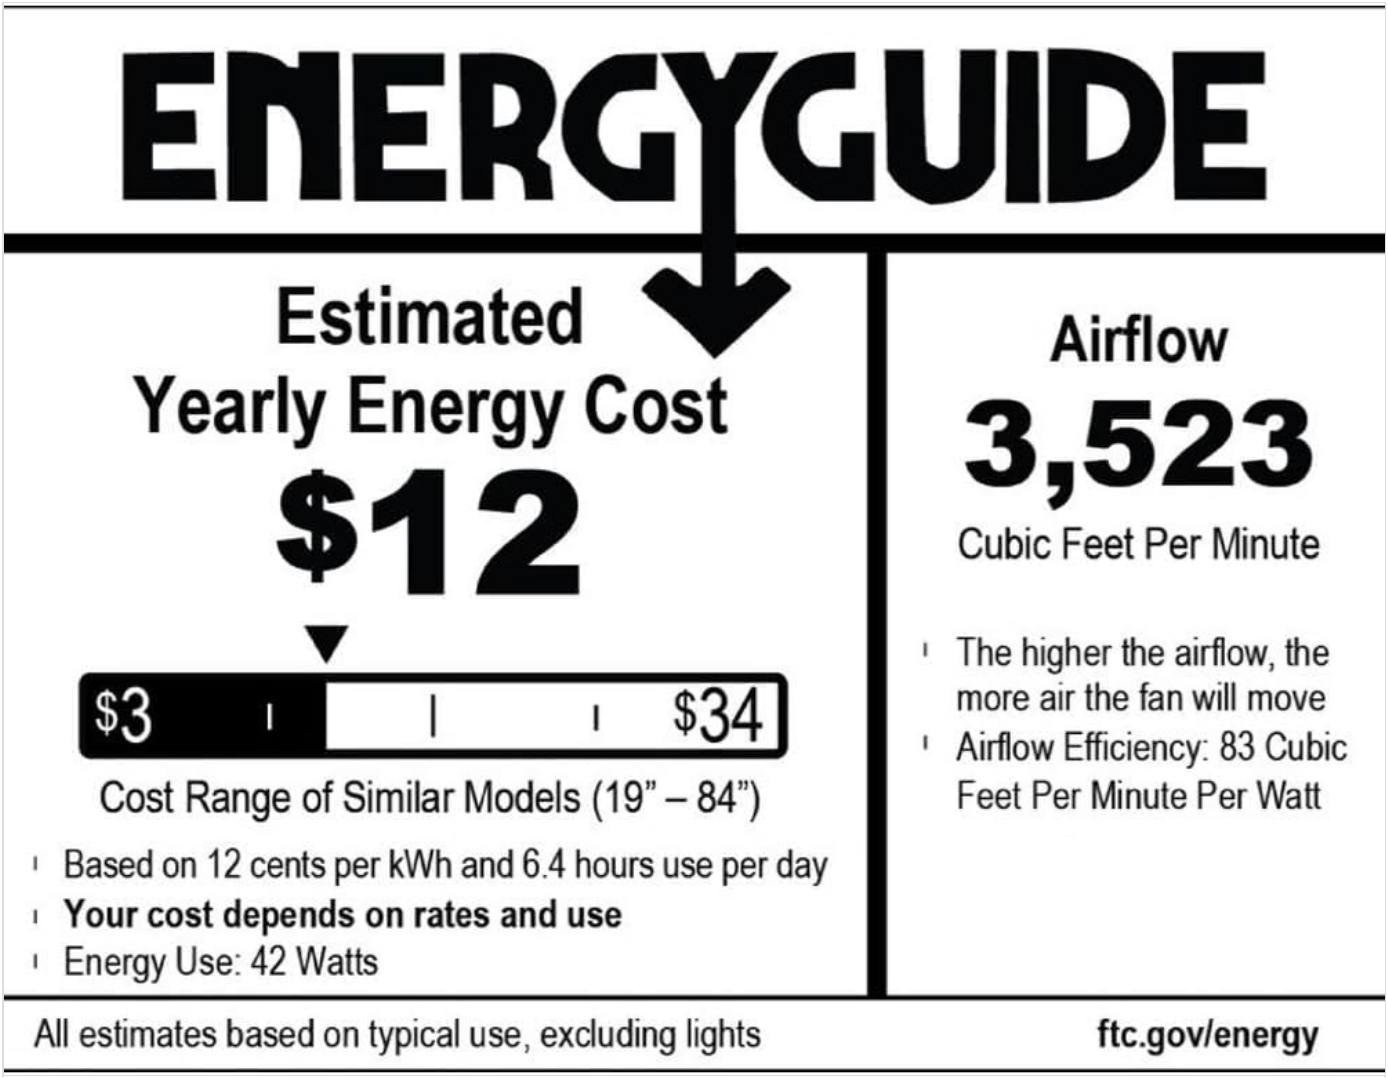


Image: An Energy Guide label for the ceiling fan, showing an estimated yearly energy cost of $12 and an airflow of 3,523 cubic feet per minute. This provides key energy efficiency information.

Warranty and Support

For warranty information or technical support, please refer to the official Hunter Fan website or contact their customer service. This product is a renewed item, and its warranty terms may differ from new products. Please consult your purchase documentation for specific warranty details.
For general inquiries or to locate authorized service centers, visit:www.hunterfan.com

© 2026 Hunter Fan Company. All rights reserved.
This manual is for informational purposes only. Hunter Fan Company is not responsible for any errors or omissions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question