Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit DS6X Series Remote

ZdalaMit Replacement Remote Control User Manual

For Sine Audio Sound Bar DS6X Series

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your new ZdalaMit Replacement Remote Control. This remote is specifically designed to be compatible with various Sine Audio Sound Bar DS6X Series models, offering a direct replacement without the need for complex programming.

2. Product Overview

The ZdalaMit Replacement Remote Control is a compact and intuitive device designed to seamlessly operate your compatible Sine Audio Sound Bar. It features clearly labeled buttons for power, volume, input selection, and sound modes.





Figure 2.1: Front view of the remote control, showing all buttons including Power, BT, Mute, Volume Up/Down, Play/Pause, Subwoofer controls, Movie, Music, News, OPT, COAX, and AUX Boost.



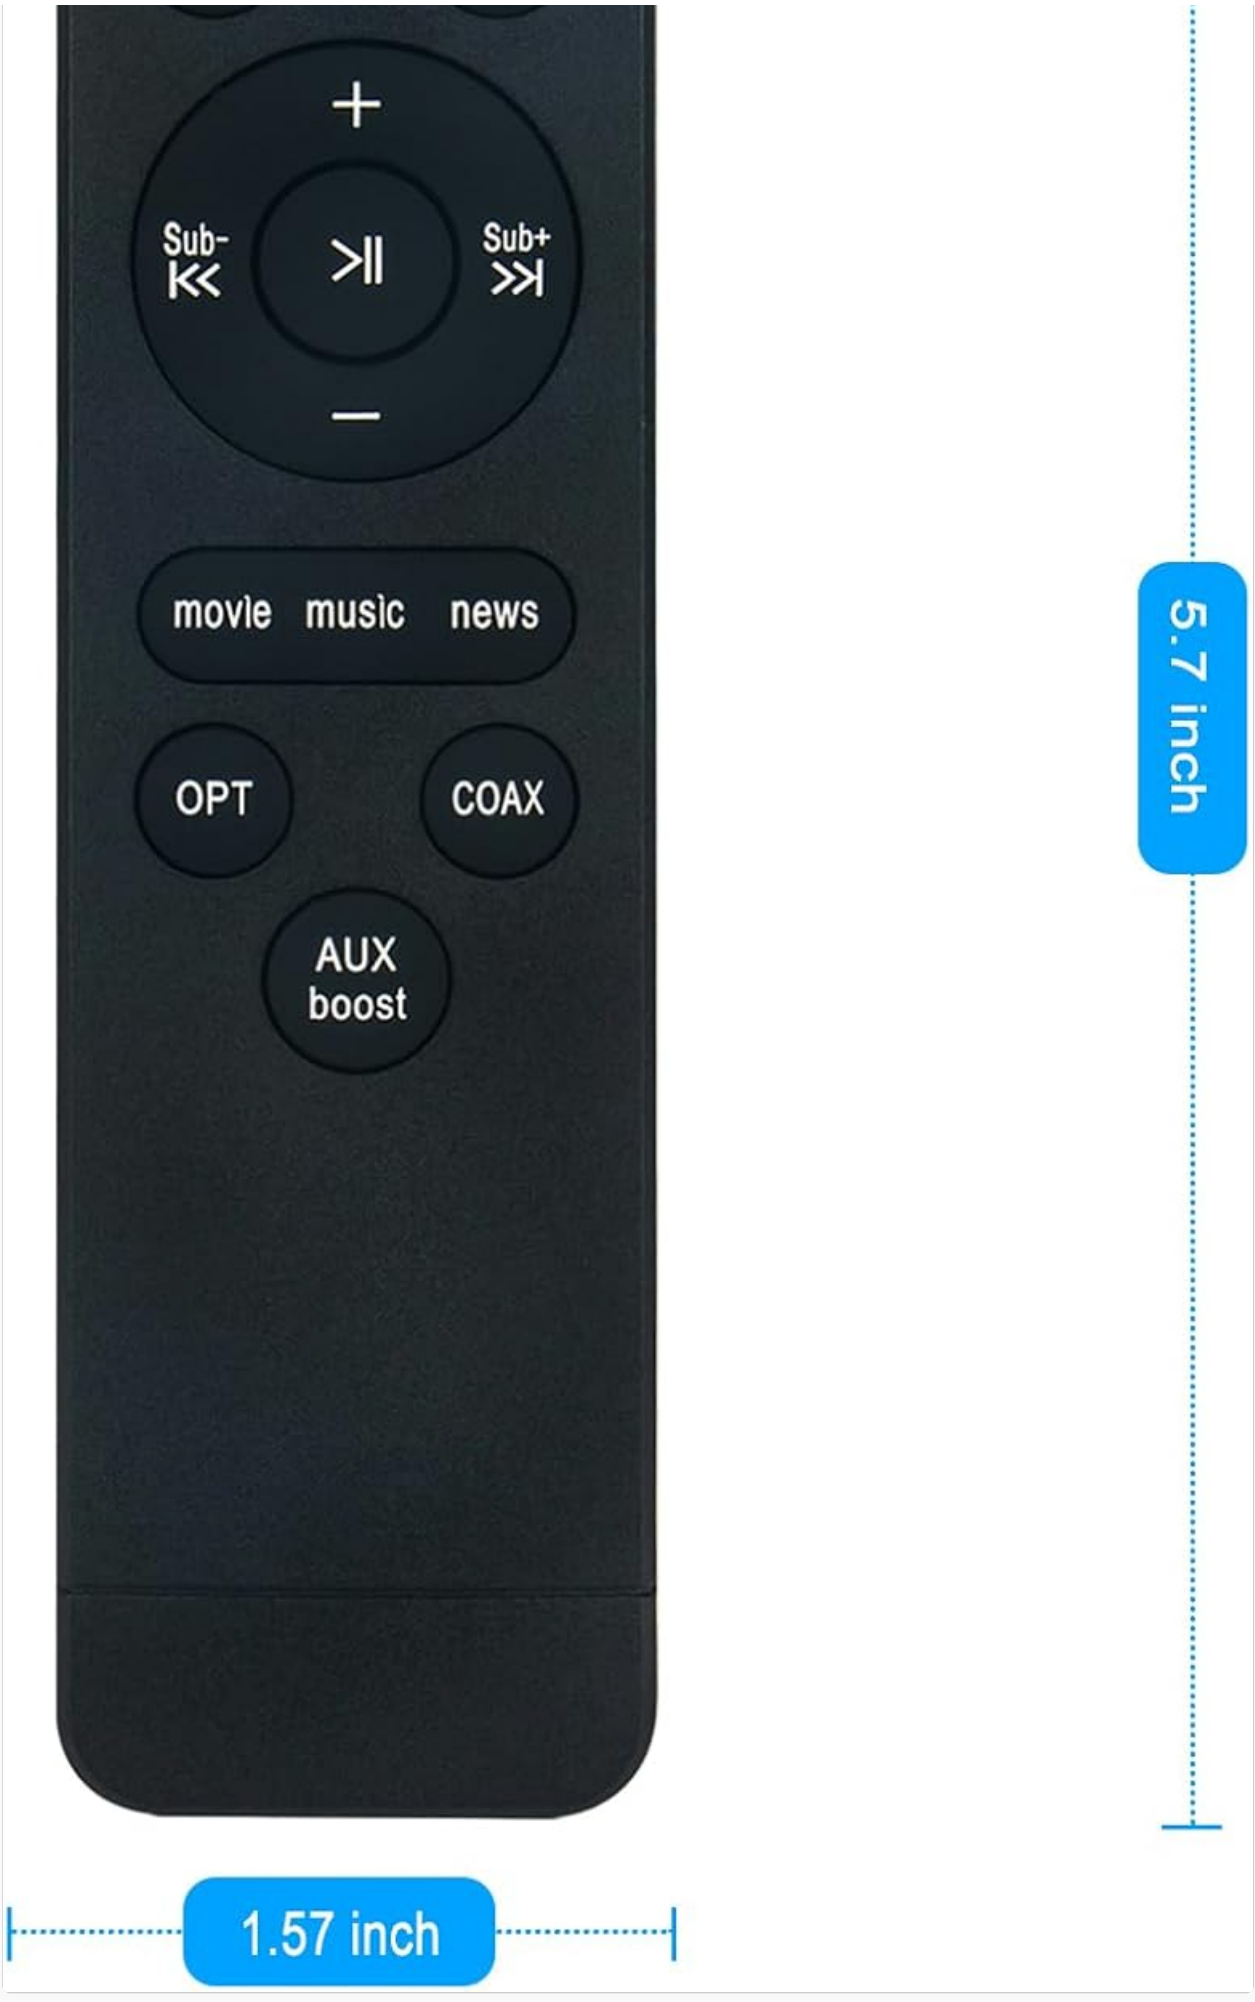


Figure 2.2: Front view of the remote control illustrating its approximate dimensions: 5.7 inches in length and 1.57 inches in width.

2.1. Button Functions

- **Power Button (Red)**: Turns the sound bar on or off.
- **BT**: Selects Bluetooth input mode.
- **MUTE**: Mutes or unmutes the sound.
- **+ / - (Volume)**: Increases or decreases the main volume.
- **Play/Pause (►||)**: Controls media playback.
- **Sub←← / Sub→→**: Adjusts subwoofer level.
- **movie / music / news**: Selects preset sound modes.
- **OPT**: Selects Optical input mode.
- **COAX**: Selects Coaxial input mode.
- **AUX boost**: Selects Auxiliary input mode and may provide a sound boost.

3. Package Contents

Please check the package for the following items:

- 1X ZdalaMit Replacement Remote Control

Note: Batteries and a separate user manual are not included in the package.

4. Setup

4.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Important:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.

5. Operating Instructions

This replacement remote control requires no programming. Once batteries are installed, it is ready for immediate use with compatible Sine Audio Sound Bar models.

1. Point the remote control directly at the infrared receiver on your Sine Audio Sound Bar.
2. Press the desired function button (e.g., Power, Volume Up, Mute) to control your sound bar.



Figure 5.1: The remote control shown in a typical home entertainment environment, indicating its use with a sound bar and television.

6. Compatibility

This remote control is compatible with the following Sine Audio Sound Bar models:

- DS6601
- DS6201
- DS6402
- DS6502
- DS6602
- DS6301
- DS6403
- DS6503
- DS6202
- DS6302
- DS6305
- DS6405
- DS6505
- DS6203

- DS6303
- DS6603
- DS6703
- DS6343
- DS6801K
- DS6701
- DS6702
- DS6401
- DS6205
- DS6501
- DS6605
- DS6705
- DS6403H
- DS6801
- DS6801K-MK

7. Maintenance

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care**: If the remote will not be used for an extended period (e.g., more than a month), remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

8. Troubleshooting

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding**:
  - Check the batteries. Ensure they are inserted with correct polarity and are not depleted. Replace with new AAA alkaline batteries if necessary.
  - Ensure there are no obstructions between the remote control and the sound bar's infrared receiver.
  - Make sure you are within the effective operating range and pointing the remote directly at the sound bar.
- **Specific Buttons Not Working**:
  - Clean the remote control, especially around the buttons, to ensure no dirt or debris is interfering with button presses.
  - If only certain buttons are unresponsive, it might indicate a fault with the remote. Consider replacing the remote if other troubleshooting steps fail.
- **Sound Bar Not Responding to Any Remote**:

- Ensure the sound bar is powered on and not in standby mode.
- Verify that the sound bar itself is functioning correctly (e.g., can it be controlled manually?).
- Confirm that your sound bar model is listed in the compatibility section (Section 6).

9. Specifications

Feature	Detail
Product Dimensions	5.76 x 1.59 x 0.55 inches
Item Weight	1.41 ounces
Color	Black
Power Supply	2 x 1.5V AAA Alkaline Battery (not included)
Special Feature	Pre-programmed, no setup required
Max Number of Supported Devices	1 (Sound Bar)
Compatible Devices	Sine Audio Sound Bar DS6X Series
Manufacturer	ZdalaMit Factory

© 2024 ZdalaMit. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHRVGBSV

More documents and user manuals: **https://manuals.plus/**