Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Foiresoft Cordless Basic-48p-16-W 01 x H 01

Foiresoft Standard Custom Zebra Horizontal Blind Instruction Manual

Model: Cordless Basic-48p-16-W 01 x H 01 | Brand: Foiresoft

1. Introduction

The Foiresoft Standard Custom Zebra Horizontal Blind is designed to provide versatile light control and privacy for your home or office. Featuring a dual-layer fabric with alternating sheer and solid stripes, these cordless roller shades allow you to easily adjust the amount of natural light entering your space while maintaining privacy. The cordless design ensures a clean, modern aesthetic and enhanced safety for households with children and pets.



Image: Foiresoft Standard Custom Zebra Horizontal Blind in green, showcasing its dual-layer design and light filtering capabilities when installed in a window.

2. Safety Information

- Ensure all installation hardware is securely fastened to prevent the blind from falling.
- Keep the blind away from moisture or direct heat sources such as stoves or heaters to prevent damage to the fabric and operating mechanism.
- The cordless design significantly reduces entanglement hazards for children and pets. Always ensure the blind is fully retracted when not in use if there is any risk of entanglement with other objects.
- Do not operate the blind until it is fully installed to prevent any damage from occurring.

3. Package Contents

Please verify that all components are present before beginning installation:

- Shade (1)

- L-brackets (2)
- C-clamps (2)
- Drywall anchors (3)
- Screws (6)

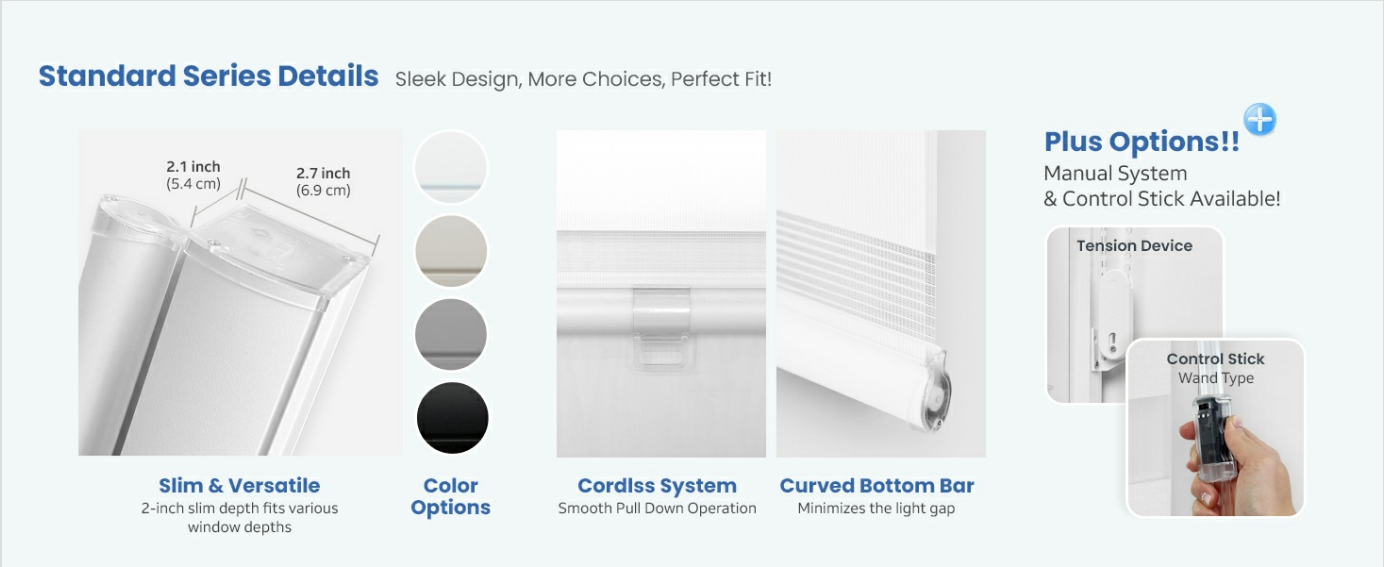


Image: A visual representation of all components included in the Foiresoft Zebra Blind package, such as the shade, L-brackets, C-clamps, drywall anchors, and screws.

4. Setup and Installation

This section provides detailed instructions for installing your Foiresoft Zebra Horizontal Blind. Ensure you have the necessary tools: a driver, screwdriver, and measure tape.

4.1. Measurement Guide

Accurate measurement is crucial for proper fit and function. Determine whether you will use an Inside Mount or Outside Mount.

- **Inside Mount:** Blinds are mounted inside the window frame. Requires a minimum depth of 3 inches (7.6 cm) for installation.
- **Outside Mount:** Blinds are mounted outside the window frame. Ensure there is enough space around the window.

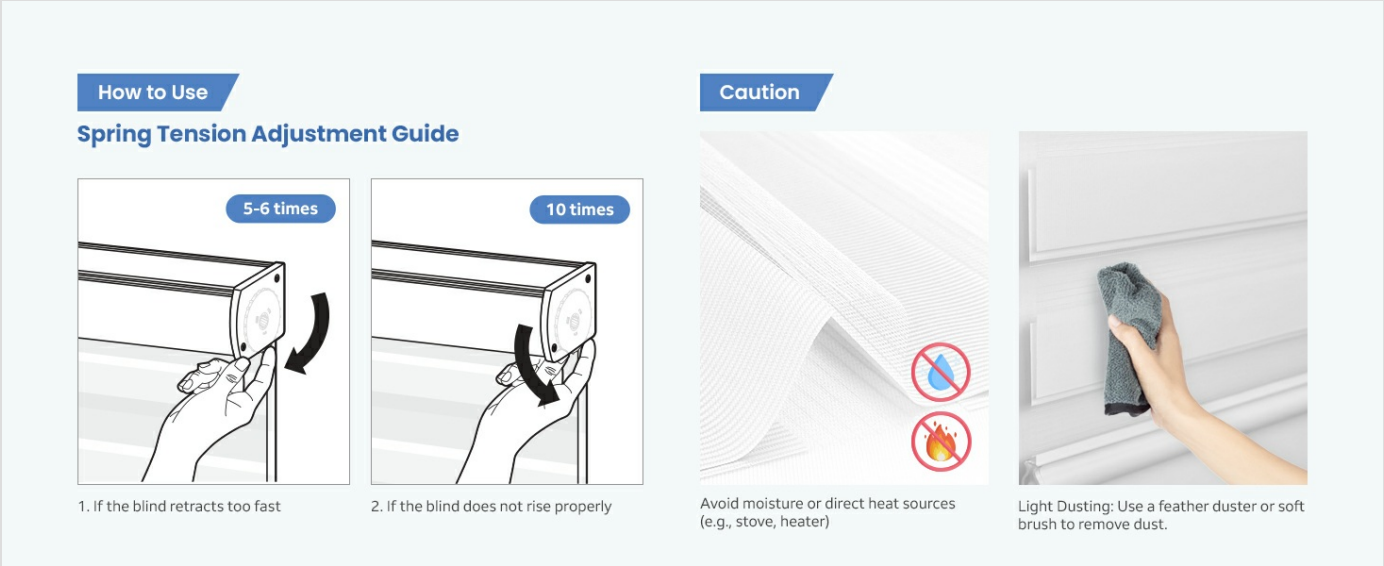


Image: Detailed diagrams showing how to measure window dimensions for both inside and outside mount installations, including guidelines for multiple blinds.

4.2. Installation Steps (Inside Mount)

For a visual guide, please refer to the official installation video below.

Your browser does not support the video tag.

Video: Official Foiresoft guide on how to install the blinds for an inside mount (CLBL 01). This video demonstrates the process of marking points, installing brackets, and securing the shade.

1. **Mark Points:** Mark the points where the C-clamps will be installed at equal intervals inside the window frame. To ensure reliability, install the two outer brackets as close as possible to the ends of the top headers of the blinds.
2. **Install C-Clamps:** Place the C-clamps over the marked holes and drill the screws to secure them. Ensure the round part of the C-clamp faces backwards. If installing into drywall, use the provided drywall anchor kit instead of regular screws.
3. **Attach Header:** Grab the blind's header, ensuring the front of the shade is facing you. Make sure the C-clamps are straight and aligned properly. Then, snap the shades into place. You will hear a click when the shade is properly inserted.



Image: A three-step visual guide demonstrating the installation process: Step 1 shows installing brackets on the window frame or wall, Step 2 shows attaching the header, and Step 3 shows the completed installation.

5. Operating Instructions

Your Foiresoft Zebra Blind features a cordless pull-down operation for smooth and easy use.

- To raise or lower the blind, gently grip the center of the bottom bar and move it up or down to your desired position.
- The dual-layer fabric allows for adjustment between sheer and solid stripes to control light and privacy.

5.1. Spring Tension Adjustment Guide

If the blind's tension needs adjustment, follow these steps:

- **If the blind retracts too fast:** Turn the right-side gear 5-6 times to increase tension.
- **If the blind does not rise properly:** Turn the right-side gear 10 times to decrease tension.



Image: A visual guide illustrating how to adjust the spring tension of the blind's internal gear system using the right-side dial for proper retraction and rising.

6. Maintenance

Maintaining your Foiresoft Zebra Blind is simple and helps prolong its lifespan:

- **Cleaning:** Gently wipe the fabric with a dry cloth or use a feather duster/soft brush to remove dust. Avoid using harsh cleaners or excessive moisture, as this can damage the polyester fabric.
- **Mechanism Care:** For cordless zebra blinds, ensure you grip the center of the handle bar when raising or lowering to distribute force evenly and maintain smooth operation.

7. Troubleshooting

Here are solutions to common issues you might encounter:

- **Blind retracts too fast:** Refer to the "Spring Tension Adjustment Guide" in Section 5.1 and turn the right-side gear 5-6 times to increase tension.
- **Blind does not rise properly:** Refer to the "Spring Tension Adjustment Guide" in Section 5.1 and turn the right-side gear 10 times to decrease tension.
- **Fabric misalignment:** Ensure the dual-layer fabric is aligned by setting the back panel evenly.
- **Difficulty operating:** Check that the blind is properly inserted into the C-clamps and that the C-clamps are straight and aligned.

8. Specifications

Feature	Detail
Brand	Foiresoft
Model Number	Cordless Basic-48p-16-W 01 x H 01
Material	100% Polyester
Color	16.green
Product Dimensions	1"L x 1"W (Note: Custom sizes available from 20-84"W x 20-105"H)

Opacity	Room Darkening Inches (Light Filtering)
Operation Mode	Cordless (Manual Pull-down)
Mounting Type	Inside Mount, Outside Mount
Item Weight	1.44 ounces (0.09 Pounds)
Country of Origin	Korea, Republic of

9. Warranty and Support

Foiresoft is committed to providing long-lasting quality and customer satisfaction. Your roller shades are backed by comprehensive coverage:

- **Standard Service Coverage:** 1 Year
- **Noiseless+ Service Coverage:** 3 Years (for applicable models)
- **Coverage Includes:** Damages (delivery), Missing parts, Defects, Wrong item.

Perfect Fit Program: We ensure a perfect fit for custom orders. Any item that doesn't match your specifications by even 0.25 inches will be remade.

For installation tips, sizing help, care guidance, or any other inquiries, please contact Foiresoft customer support. Our team is ready to assist you.

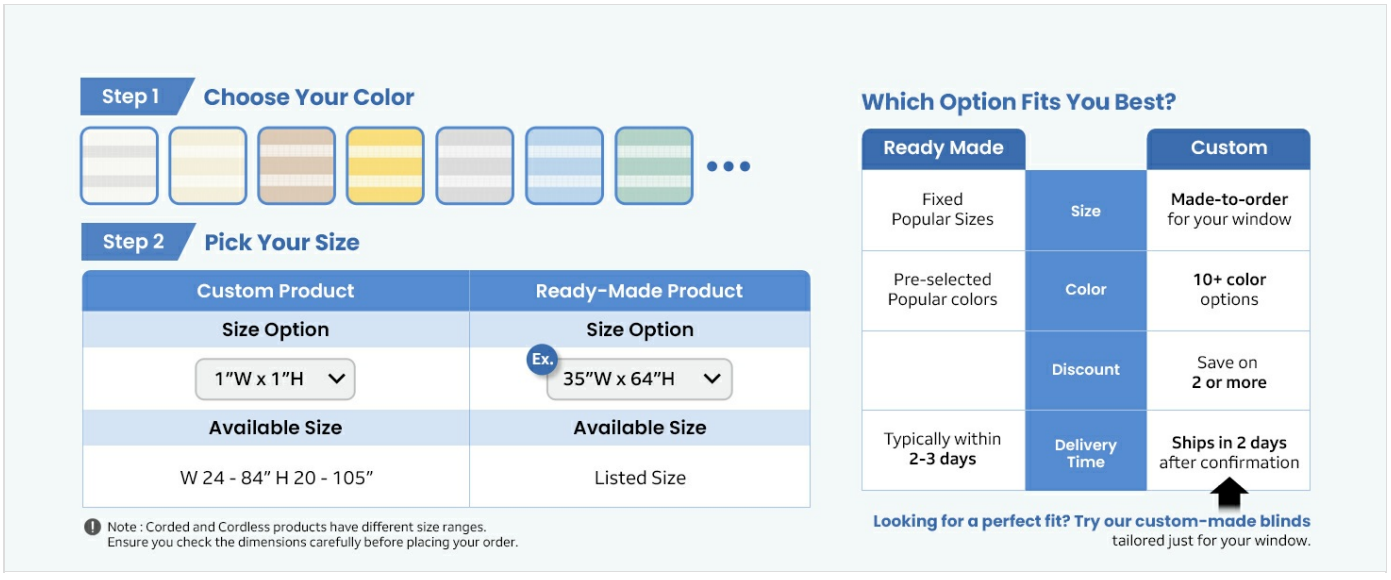


Image: An overview of Foiresoft's service coverage, including 1-year standard and 3-year Noiseless+ options, and details about the Perfect Fit Program for custom blinds.

© 2025 Foiresoft. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHV4596V

More documents and user manuals: **https://manuals.plus/**