Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Xixini 004

Xixini Boho TV Stand Model 004

Instruction Manual

1. Product Overview

Thank you for choosing the Xixini Boho TV Stand. This entertainment center is designed to accommodate TVs up to 65 inches and features a blend of mid-century modern and boho aesthetics. It includes spacious storage with shelves and sliding rattan-decorated doors, solid wood feet, and integrated cable management.

Model: 004

Dimensions: 59.1" (Length) x 15.4" (Width) x 18.1" (Height)

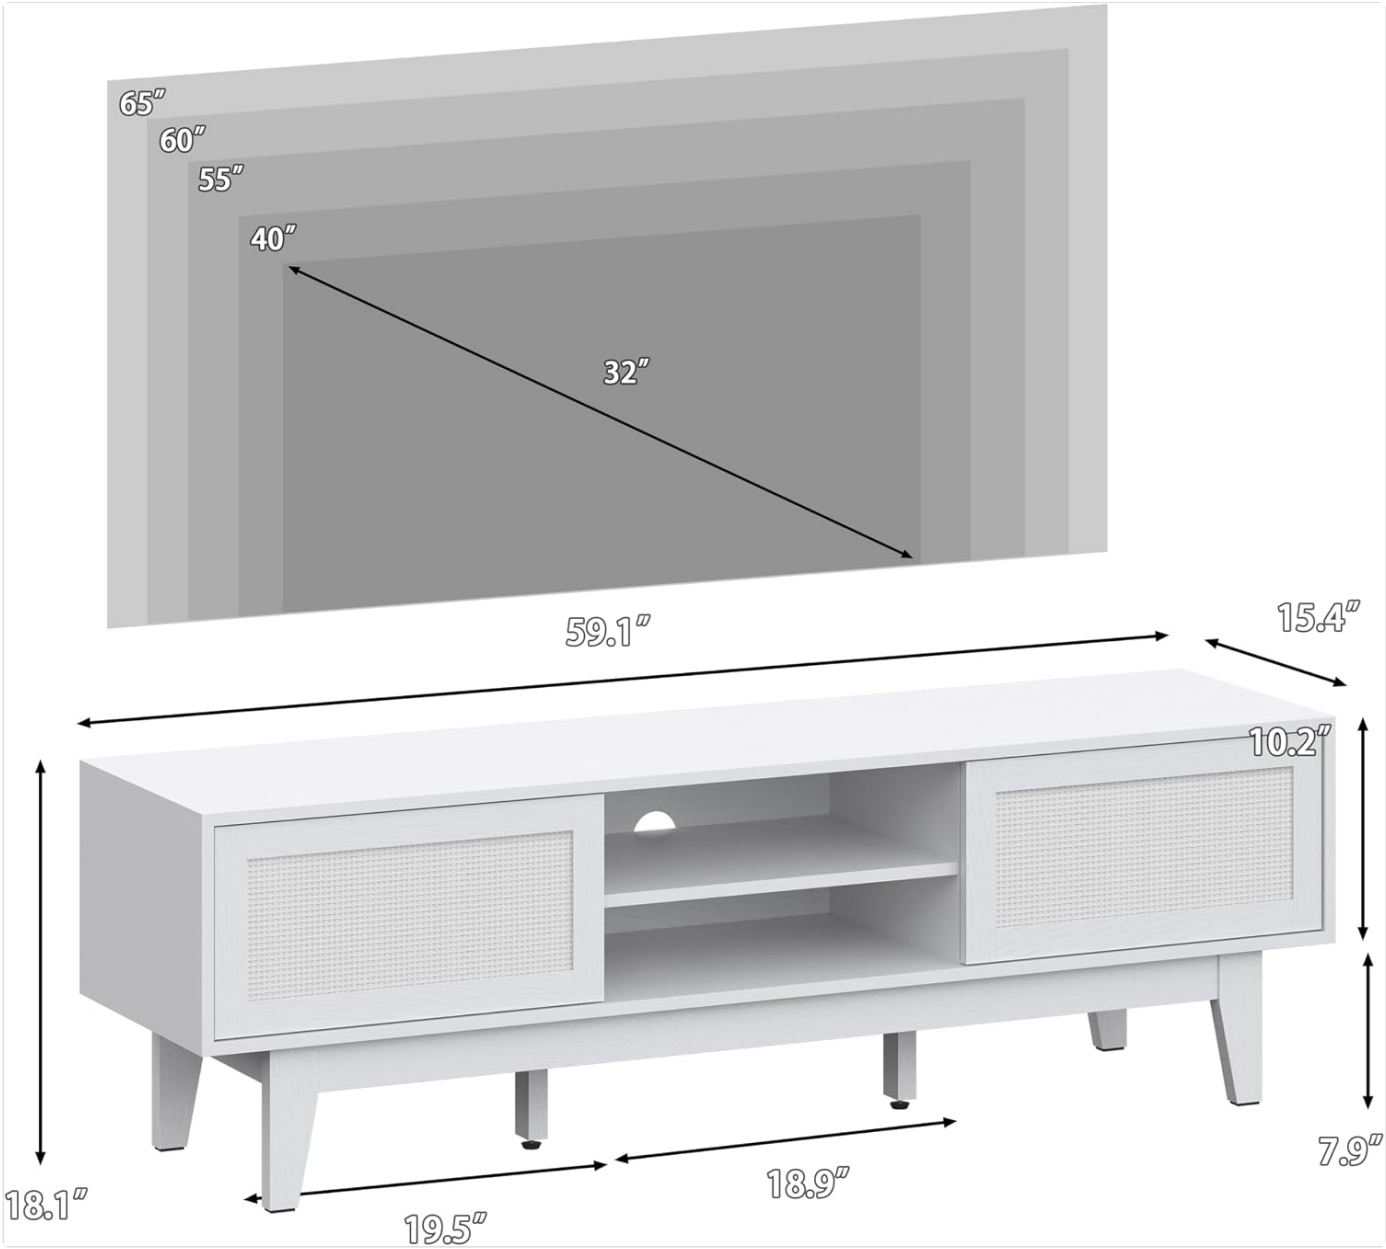


Figure 1: Product Dimensions and TV Size Compatibility (32"-65" TVs)

2. Safety Information

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use.
- Do not overload the TV stand. The top surface has a load-bearing capacity of up to 175 lbs.
- Keep small parts away from children during assembly.
- For optimal stability, place the TV stand on a level surface. Utilize the adjustable feet to compensate for uneven floors.

3. Assembly Instructions

This entertainment center comes with easy-to-follow instructions and numbered parts. It is recommended that two people assemble it due to the larger tabletop size.

Required Tools (Not Included):

- Phillips Head Screwdriver
- Hammer (optional, for dowels)

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the accessory bag.
2. Attach the solid wood feet to the base of the TV stand using the provided hardware. Ensure they are securely fastened.
3. Assemble the main frame of the TV stand, connecting the side panels and central dividers.
4. Insert the shelves into their designated slots.
5. Install the sliding door rails and then carefully place the rattan-decorated sliding doors onto the rails.
6. Attach the back panel, ensuring the cable management holes align correctly.
7. Place the top panel onto the assembled frame and secure it.
8. Adjust the middle feet as needed to ensure the stand is level and stable.



Figure 2: Solid Wood Legs and Clearance

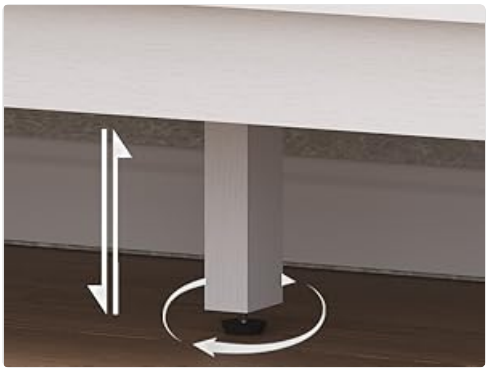


Figure 3: Adjustable Feet for Stability

4. Operating Instructions

4.1. Sliding Doors

The TV stand features two movable rattan-decorated sliding doors. These doors operate on a metal rail, allowing you to conceal either the side storage cabinets or the center storage shelves as desired. Gently slide the doors along the track to open or close them.



Figure 4: Sliding Door Operation

Your browser does not support the video tag.

Video 1: Demonstration of the Xixini Boho TV Stand's features, including sliding doors and cable management. (Source: XIxini)

4.2. Cable Management

The back panel of the TV stand includes strategically placed holes to facilitate the organization and concealment of various wires. Route your device cables through these holes to maintain a tidy and orderly appearance.



Figure 5: Cable Management System

5. Maintenance

To maintain the appearance and longevity of your Xixini Boho TV Stand, follow these care instructions:

- **Cleaning:** Wipe the surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat:** Do not place hot items directly on the surface without protective coasters.
- **Inspection:** Periodically check all fasteners and tighten if necessary to ensure structural integrity.

6. Troubleshooting

If you encounter any issues with your Xixini Boho TV Stand, please refer to the following common solutions:

- **Issue:** The TV stand feels wobbly or unstable.
  - **Solution:** Ensure the TV stand is placed on a flat, level surface. Adjust the two middle feet by rotating them until the stand is stable and level. Check that all assembly screws are tightened.
- **Issue:** Sliding doors do not move smoothly or fall off the track.
  - **Solution:** Verify that the sliding door rails were installed correctly and are free of obstructions. Ensure the doors are properly seated within the tracks. If the issue persists, re-check the assembly steps for the doors and rails.
- **Issue:** Parts are missing or damaged upon arrival.
  - **Solution:** Contact Xixini customer support immediately with your purchase details and a description of the missing or damaged parts.

7. Specifications

Feature	Detail
Brand	Xixini
Model Number	004
Color	White With Rattan
Material Type	Engineered Wood
Item Dimensions (L x W x H)	59.1 x 15.4 x 18.1 inches
Item Weight	57.7 pounds
Max TV Size Supported	65 inches
Number of Shelves	2
Additional Features	Adjustable Feet, Scratch Resistant, Sliding Doors, Cord Holes
Assembly Required	Yes (Easy to Assemble)

8. Warranty and Support

Xixini stands behind the quality of its products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.
For customer support, missing parts, or any inquiries regarding your Xixini Boho TV Stand, please contact the seller or visit the official Xixini store:

Visit the Xixini Store on Amazon

© 2026 Xixini. All rights reserved. This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DHZH8H7M

More documents and user manuals: **https://manuals.plus/**