Lenovo GX81Q72385

Lenovo USI Pen 2 Instruction Manual

Model: GX81Q72385

1. Introduction

The Lenovo USI Pen 2 is a versatile digital stylus designed to enhance your interaction with compatible Chrome OS devices. It offers a fluid and intuitive creative experience, supporting the Universal Stylus Initiative (USI) Protocol for broad compatibility and precise input.



Image: The Lenovo USI Pen 2, optimized for Chrome OS, offers a fluid and intuitive creative experience. It supports the Universal Stylus Initiative (USI) Protocol.

Key Features:

- **Chrome OS Compatibility:** Seamless integration with Chrome OS devices.
- **High Pressure Sensitivity:** Features 4096 levels of pressure sensitivity for precise control.
- **Magnetic Attachment:** Conveniently attaches to compatible devices for secure storage and quick access.

- **Durable Construction:** Crafted from aluminum for a premium feel and durability.
- **Replaceable AAAA Battery:** Powered by a single AAAA battery (included).

2. Setup

2.1. Battery Installation

The Lenovo USI Pen 2 requires one AAAA battery for operation. A battery is included with your purchase.

1. Gently twist the top cap of the pen counter-clockwise to open the battery compartment.
2. Insert one AAAA battery into the compartment, ensuring the positive (+) and negative (-) terminals are correctly aligned as indicated inside the pen.
3. Replace the top cap by twisting it clockwise until it is securely closed.

2.2. Initial Connection

The Lenovo USI Pen 2 utilizes the Universal Stylus Initiative (USI) protocol, which typically allows for automatic connection with compatible Chrome OS devices. No manual pairing process is usually required.

- Ensure your Chrome OS device is powered on and updated to ChromeOS 134 or later.
- Simply bring the pen close to the screen of your compatible device. The device should automatically detect the pen.
- If the pen does not respond, ensure the battery is correctly installed and charged.

3. Operating the Pen

The Lenovo USI Pen 2 provides a natural writing and drawing experience on your compatible Chrome OS device.



Image: The Lenovo USI Pen 2 offers exceptional pressure sensitivity with 4,096 levels, providing a paper-like writing experience.

3.1. Basic Usage

- **Writing and Drawing:** Use the pen tip directly on the screen to write, draw, or annotate in supported applications. The 4096 levels of pressure sensitivity allow for varying line thickness and opacity based on how hard you press.
- **Navigation:** The pen can also be used for general navigation, tapping, and selecting items on the screen, similar to using your finger.

- **Magnetic Attachment:** When not in use, attach the pen to the side of your compatible device for secure storage and easy access.

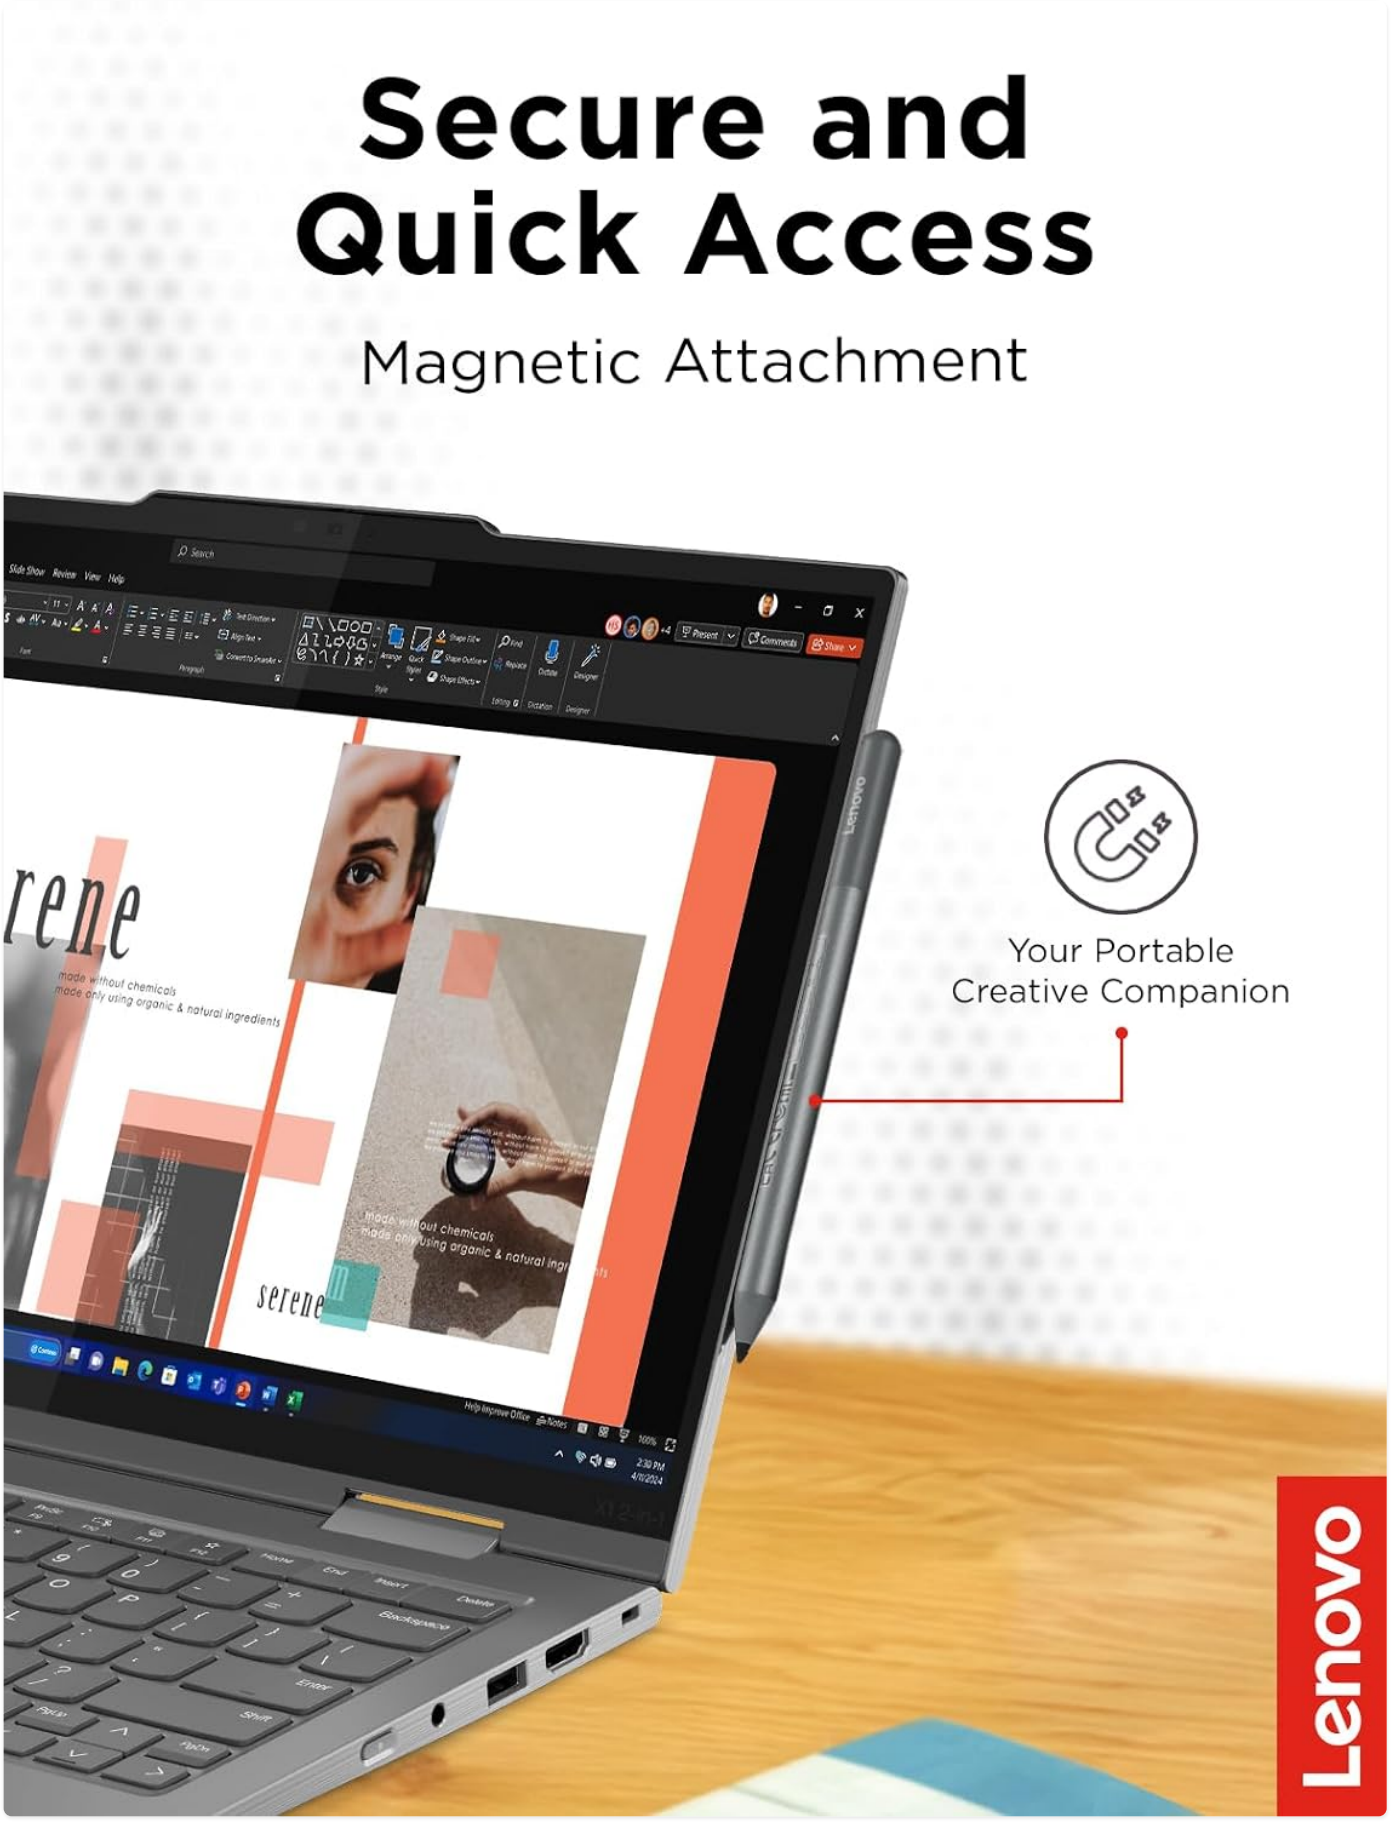


Image: The Lenovo USI Pen 2 features a magnetic attachment for secure and quick access, serving as a portable creative companion.

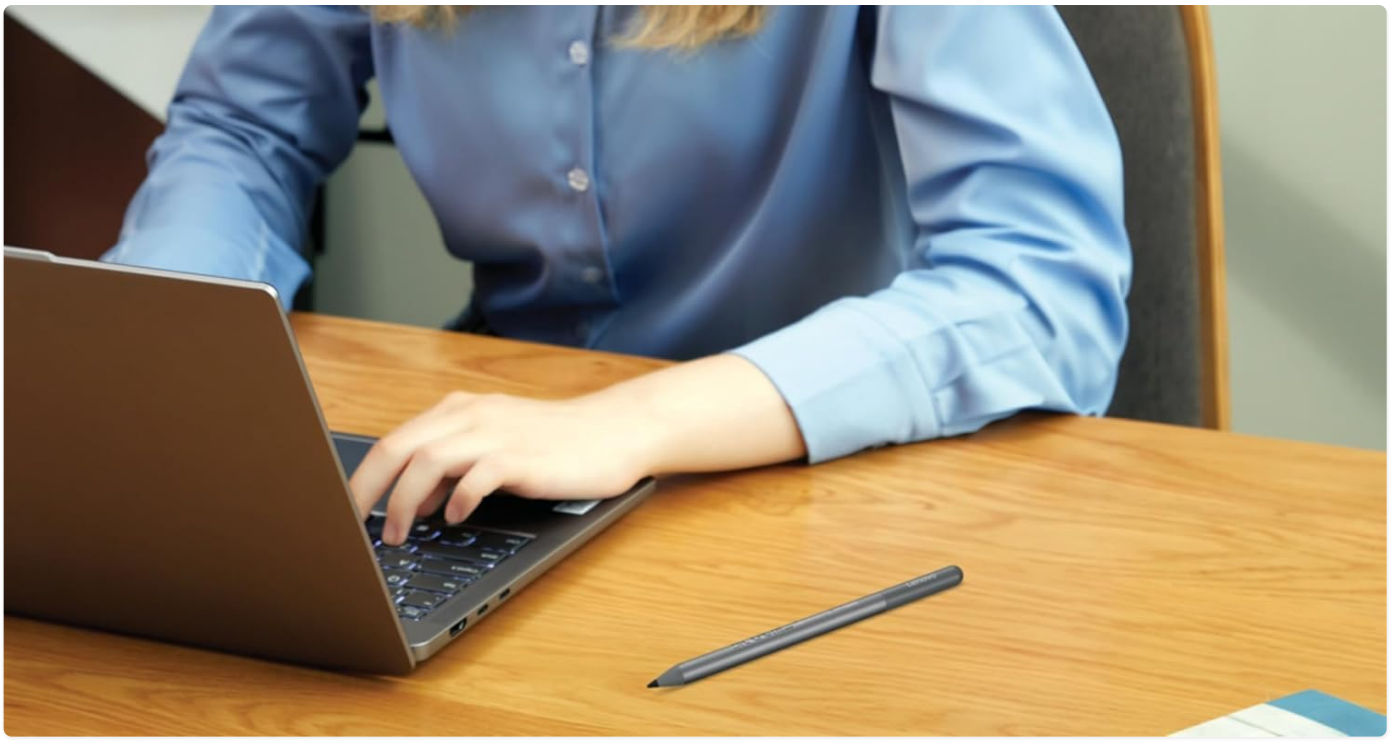


Image: A user operating the Lenovo USI Pen 2 with a compatible laptop, showcasing its practical application.

4. Maintenance

4.1. Battery Replacement

When the pen's performance degrades or it stops responding, it may be time to replace the AAAA battery. Follow the battery installation steps in Section 2.1.

4.2. Cleaning

- **Pen Body:** Wipe the pen body with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Pen Tip:** Ensure the pen tip is free from debris. If necessary, gently wipe it with a slightly damp cloth and allow it to dry completely before use. Do not attempt to remove the pen tip unless it is designed for replacement.

4.3. Storage

Store the pen in a cool, dry place. When not in use, attach it magnetically to your compatible device or store it in a protective case to prevent damage to the tip.

5. Troubleshooting

5.1. Pen Not Responding

- **Check Battery:** Ensure the AAAA battery is correctly installed and has sufficient charge. Replace the battery if needed.
- **Device Compatibility:** Verify that your device is compatible with the USI protocol and meets the minimum ChromeOS version (134 or later).
- **Restart Device:** Try restarting your Chrome OS device.
- **Clean Screen:** Ensure the device screen is clean and free of smudges or debris that might interfere with pen detection.

5.2. Inaccurate Input or Jitter

- **Clean Pen Tip:** Ensure the pen tip is clean.
- **Screen Protector:** Some thick or poorly applied screen protectors can affect pen performance. Try removing it temporarily to see if performance improves.
- **Interference:** Move away from strong electromagnetic fields that might cause interference.

6. Specifications

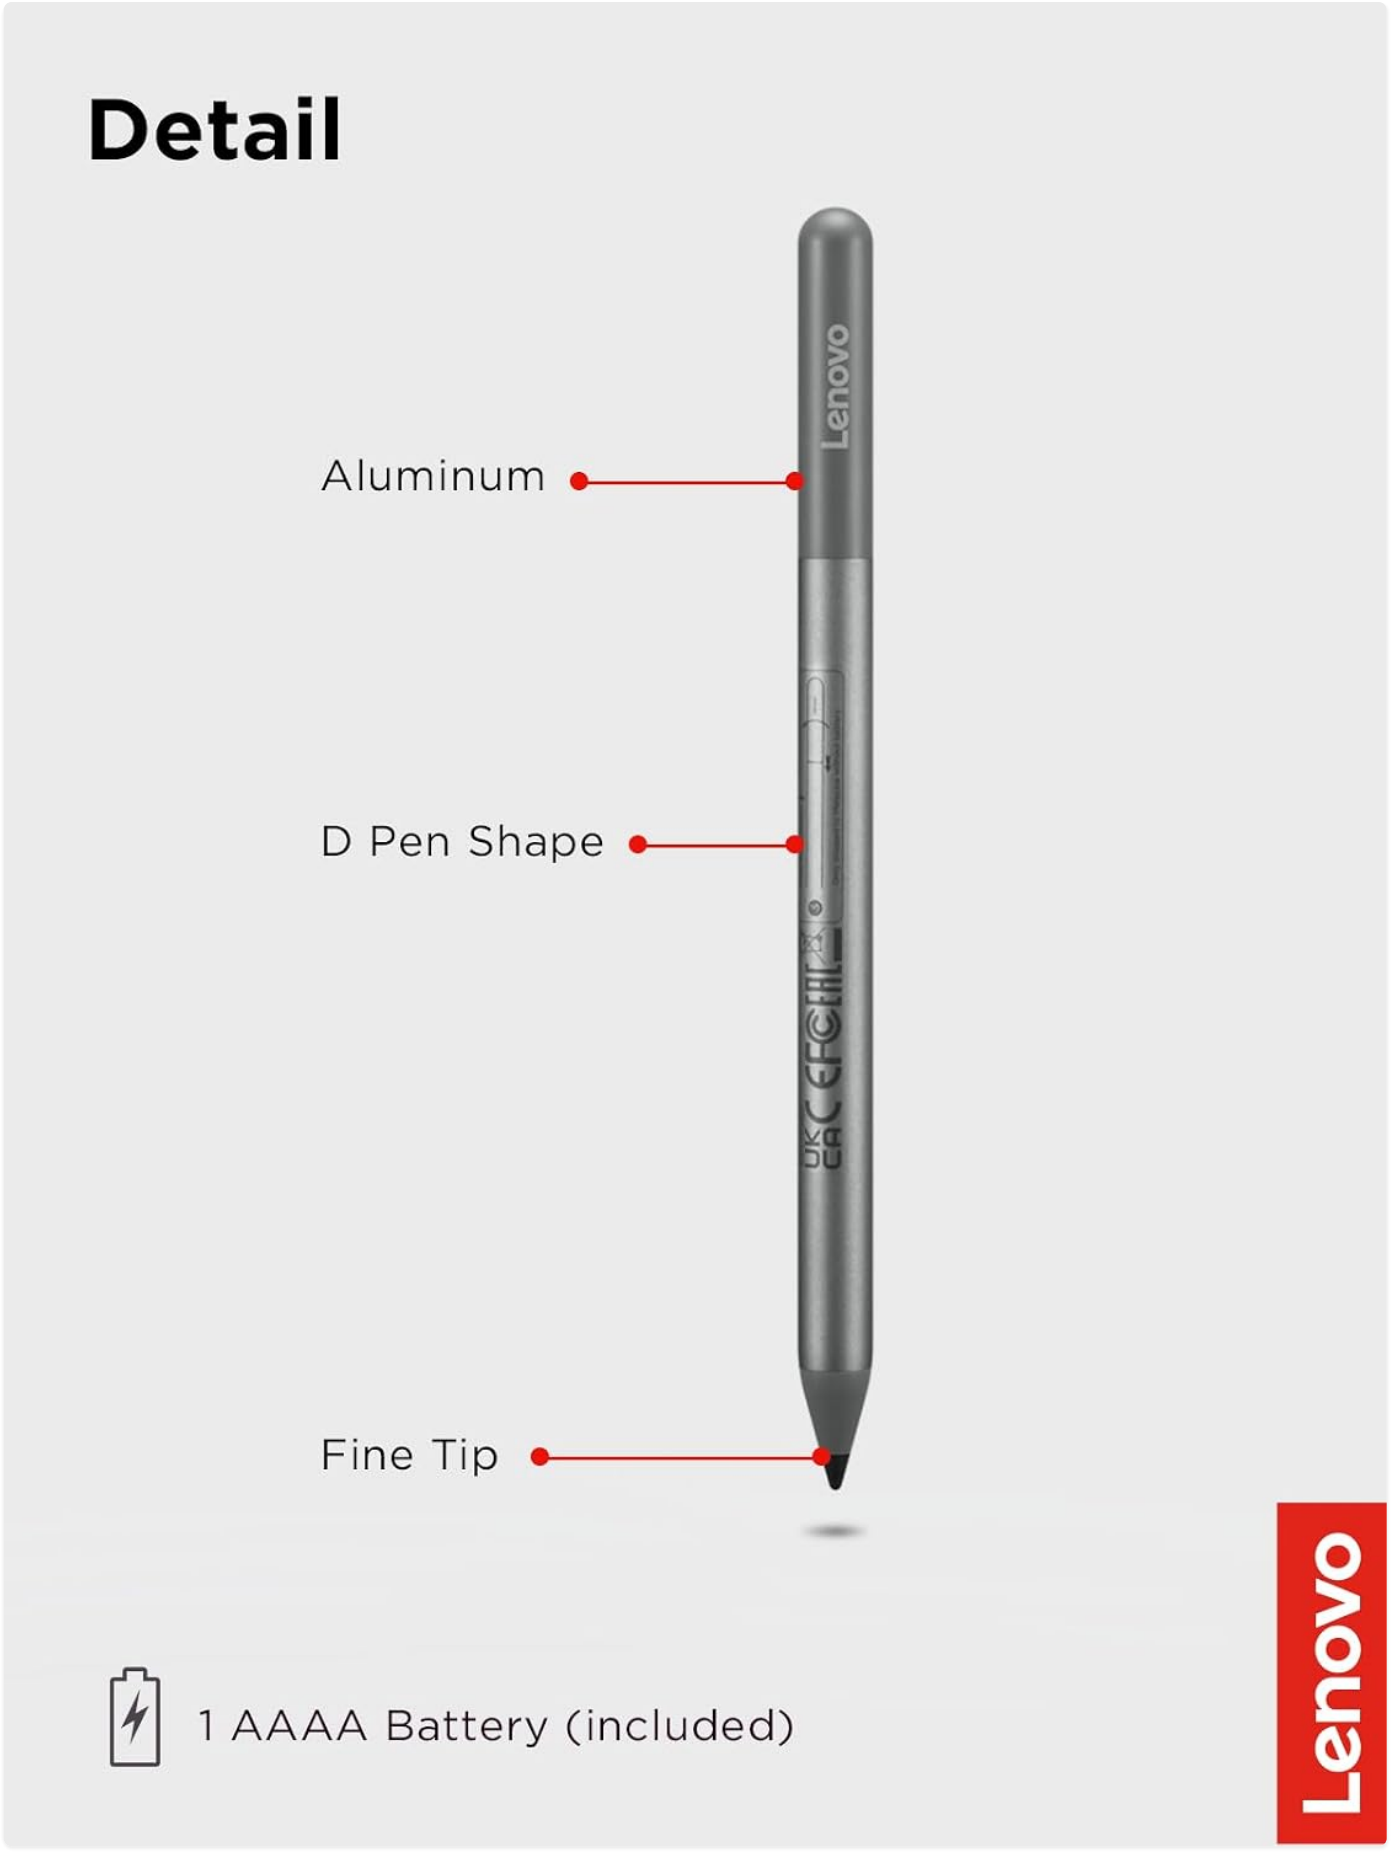


Image: A detailed breakdown of the Lenovo USI Pen 2, showing its aluminum body, D pen shape, fine tip, and battery type.

Model Number	GX81Q72385
Brand	Lenovo

Material	Aluminum
Color	Gray
Dimensions (LxWxH)	15.8 x 0.9 x 0.9 cm (6.20 x 0.37 x 0.37 inches)
Diameter	9.5 mm (0.37 inches)
Weight	19.3 grams (0.043 lbs)
Pressure Sensitivity	4096 Levels
Battery Type	1 x AAAA (included)
Minimum OS Version	ChromeOS 134
Compatible Devices	Tablets, Notebook PCs with USI support
UPC	195892109785


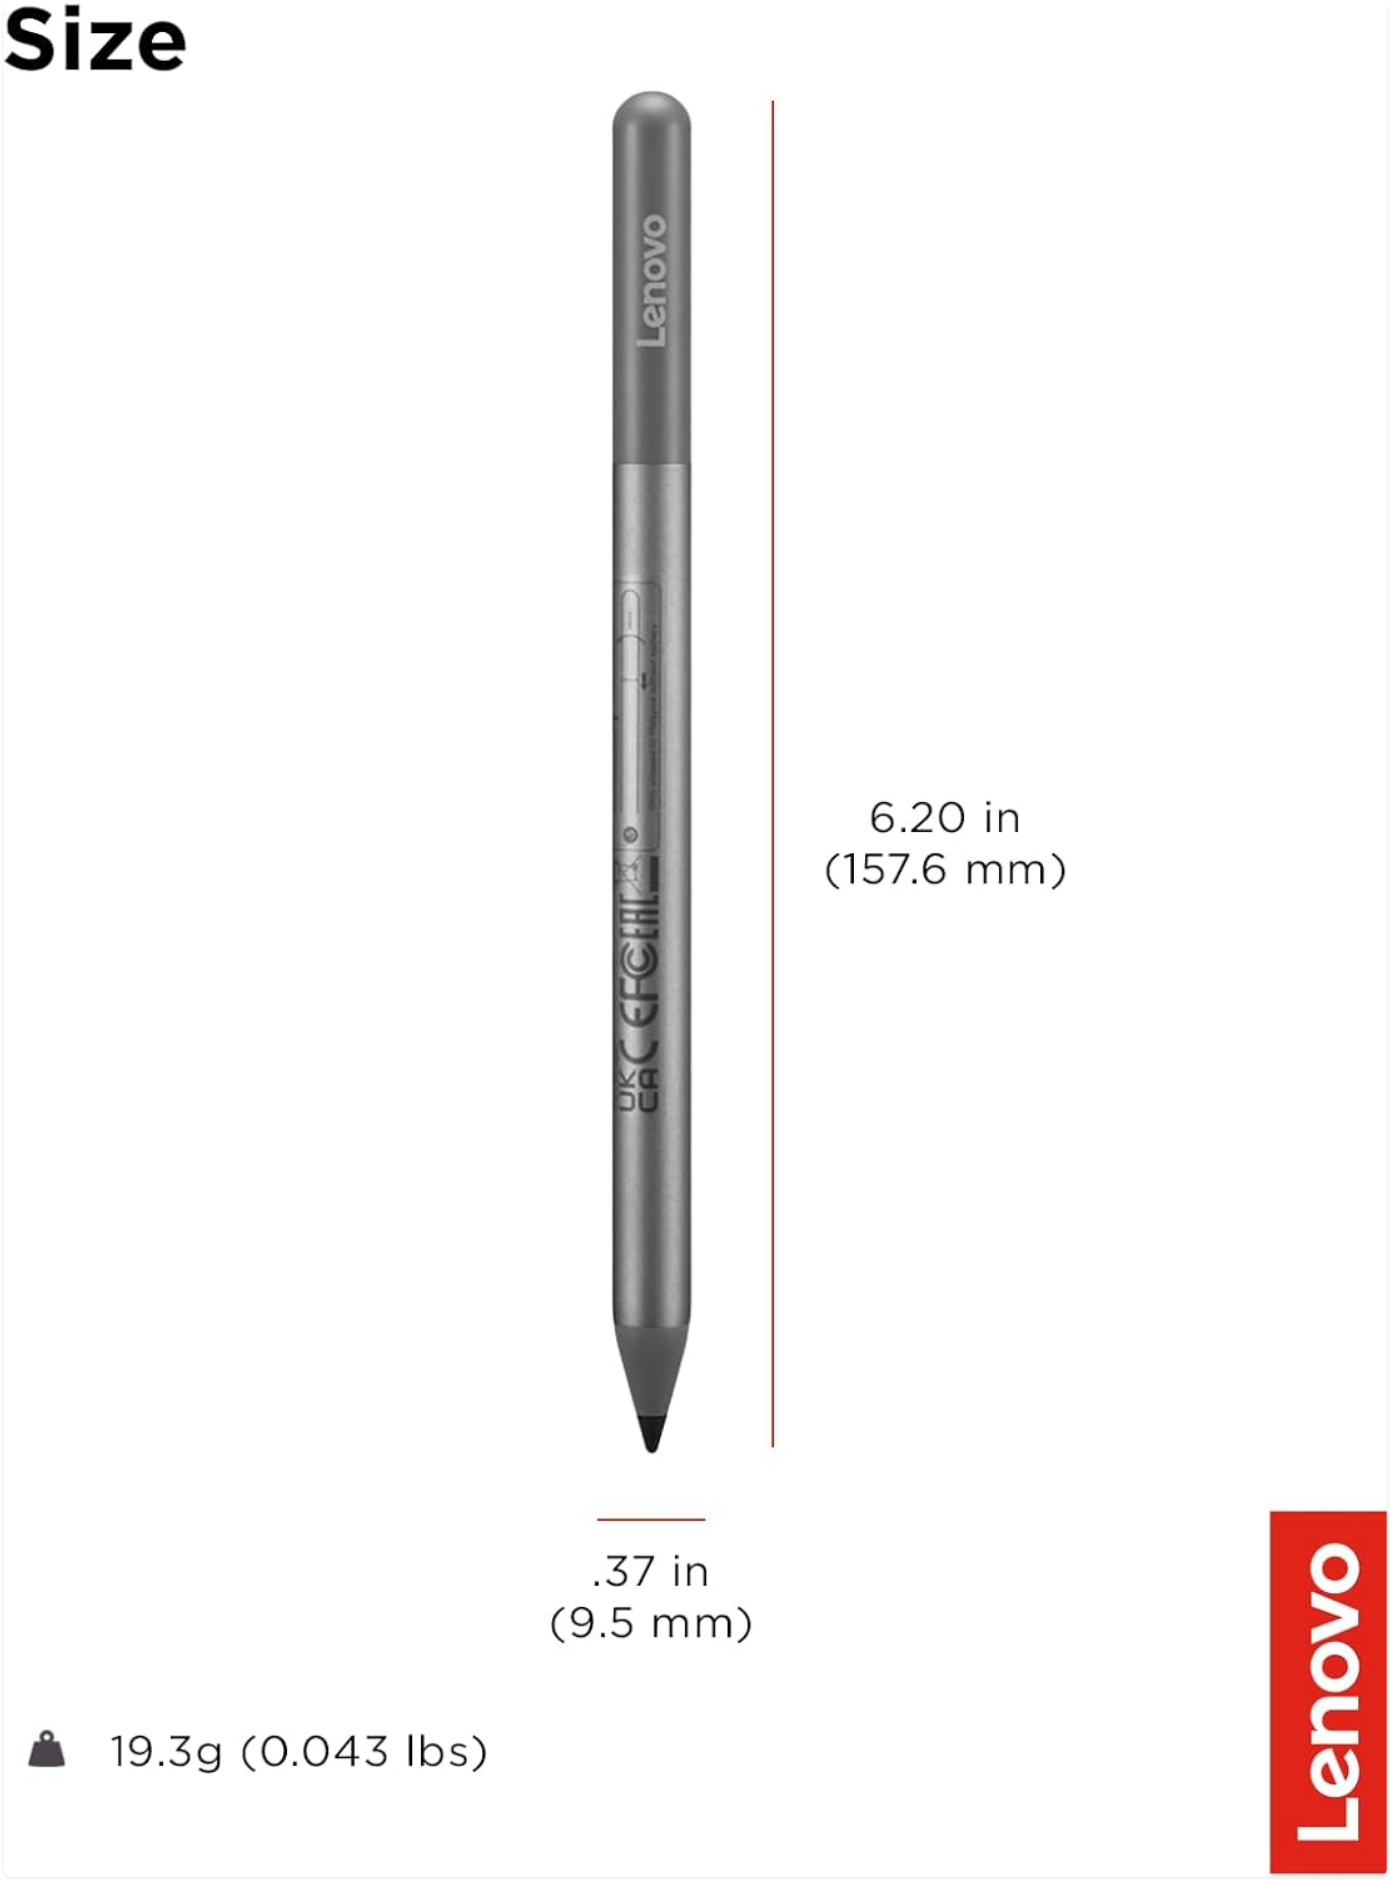


Image: Dimensions and weight of the Lenovo USI Pen 2.

7. Compatibility

The Lenovo USI Pen 2 is compatible with touch screen versions of the following Chrome OS models:

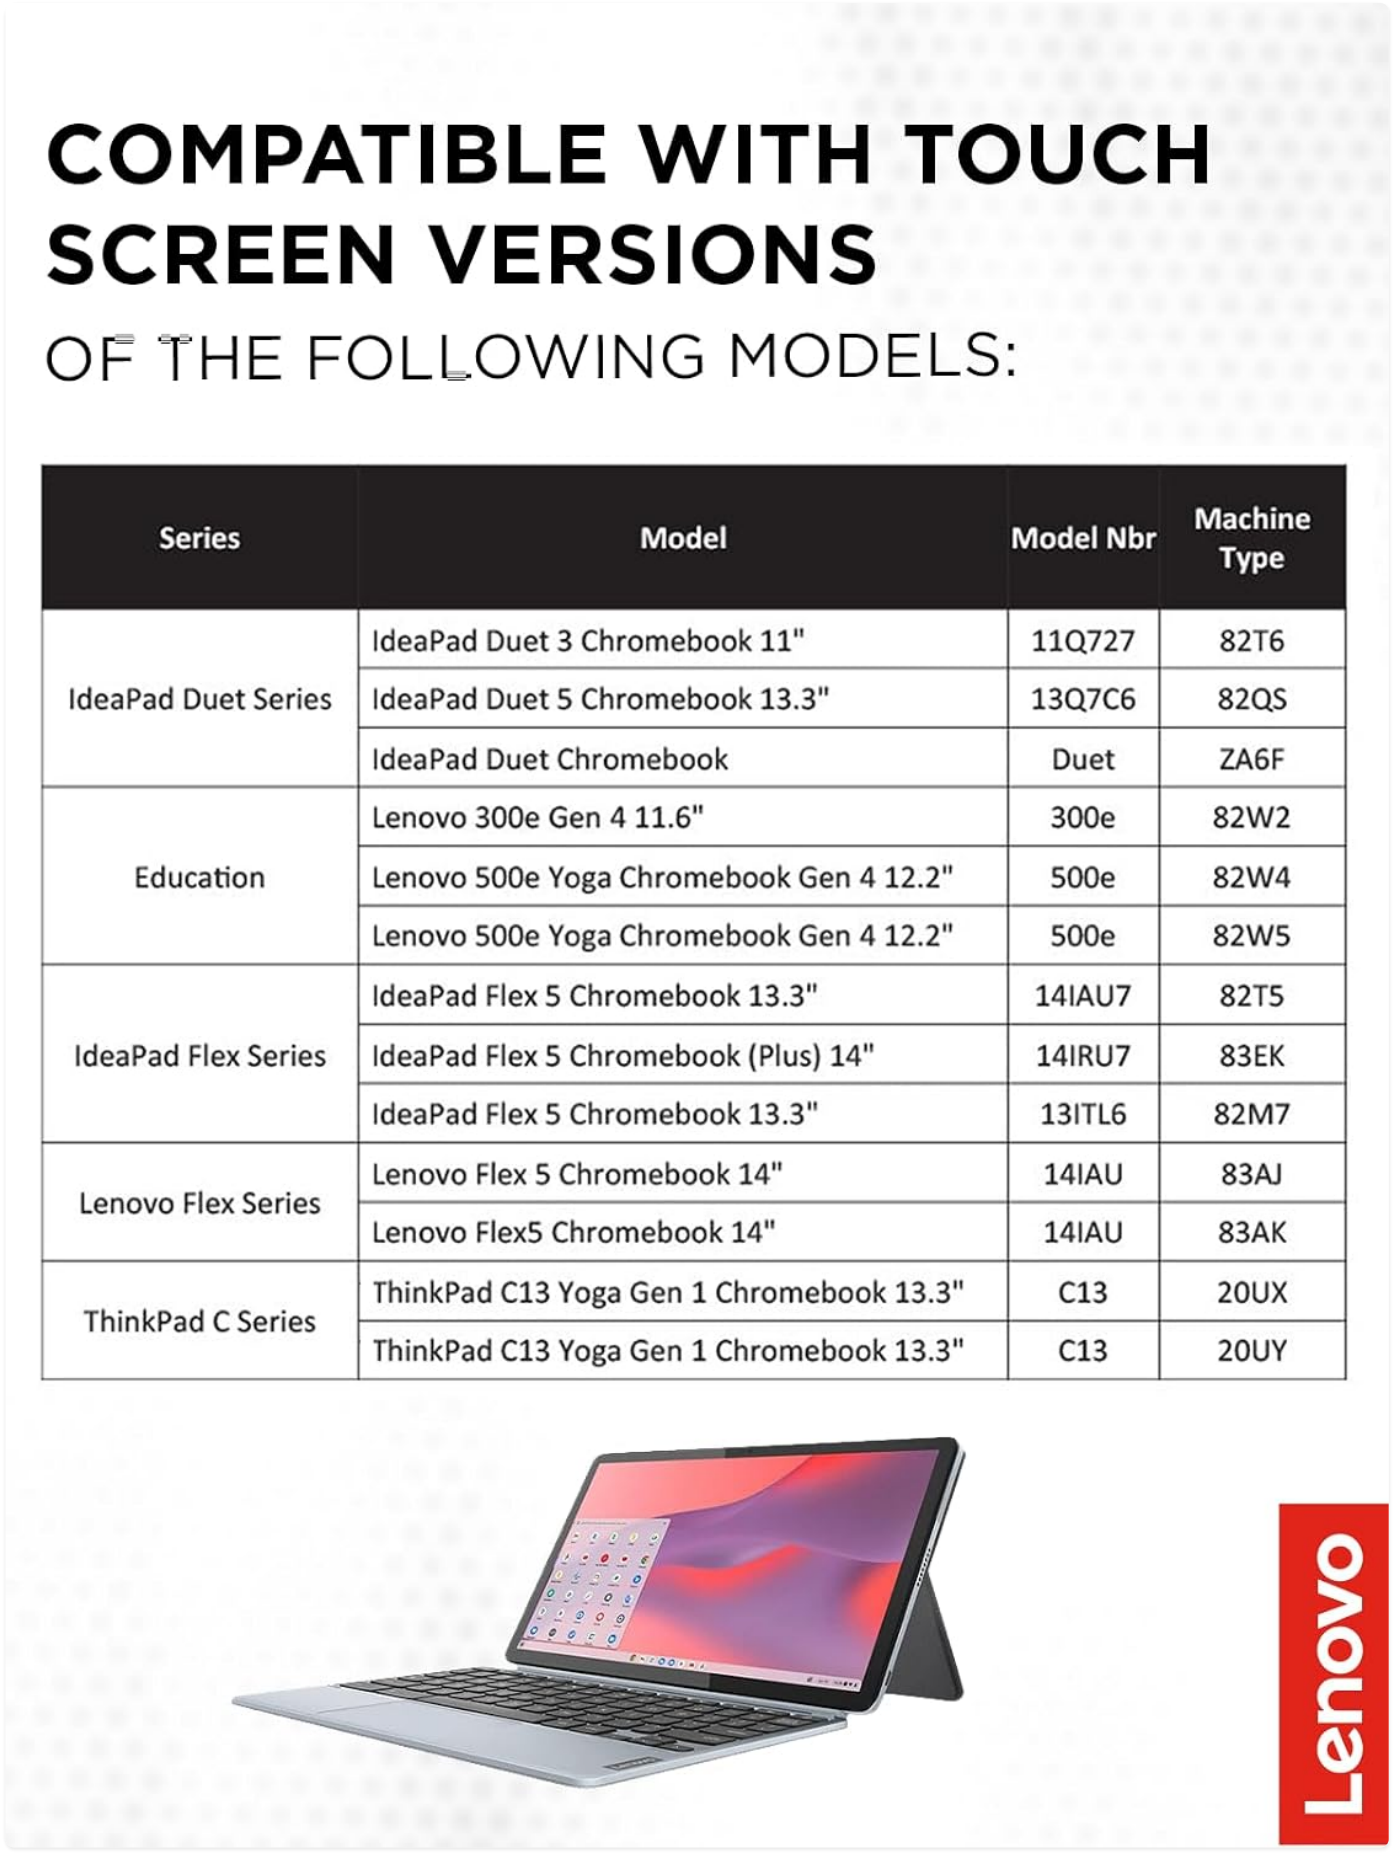

Series	Model	Model Nbr	Machine Type
IdeaPad Duet Series	IdeaPad Duet 3 Chromebook 11"	11Q727	82T6
	IdeaPad Duet 5 Chromebook 13.3"	13Q7C6	82QS
	IdeaPad Duet Chromebook	Duet	ZA6F
Education	Lenovo 300e Gen 4 11.6"	300e	82W2
	Lenovo 500e Yoga Chromebook Gen 4 12.2"	500e	82W4
	Lenovo 500e Yoga Chromebook Gen 4 12.2"	500e	82W5
IdeaPad Flex Series	IdeaPad Flex 5 Chromebook 13.3"	14IAU7	82T5
	IdeaPad Flex 5 Chromebook (Plus) 14"	14IRU7	83EK
	IdeaPad Flex 5 Chromebook 13.3"	13ITL6	82M7
Lenovo Flex Series	Lenovo Flex 5 Chromebook 14"	14IAU	83AJ
	Lenovo Flex5 Chromebook 14"	14IAU	83AK
ThinkPad C Series	ThinkPad C13 Yoga Gen 1 Chromebook 13.3"	C13	20UX
	ThinkPad C13 Yoga Gen 1 Chromebook 13.3"	C13	20UY

Image: A comprehensive list of compatible Lenovo Chromebook models.

Series	Model	Model Nbr	Machine Type

Series	Model	Model Nbr	Machine Type
IdeaPad Duet Series	IdeaPad Duet 3 Chromebook 11"	11Q727	82T6
	IdeaPad Duet 5 Chromebook 13.3"	13Q7C6	82QS
	IdeaPad Duet Chromebook	Duet	ZA6F
Education	Lenovo 300e Gen 4 11.6"	300e	82W2
	Lenovo 500e Yoga Chromebook Gen 4 12.2"	500e	82W4
	Lenovo 500e Yoga Chromebook Gen 4 12.2"	500e	82W5
IdeaPad Flex Series	IdeaPad Flex 5 Chromebook 13.3"	14IAU7	82T5
	IdeaPad Flex 5 Chromebook (Plus) 14"	14IRU7	83EK
	IdeaPad Flex 5 Chromebook 13.3"	13ITL6	82M7
Lenovo Flex Series	Lenovo Flex 5 Chromebook 14"	14IAU	83AJ
	Lenovo Flex5 Chromebook 14"	14IAU	83AK
ThinkPad C Series	ThinkPad C13 Yoga Gen 1 Chromebook 13.3"	C13	20UX
	ThinkPad C13 Yoga Gen 1 Chromebook 13.3"	C13	20UY

8. Safety Information

- Keep the pen away from small children to prevent accidental ingestion of small parts, especially the battery.
- Do not expose the pen to extreme temperatures, direct sunlight, or liquids.
- Do not attempt to disassemble or modify the pen, as this may void the warranty and cause damage.
- Dispose of batteries according to local regulations. Do not dispose of batteries in fire.

9. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your original purchase or visit the official Lenovo support website. You can typically find support resources, FAQs, and contact information for your region there.

Lenovo Support Website: https://support.lenovo.com

© 2026 Lenovo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question