Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VCM 920259

VCM Floka XXL Display Cabinet Instruction Manual

Model: 920259

1. Introduction

Thank you for choosing the VCM Floka XXL Display Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new display cabinet. Please read these instructions carefully before assembly and retain them for future reference.
The VCM Floka XXL Display Cabinet is designed to showcase collectibles with its durable steel frame and genuine glass doors and side panels. It features three adjustable shelves for organized storage.

2. Safety Information

Important Safety Warning: To prevent personal injury, harm to animals, or material damage, the furniture must be securely mounted to the wall. Non-compliant assembly can cause injuries. Use only suitable wall mounting accessories. If you have questions about appropriate fastening material, contact a specialized company.
This product is not a toy. Children and animals can injure themselves or others. Keep assembly equipment and accessories out of reach of children and animals to exclude any risk of injury or suffocation.

3. Package Contents

Before beginning assembly, ensure all components are present and undamaged. If any parts are missing or damaged, please contact VCM customer support.

- 1 x VCM Floka XXL Display Cabinet (unassembled)
- Mounting hardware
- Simple assembly instructions (this document)

4. Setup and Assembly

Assembly requires basic tools (not included) such as a screwdriver and possibly a drill for wall mounting. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.

2. **Assemble Frame:** Follow the provided assembly instructions to connect the steel frame components. Ensure all screws are tightened securely but do not overtighten.
3. **Install Glass Panels:** Carefully insert the genuine glass side panels and secure them according to the instructions.
4. **Attach Doors:** Mount the glass doors to the frame using the provided hinges. Ensure they open and close smoothly.
5. **Install Shelves:** Place the adjustable shelves at your desired height. The cabinet includes three shelves.
6. **Wall Mounting (Crucial Safety Step):**
   As per safety warnings, this cabinet **must** be securely mounted to a wall to prevent tipping. Identify a suitable wall location. Use appropriate wall anchors and screws for your wall type (e.g., drywall, concrete, wood studs). If unsure, consult a professional.



Image: Fully assembled VCM Floka XXL Display Cabinet. This image shows the cabinet's overall appearance and how it might look in a room.

For detailed visual guidance, refer to the included assembly diagrams.

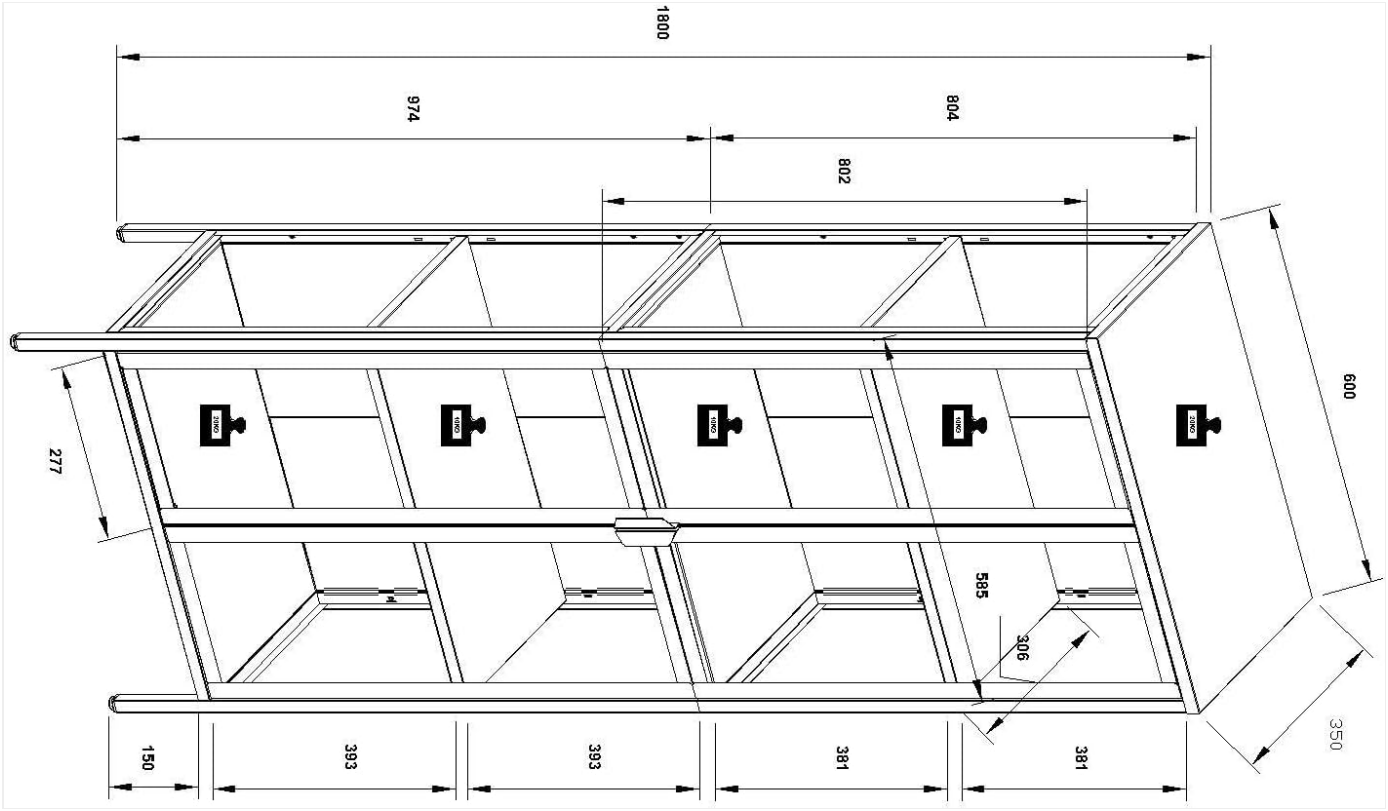


Image: Technical drawing illustrating the dimensions and internal structure of the VCM Floka XXL Display Cabinet. All measurements are in millimeters.

5. Operating Instructions

5.1 Opening and Closing Doors

The cabinet features two hinged glass doors. To open, gently pull the handle. To close, push the doors until they are fully shut. Avoid slamming the doors to prevent damage to the glass or hinges.





Image: Close-up view of the door and handle mechanism of the VCM Floka XXL Display Cabinet.

5.2 Adjusting Shelves

The cabinet includes adjustable shelves. To adjust a shelf's height:

1. Empty the shelf of all items.
2. Carefully lift the shelf and remove it from its supports.
3. Relocate the shelf supports to the desired height. Ensure they are securely seated in the frame's pre-drilled holes.
4. Place the shelf back onto the supports, ensuring it is level and stable before placing items on it.

5.3 Loading Capacity

Distribute weight evenly across shelves. Avoid placing excessively heavy items on a single shelf or concentrating weight in one area to prevent bowing or damage.

6. Maintenance and Care

6.1 Cleaning

- **Glass Surfaces:** Use a standard glass cleaner and a soft, lint-free cloth. Spray cleaner onto the cloth, not directly onto the glass, to avoid drips into the frame.
- **Steel Frame:** Wipe with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by drying with a clean cloth. Avoid abrasive cleaners or harsh chemicals.

6.2 General Care

- Regularly check all screws and connections for tightness, especially after moving the cabinet.
- Avoid exposing the cabinet to direct sunlight for prolonged periods or extreme temperature changes, which can affect materials.
- Do not use the cabinet as a step stool or place heavy objects on top of it.

7. Troubleshooting

Problem	Possible Cause	Solution
Doors do not close properly.	Hinges are loose or misaligned.	Check and tighten hinge screws. Adjust hinge alignment if necessary.
Cabinet feels wobbly.	Assembly screws are loose; cabinet not securely wall-mounted.	Ensure all assembly screws are tightened. Verify the cabinet is securely anchored to the wall as per safety instructions.
Shelf is not level.	Shelf supports are not correctly seated.	Remove items, re-seat shelf supports firmly into the frame holes.

8. Specifications

- **Model:** VCM Floka XXL
- **Model Number:** 920259
- **Brand:** VCM
- **Dimensions (H x W x D):** 180 x 60 x 35 cm (approximately 70.9 x 23.6 x 13.8 inches)
- **Material:** Alloy Steel, Genuine Glass
- **Color:** Black
- **Features:** 3 Adjustable Shelves, Hinged Glass Doors
- **Mounting Type:** Floor Mount (requires wall anchoring)

9. Warranty and Support

For warranty information or technical support, please refer to the VCM official website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer Address: Ersteiner Straße 12, D-79346 Endingen

© 2025 VCM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DJHJ56GY

More documents and user manuals: **https://manuals.plus/**