Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hatteker HT-6079

Hatteker Men's Beard Trimmer Professional Cordless Hair Clipper

Model: HT-6079 | Brand: Hatteker

1. Introduction

The Hatteker Men's Beard Trimmer is a versatile 4-in-1 grooming kit designed for professional and home use. It combines a hair clipper, beard trimmer, T-blade trimmer, and precision trimmer into one cordless, waterproof device. Equipped with a self-sharpening ceramic titanium blade and an adjustable motor with three speed modes, this clipper ensures a precise and comfortable grooming experience for all hair types. Its intuitive LED display provides real-time information on battery life and speed settings, while the Type-C charging port offers convenient and fast power replenishment.

2. Safety Information

For safe operation and to prevent injury or damage to the device, please adhere to the following safety guidelines:

- Avoid use on infants.
- Keep the device away from water sources when not in use or during charging.
- Follow recommended cleaning and maintenance procedures to prevent skin irritation or eye injury from cutting blades.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel for any repairs.
- Ensure the device is fully charged before first use to optimize battery performance.

3. Package Contents

Your Hatteker Men's Beard Trimmer package includes the following items:

- Hatteker Hair Clipper (Main Unit)
- Full-Size Trimmer Head
- Beard Trimmer Head with Precision Dial (1-10mm)
- T-Blade Trimmer Head
- Precision Trimmer Head
- 6 Guide Combs (for various hair lengths: 3mm, 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm)
- Type-C Charging Cable
- Cleaning Brush
- Comb
- Storage Bag



Figure 3.1: Complete Hatteker Grooming Kit Contents

4. Setup

4.1 Charging the Device

Before first use, fully charge the hair clipper. The device uses a convenient Type-C charging cable. A full charge takes approximately 4 hours and provides up to 240 minutes of working time.

1. Connect the Type-C charging cable to the charging port at the bottom of the clipper.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a USB port.
3. The LED display will show the battery capacity percentage and light up from bottom to top during charging.
4. Once fully charged, the display will indicate 100%. Disconnect the charger.

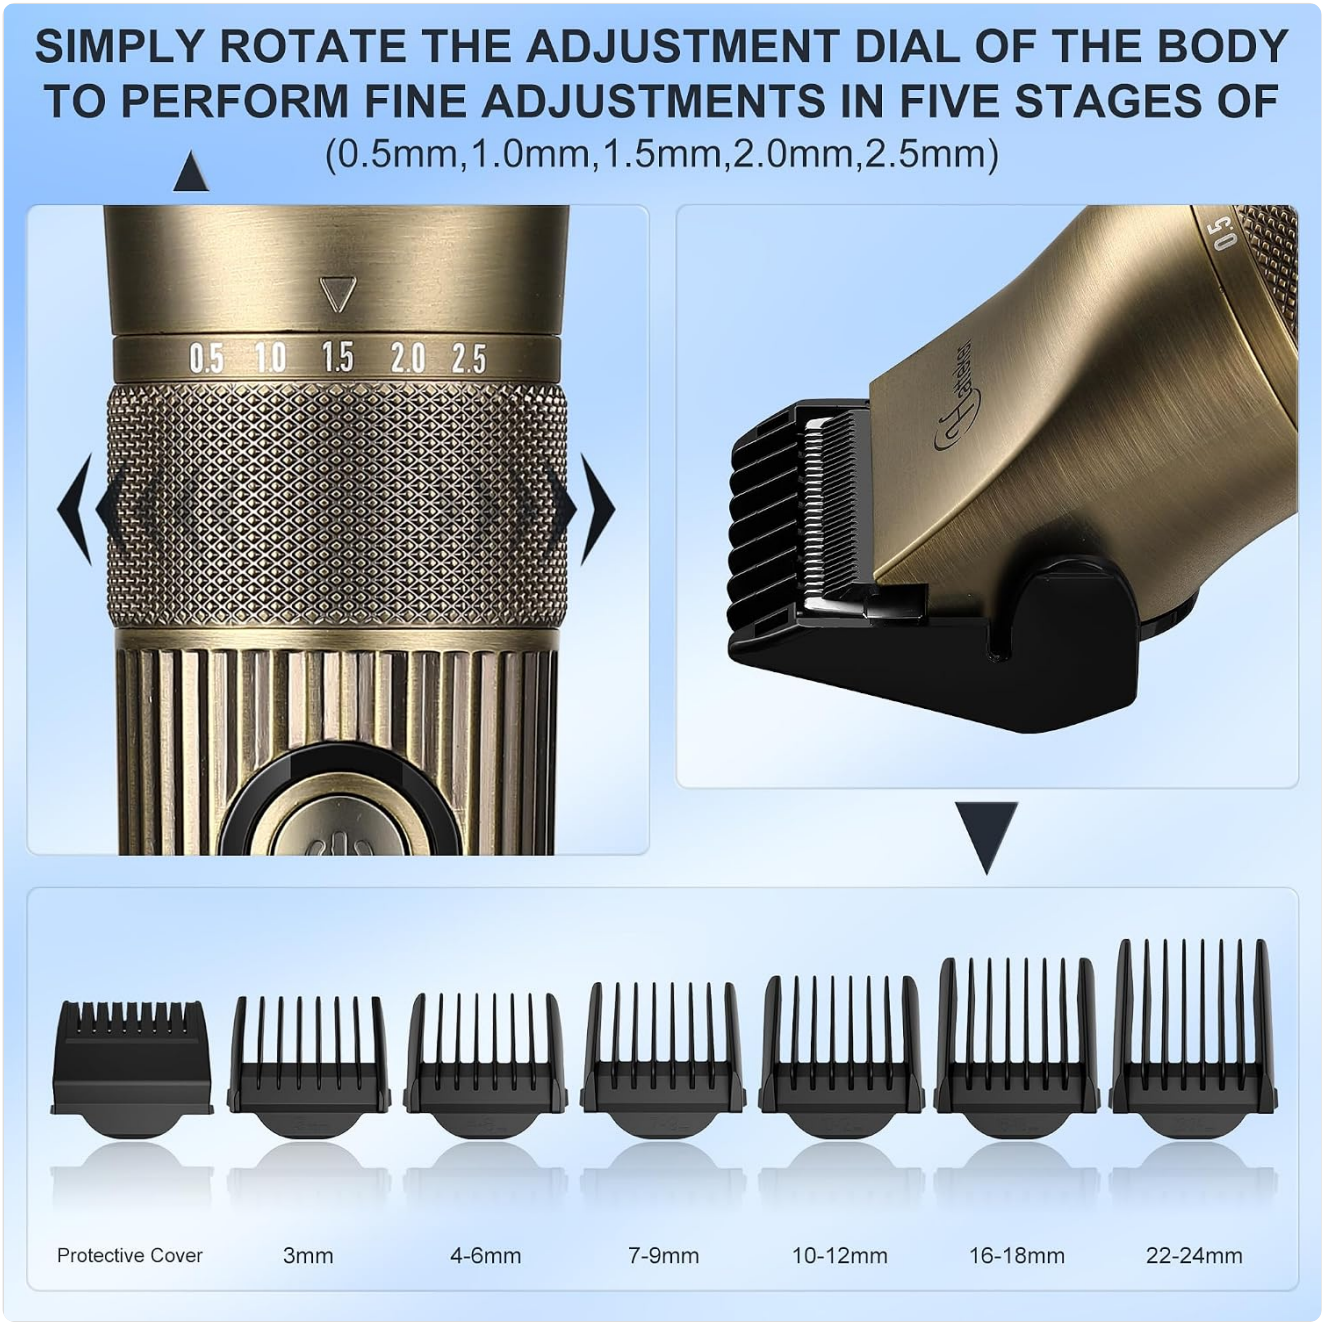


Figure 4.1: Type-C Fast Charging

4.2 Attaching and Detaching Trimmer Heads

The Hatteker grooming kit comes with multiple interchangeable trimmer heads for different grooming needs.

1. **To Detach:** Hold the clipper firmly. Place your thumb on the blade teeth and push outward with force until the head detaches.
2. **To Attach:** Align the desired cutter head with the slot on the clipper body. Push the cutter head into the slot with force until it clicks securely into place.



Figure 4.2: Trimmer Head Disassembly and Installation

4.3 Attaching Guide Combs

Guide combs are used to achieve specific hair lengths. The kit includes 6 guide combs for the full-size trimmer and a precision dial comb for the beard trimmer.

1. Ensure the desired trimmer head is securely attached to the clipper.
2. For standard guide combs: Align the comb with the blade and slide it onto the trimmer head until it locks into place.
3. For the beard trimmer with precision dial: Attach the beard trimmer head. The dial on this head allows for length adjustments from 1-10mm. Rotate the dial to select your desired length.



Figure 4.3: Beard Trimmer Precision Dial

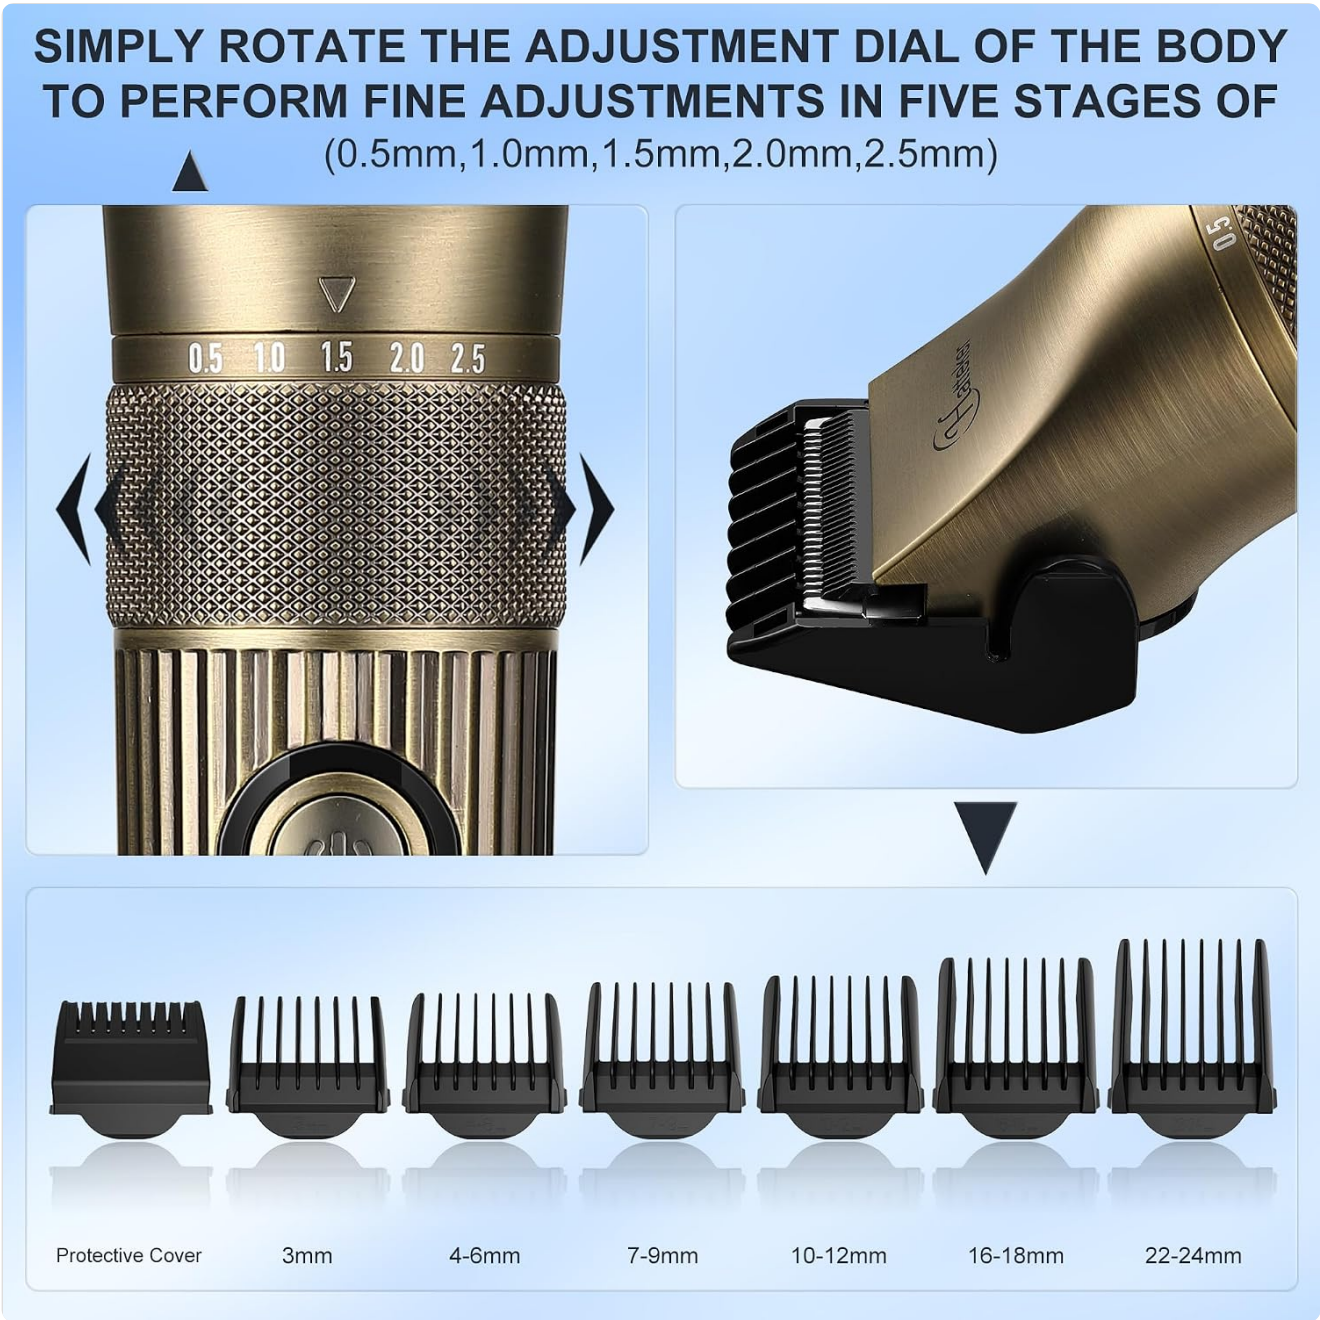


Figure 4.4: Adjustable Micro Lengths and Guide Combs

5. Operating Instructions

5.1 Power On/Off and Speed Adjustment

The clipper features an intuitive power button and speed adjustment controls.

1. **Power On/Off:** Press the power button once to turn the clipper on or off.
2. **Adjusting Speed:** The clipper offers three speed modes (6500 RPM, 7000 RPM, 7500 RPM). Press the '+' or '-' buttons to cycle through the speeds. The LED display will show the current RPM.
    - **Soft Mode (6500 RPM):** Suitable for children or individuals with thinner hair.
    - **Normal Mode (7000 RPM):** Ideal for daily haircutting needs and normal hair hardness.
    - **Powerful Mode (7500 RPM):** Designed for men with hard or thick hair.



Figure 5.1: Adjustable 3-Speed Haircut Speed

5.2 Using the Trimmer Heads

Select the appropriate trimmer head and guide comb for your desired style.

- **Full-Size Trimmer:** Use with the provided guide combs (3mm, 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm) for general hair cutting and styling. The main unit also has five adjustable micro lengths (0.5/1/1.5/2/2.5 mm) for precise cutting without a comb.
- **Beard Trimmer:** Attach the beard trimmer head and use its integrated precision dial to select lengths from 1-10mm for beard trimming and shaping.
- **T-Blade Trimmer:** Ideal for creating sharp lines, artwork, and hard or soft lining around the hairline and beard.
- **Precision Trimmer:** Designed for detailing and precise trimming of sideburns, necklines, and other intricate areas.

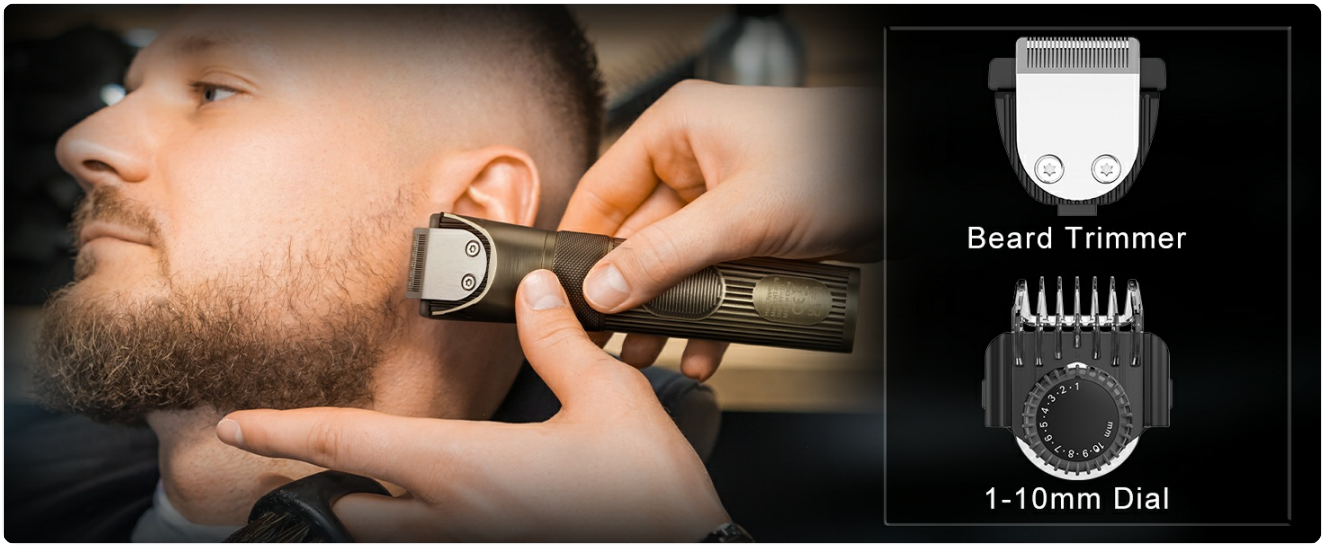


Figure 5.2: Beard Trimmer in Use



Figure 5.3: T-Blade Trimmer in Use



Figure 5.4: Precision Trimmer in Use

5.3 Travel Lock

To prevent accidental activation during travel or storage, the clipper features a travel lock function.

- **Activate Travel Lock:** Long press the power button for three seconds. A lock icon will appear on the LED

display.

- **Deactivate Travel Lock:** Long press the power button for three seconds again. The lock icon will disappear, and the clipper will be ready for use.

6. Maintenance

6.1 Cleaning the Clipper

The Hatteker hair clipper is IPX6 waterproof, making cleaning simple and convenient.

1. After each use, turn off the clipper.
2. Detach the trimmer head (refer to Section 4.2).
3. Use the provided cleaning brush to remove any loose hairs from the blades and the clipper body.
4. Rinse the trimmer head and the clipper body under running tap water for thorough cleaning. Ensure all hair residue is removed.
5. Allow all parts to air dry completely before reattaching the head or storing the device.



Figure 6.1: Wholebody Waterproof (IPX6)



Figure 6.2: Cleaning and Maintenance Steps

6.2 Blade Lubrication

To maintain optimal cutting performance and blade longevity, it is recommended to lubricate the blades regularly.

- After cleaning and drying the trimmer head, apply a small drop of lubricant oil (not included) to the blade teeth.
- Turn on the clipper for a few seconds to allow the oil to distribute evenly across the blades.
- Wipe off any excess oil with a soft cloth.

7. Troubleshooting

If you encounter any issues with your Hatteker hair clipper, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery; Travel lock activated.	Charge the clipper fully. Deactivate travel lock by long pressing the power button for 3 seconds.
Poor cutting performance or pulling hair.	Blades are dull or clogged with hair; Insufficient lubrication.	Clean the blades thoroughly. Apply a drop of lubricant oil to the blades. Ensure the correct trimmer head and comb are used for the hair type.
Guide comb detaches easily or doesn't stay in place.	Improper attachment; Damaged comb.	Ensure the guide comb is securely snapped onto the trimmer head. Inspect the comb for any damage and replace if necessary.
LED display is not working.	Device is off; Malfunction.	Turn on the device. If the issue persists after charging, contact customer support.

8. Specifications

Feature	Detail
Model Number	HT-6079
Blade Material	Ceramic Titanium Blade
Power Source	Battery Powered (1 AA battery included)
Charging Time	4 hours
Runtime	240 minutes
Waterproof Rating	IPX6
Adjustable Micro Lengths	0.5 / 1 / 1.5 / 2 / 2.5 mm
Speed Modes	6500 RPM (Soft), 7000 RPM (Normal), 7500 RPM (Powerful)
Color	Bronze
Manufacturer	Hatteker
Country of Origin	China
Package Dimensions	8.5 x 5.91 x 2.32 inches
Item Weight	1.37 Pounds

9. Official Product Video

Watch the official product video for a visual guide on the Hatteker Men's Beard Trimmer Professional Hair Clipper, demonstrating its features and usage.

Your browser does not support the video tag.

Video 9.1: Hatteker Men's Beard Trimmer Professional Hair Clipper (Seller Video, 0:44)

10. Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the warranty card included with your purchase or visit the official Hatteker website. Contact details for customer service are typically provided on the manufacturer's packaging or website.

© 2025 Hatteker. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DJJSQ3N2

More documents and user manuals: **https://manuals.plus/**