FPD CG65-C3

FPD 65-inch 4K UHD Google TV (Model CG65-C3) User Manual

Model: CG65-C3 | Brand: FPD

1. Introduction

This manual provides essential information for the safe and efficient operation of your FPD 65-inch 4K UHD Google TV, model CG65-C3. Please read these instructions thoroughly before using the television and retain them for future reference.

The FPD CG65-C3 is a 65-inch 4K LED Smart TV featuring Google TV OS, HDR10, Dolby Vision, Dolby Atmos, MEMC technology, and a voice assistant remote. It includes built-in Google Cast for seamless content streaming.

2. What's in the Box

Verify that all components are present before proceeding with setup:

- FPD 65-inch 4K UHD Google TV
- TV Stands (2 pieces)
- User Manual (this document)
- Remote Control
- AAA Batteries (2 pieces)
- Base Mounting Accessories
- AV Adapter Cable

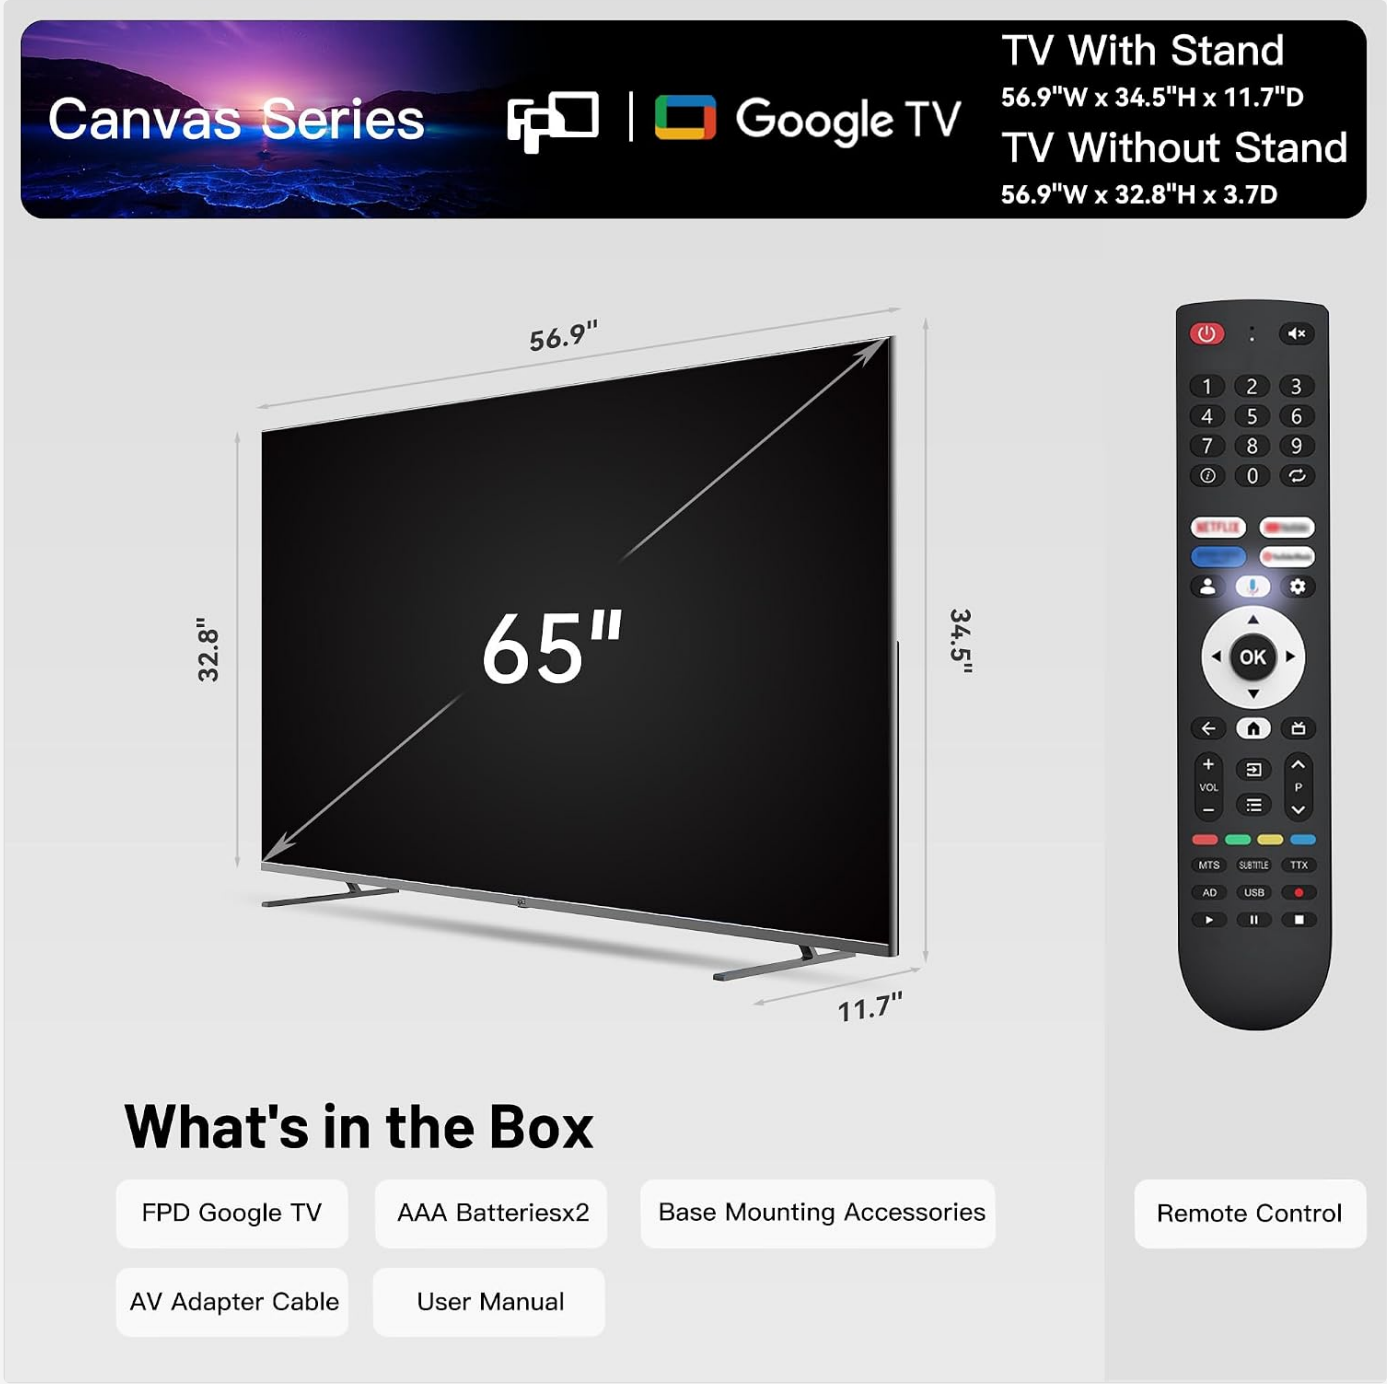


Image: Contents of the FPD 65-inch TV packaging, including the television, remote control, stands, and other accessories.

3. Setup Instructions

3.1 Unpacking

Carefully remove the television and all accessories from the packaging. It is recommended to retain the original packaging for potential future transport or service needs.

3.2 Attaching the Stands

If you intend to place the TV on a flat surface, attach the included stands:

1. Place the TV screen-down on a soft, flat surface to prevent damage.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws and a screwdriver. Do not overtighten.

3.3 Wall Mounting (Optional)

If you plan to wall-mount the TV, ensure you use a VESA-compatible wall mount (not included) that supports the TV's weight and size. Refer to the wall mount's instructions for installation. The TV's VESA pattern and screw specifications can be found in the Specifications section.

3.4 Connecting Power

After positioning the TV, connect the power cord to the TV's power input and then to a wall outlet. Do not power on the TV yet.

3.5 Initial Power-On and Google TV Setup

1. Insert the two AAA batteries into the remote control.
2. Press the power button on the remote or the TV to turn it on.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account sign-in.
4. Pair the voice remote control as prompted during the setup process.

4. Operating Instructions

4.1 Basic TV Functions

- **Power On/Off:** Press the button on the remote.
- **Volume Control:** Use the **+** and **-** buttons.
- **Channel Selection:** Use the CH ∧ and ∨ buttons for broadcast channels, or navigate through apps for streaming content.
- **Input Source:** Press the button to select HDMI, AV, or other inputs.

4.2 Google TV Interface Navigation

The Google TV interface organizes your content from various streaming services and apps. Use the directional pad and OK button on your remote to navigate menus, select apps, and browse content.



Image: The FPD Google TV home screen displaying popular streaming applications and the voice-enabled remote control.

4.3 Voice Assistant Remote

Your FPD TV comes with a voice-enabled remote control. Press the Google Assistant button (microphone icon) on the remote and speak your commands to:

- Search for movies, shows, or actors.
- Open applications.
- Control playback (play, pause, skip).
- Adjust TV settings (e.g., "Turn up the volume").
- Get information (e.g., "What's the weather?").

4.4 Google Cast Built-in

The TV features built-in Google Cast (Chromecast) functionality, allowing you to wirelessly stream content from compatible devices (smartphones, tablets, computers) to your TV.

1. Ensure your device and the TV are connected to the same Wi-Fi network.
2. Open a compatible app (e.g., YouTube, Netflix, Chrome browser) on your device.
3. Tap the Cast icon ( ) within the app.
4. Select your FPD TV from the list of available devices to begin casting.

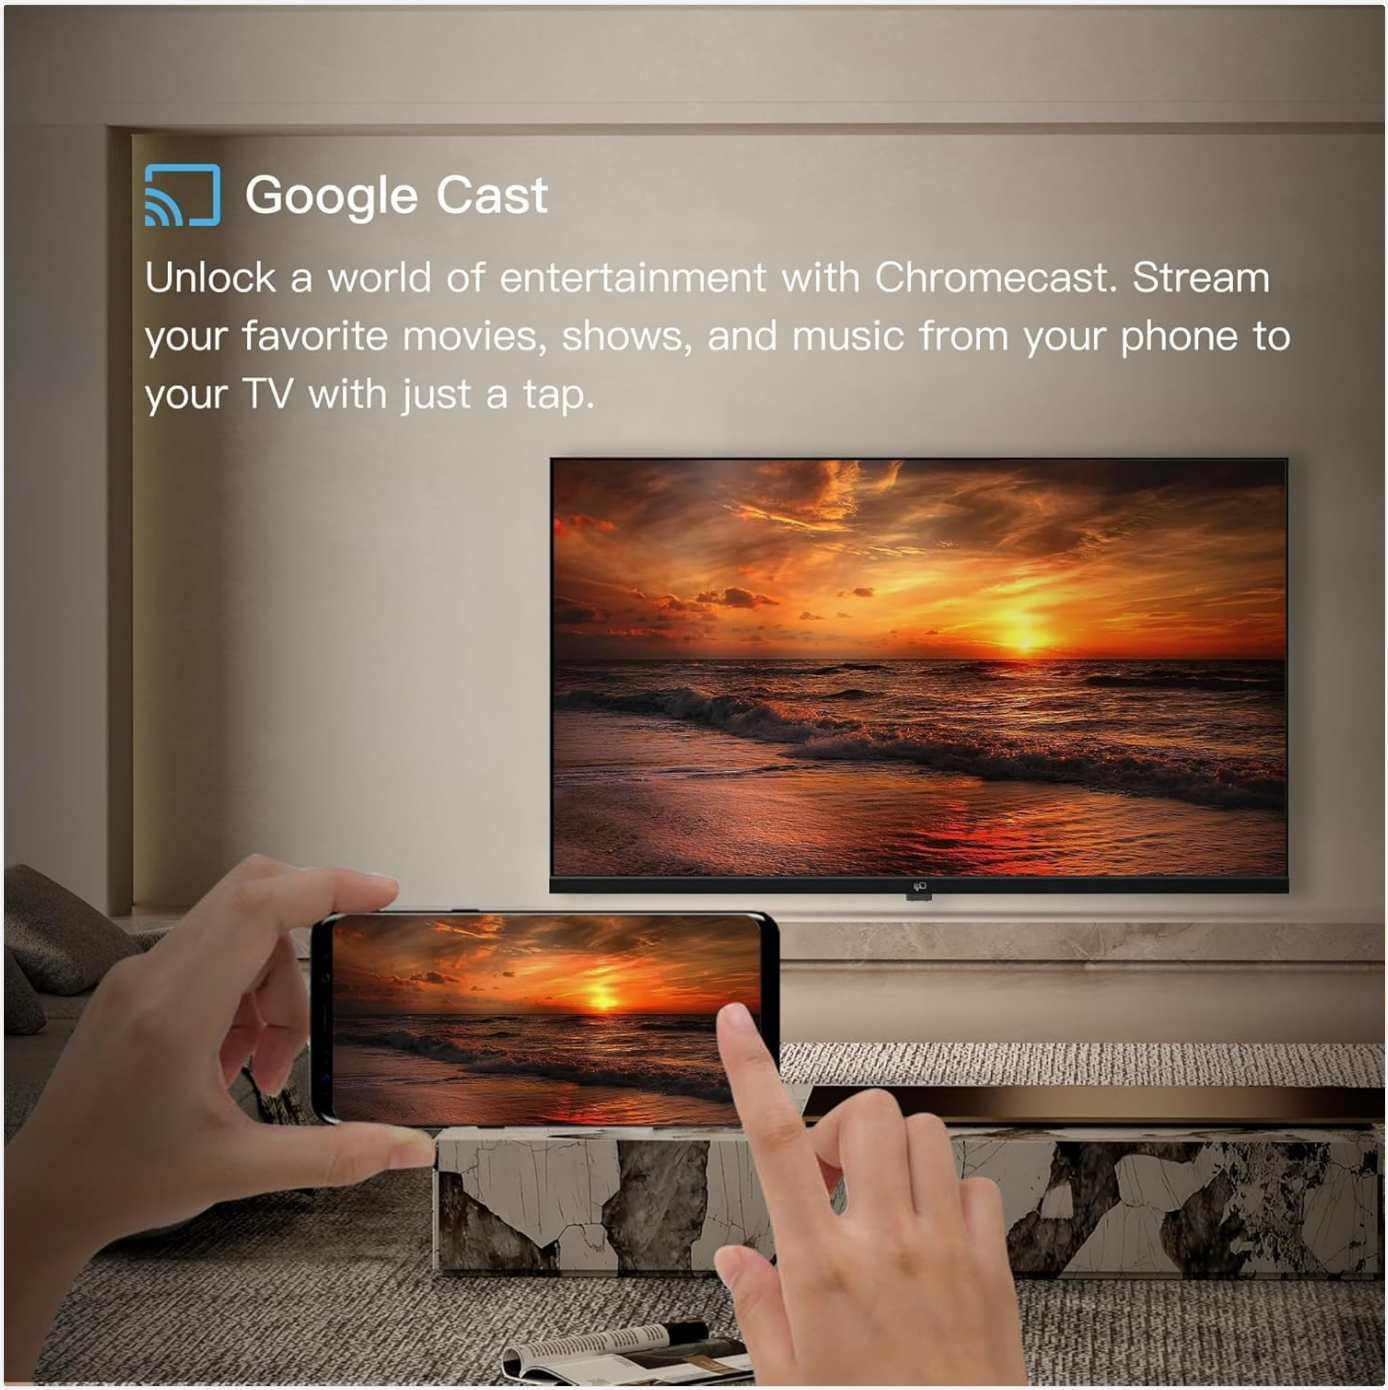


Image: A user demonstrating Google Cast by streaming content from a smartphone to the FPD television.

4.5 Picture and Sound Technologies

- **4K UHD Resolution:** Provides four times the detail of Full HD for a clearer picture.
- **HDR10 & Dolby Vision:** Enhance contrast, brightness, and color accuracy for a more dynamic visual experience.



Image: Hot air balloons illustrating the enhanced visuals provided by Dolby Vision and HDR10 in 4K UHD resolution.

- **Dolby Atmos Audio:** Delivers immersive, multi-dimensional sound that moves around you.



Image: A living room setup showcasing the immersive audio experience of Dolby Atmos with the FPD TV.

- **MEMC Technology:** Motion Estimation and Motion Compensation ensures smooth and seamless viewing, reducing motion blur in fast-paced scenes.



Image: A motorcycle race scene illustrating the smooth motion provided by MEMC technology on the FPD TV.

5. Maintenance

5.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the TV.
- Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

5.2 Software Updates

Your FPD Google TV may receive automatic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can also manually check for updates in the TV's settings menu.

6. Troubleshooting

If you encounter issues with your FPD TV, refer to the following common solutions:

Problem	Possible Cause / Solution
No Power	◦ Check if the power cord is securely plugged into the TV and the wall outlet. ◦ Verify the wall outlet is functional by plugging in another device. ◦ Try pressing the power button on the TV itself, not just the remote.
No Picture / Black Screen	◦ Ensure the correct input source is selected (e.g., HDMI 1, AV). ◦ Check all cable connections (HDMI, AV) between the TV and external devices. ◦ Try restarting the TV and any connected devices.
No Sound	◦ Increase the volume using the remote or TV buttons. ◦ Check if the TV is muted. ◦ Verify audio cables are correctly connected if using external speakers. ◦ Check audio output settings in the TV menu.
Remote Control Not Working	◦ Replace the AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's IR sensor. ◦ Re-pair the remote control if it's a Bluetooth remote (refer to initial setup or TV settings).
Network Connection Issues	◦ Check if your Wi-Fi router is working correctly. ◦ Restart your router and modem. ◦ Ensure the Wi-Fi password entered is correct. ◦ If using Ethernet, check the cable connection.

If the problem persists after trying these solutions, please contact FPD customer support.

7. Specifications

Feature	Detail
Brand	FPD
Model Number	CG65-C3
Screen Size	65 Inches (166 cm diagonal)
Display Technology	LED
Resolution	4K UHD (3840 x 2160)
Refresh Rate	60 Hz
HDR Support	HDR10, Dolby Vision
Audio Technology	Dolby Atmos
Operating System	Google TV

Feature	Detail
Special Features	Google Cast, MEMC, Voice Assistant Remote
Connectivity	Wi-Fi, Ethernet, HDMI (multiple ports), Bluetooth
Aspect Ratio	16:9
Product Dimensions (with stand)	56.93" W x 34.53" H x 11.73" D
Product Dimensions (without stand)	56.9" W x 32.8" H x 3.7" D
Item Weight	43.9 pounds
Batteries Required	2 AAA batteries (included for remote)

8. Warranty and Support

8.1 Product Warranty

Your FPD TV is covered by an industry-leading 1-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures your product performs as expected. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact FPD customer service:

- **Via Amazon Messages:** You can reach out to us directly through the Amazon messaging system.
- **Directly to FPD:** Contact information can be found on the official FPD website or product packaging.

Our customer service team aims to respond to all inquiries within 24 hours.

© 2024 FPD. All rights reserved. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question