KEMEI KM-8536

KEMEI KM-8536 Professional Cordless Hair Clippers and Trimmers Set User Manual

Model: KM-8536
Brand: KEMEI

Introduction

This manual provides instructions for the KEMEI KM-8536 Professional Cordless Hair Clippers and Trimmers Set. This comprehensive grooming kit includes a main hair clipper, a T-blade hair trimmer, two charging bases, various guide combs, and essential accessories. It is designed for precise hair cutting and grooming for both personal and professional use.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

Safety Information

- Avoid using the devices near water or in wet environments.
- Ensure blades are clean and dry before and after each use.
- Keep the devices out of reach of children. Adult supervision is recommended when children are present.
- Do not disassemble or attempt to repair the devices yourself. Contact customer support for assistance.
- Use only the provided charging cable and bases.

Product Components

The KEMEI KM-8536 set includes the following items:

- 1 x Hair Clipper (Main Unit)
- 1 x T-Blade Hair Trimmer
- 1 x USB Charging Cable
- 2 x Charging Bases (one for each device)
- 6 x Limit Combs for Hair Clipper (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)

- 3 x Limit Combs for Hair Trimmer (1mm, 2mm, 3mm)
- 1 x Cleaning Brush
- 1 x Lubricating Oil



Image: Overview of the KEMEI KM-8536 Professional Hair Clippers and Trimmers Set, showing both devices, charging bases, various guide combs, USB cable, oil, and cleaning brush.

Setup

1. Initial Charging

Before first use, fully charge both the hair clipper and the T-blade trimmer. Place each device onto its respective charging base and connect the USB charging cable to a compatible USB power source (e.g., PC, power bank, USB charger).

- **Hair Clipper:** Features a 2500 mAh battery. Requires approximately 3 hours for a full charge, providing up to 210 minutes of operating time.

- **T-Blade Trimmer:** Features a 2000 mAh battery. Requires approximately 2.5 hours for a full charge, providing up to 240 minutes of operating time.

The LED display on each device will indicate the charging status and remaining power.



Image: Illustration demonstrating the USB charging capabilities of both the hair clipper and trimmer, showing charging times and battery capacities.

2. Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the blade and push it firmly until it clicks into place. Ensure it is securely attached before operating the device.

Operating Instructions

1. Power On/Off

Press the power button located on the front of the device to turn it on or off. The LED display will illuminate upon

activation.

2. Adjusting Blade Length (Hair Clipper Only)

The main hair clipper features a lever for fine adjustment of the blade length, ranging from 0.8mm to 2mm. This allows for gradual layering and blending of hairstyles. Move the lever up or down to select the desired cutting length.

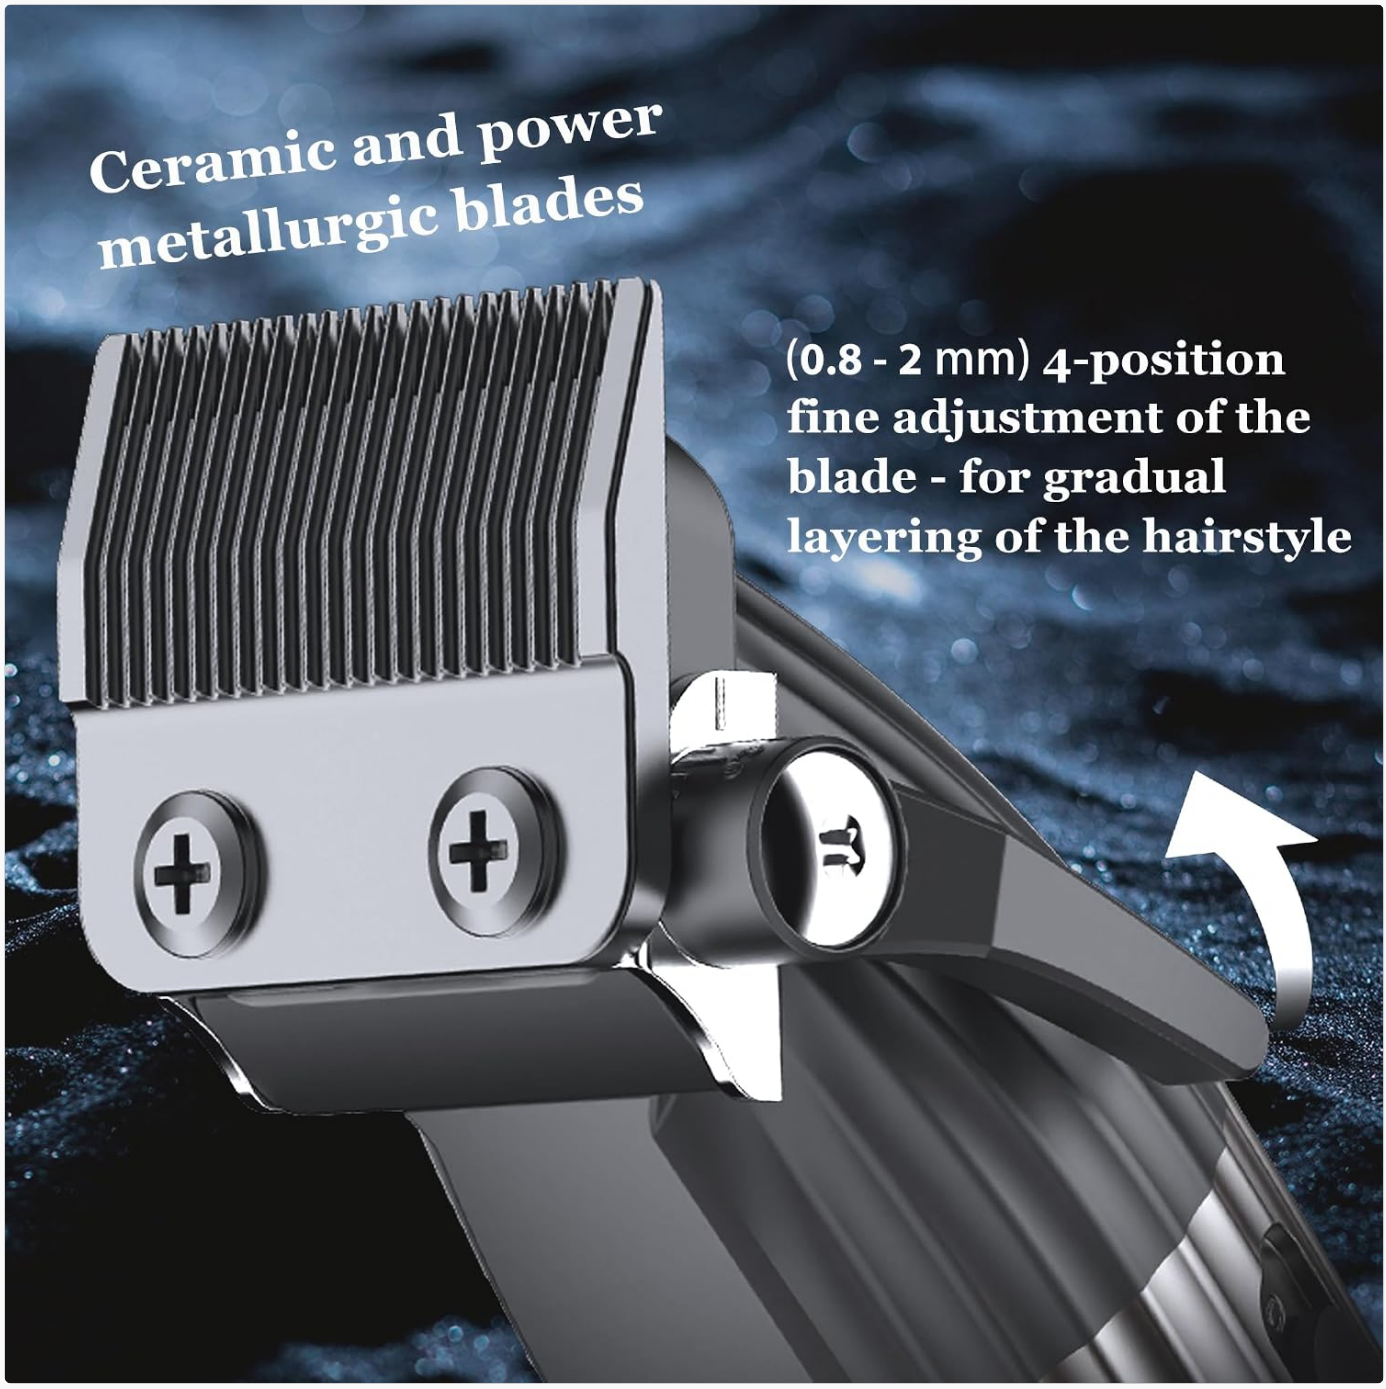


Image: Close-up view of the hair clipper's ceramic and power metallurgic blades, highlighting the 4-position fine adjustment lever for precise length control (0.8-2mm).

3. Using Guide Combs

Once a guide comb is attached, the device will cut hair to the length specified by the comb. For the hair clipper, available lengths are 1.5mm, 3mm, 4.5mm, 6mm, 9mm, and 12mm. For the T-blade trimmer, available lengths are 1mm, 2mm, and 3mm. Always start with a longer comb if unsure, and gradually reduce the length as needed.



Image: Display of the six limit combs for the hair clipper (1.5mm to 12mm) and three limit combs for the T-blade trimmer (1mm to 3mm), illustrating their use for different hair lengths.

4. Hair Cutting Technique

- Ensure hair is clean and dry for best results.
- Hold the device with the blades facing away from you.
- Move the clipper/trimmer against the direction of hair growth for an even cut.
- Use smooth, overlapping strokes.
- For detailing and edging, use the T-blade trimmer without a comb.

Maintenance

1. Cleaning the Blades

After each use, turn off the device and remove any attached guide comb. Use the provided cleaning brush to remove

loose hairs from the blades. For thorough cleaning, the blades can be rinsed under running water, but ensure the main body of the device does not get wet. Dry the blades completely before reattaching or storing.

2. Oiling the Blades

Regularly apply a few drops of the included lubricating oil to the blades. Turn on the device for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and ensures smooth operation.

3. Battery Care

To prolong battery life, avoid completely draining the battery before recharging. Store the devices in a cool, dry place when not in use.

Troubleshooting

- **Device does not turn on:** Ensure the device is fully charged. Check the charging cable and power source for proper connection.
- **Blades pull or snag hair:** Clean the blades thoroughly to remove any trapped hair. Apply lubricating oil to the blades. Ensure the guide comb is correctly attached.
- **Reduced cutting performance:** The blades may require cleaning and oiling. If performance does not improve, consider contacting customer support for potential blade replacement or service.
- **Unusual noise or vibration:** Turn off the device immediately. Check for any obstructions in the blades. If the issue persists, discontinue use and contact customer support.

Specifications

Feature	Specification
Model Name	KM-8536
Brand	KEMEI
Package Dimensions	13.3 x 9.02 x 2.44 inches
Item Weight	3.2 Pounds
Battery Type	Lithium-Ion
Hair Clipper Battery Capacity	2500 mAh
Hair Clipper Charging Time	Approx. 3 Hours
Hair Clipper Running Time	Approx. 210 Minutes
Trimmer Battery Capacity	2000 mAh
Trimmer Charging Time	Approx. 2.5 Hours
Trimmer Running Time	Approx. 240 Minutes
Motor Speed	Up to 9000 RPM
Blade Material	Ceramic and Power Metallurgic
Unit Count	2.0 Count (Clipper and Trimmer)

Warranty and Support

For warranty information, please refer to the documentation included with your purchase or visit the official KEMEI website. KEMEI products are designed for quality and performance.

If you encounter any issues or require assistance with your KEMEI KM-8536 set, please contact KEMEI customer service through their official channels. Provide your model number and purchase details for efficient support.

© 2025 KEMEI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question