Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit 7b71ad18-db14-4d29-92d9-63d23eb91fb5

ZdalaMit Voice Replacement Remote Control for LG Smart TVs

Instruction Manual

1. Introduction

This manual provides detailed instructions for setting up and operating your new ZdalaMit Voice Replacement Remote Control. Designed for seamless compatibility with a wide range of LG Smart TV models, this remote offers convenient control and voice search capabilities.
The remote control features a comfortable ergonomic design and dedicated quick access buttons for popular streaming services, enhancing your viewing experience.

2. Setup

2.1 Battery Installation

The remote control requires two (2) 1.5V AA alkaline batteries (not included). Follow these steps to install the batteries:

1. Press the top of the battery cover, slide it back, and remove it.
2. Insert two (2) 1.5V AA alkaline batteries, ensuring the positive (+) and negative (-) ends match the indicators inside the compartment.
3. Close the battery cover by sliding it back into place until it clicks securely.



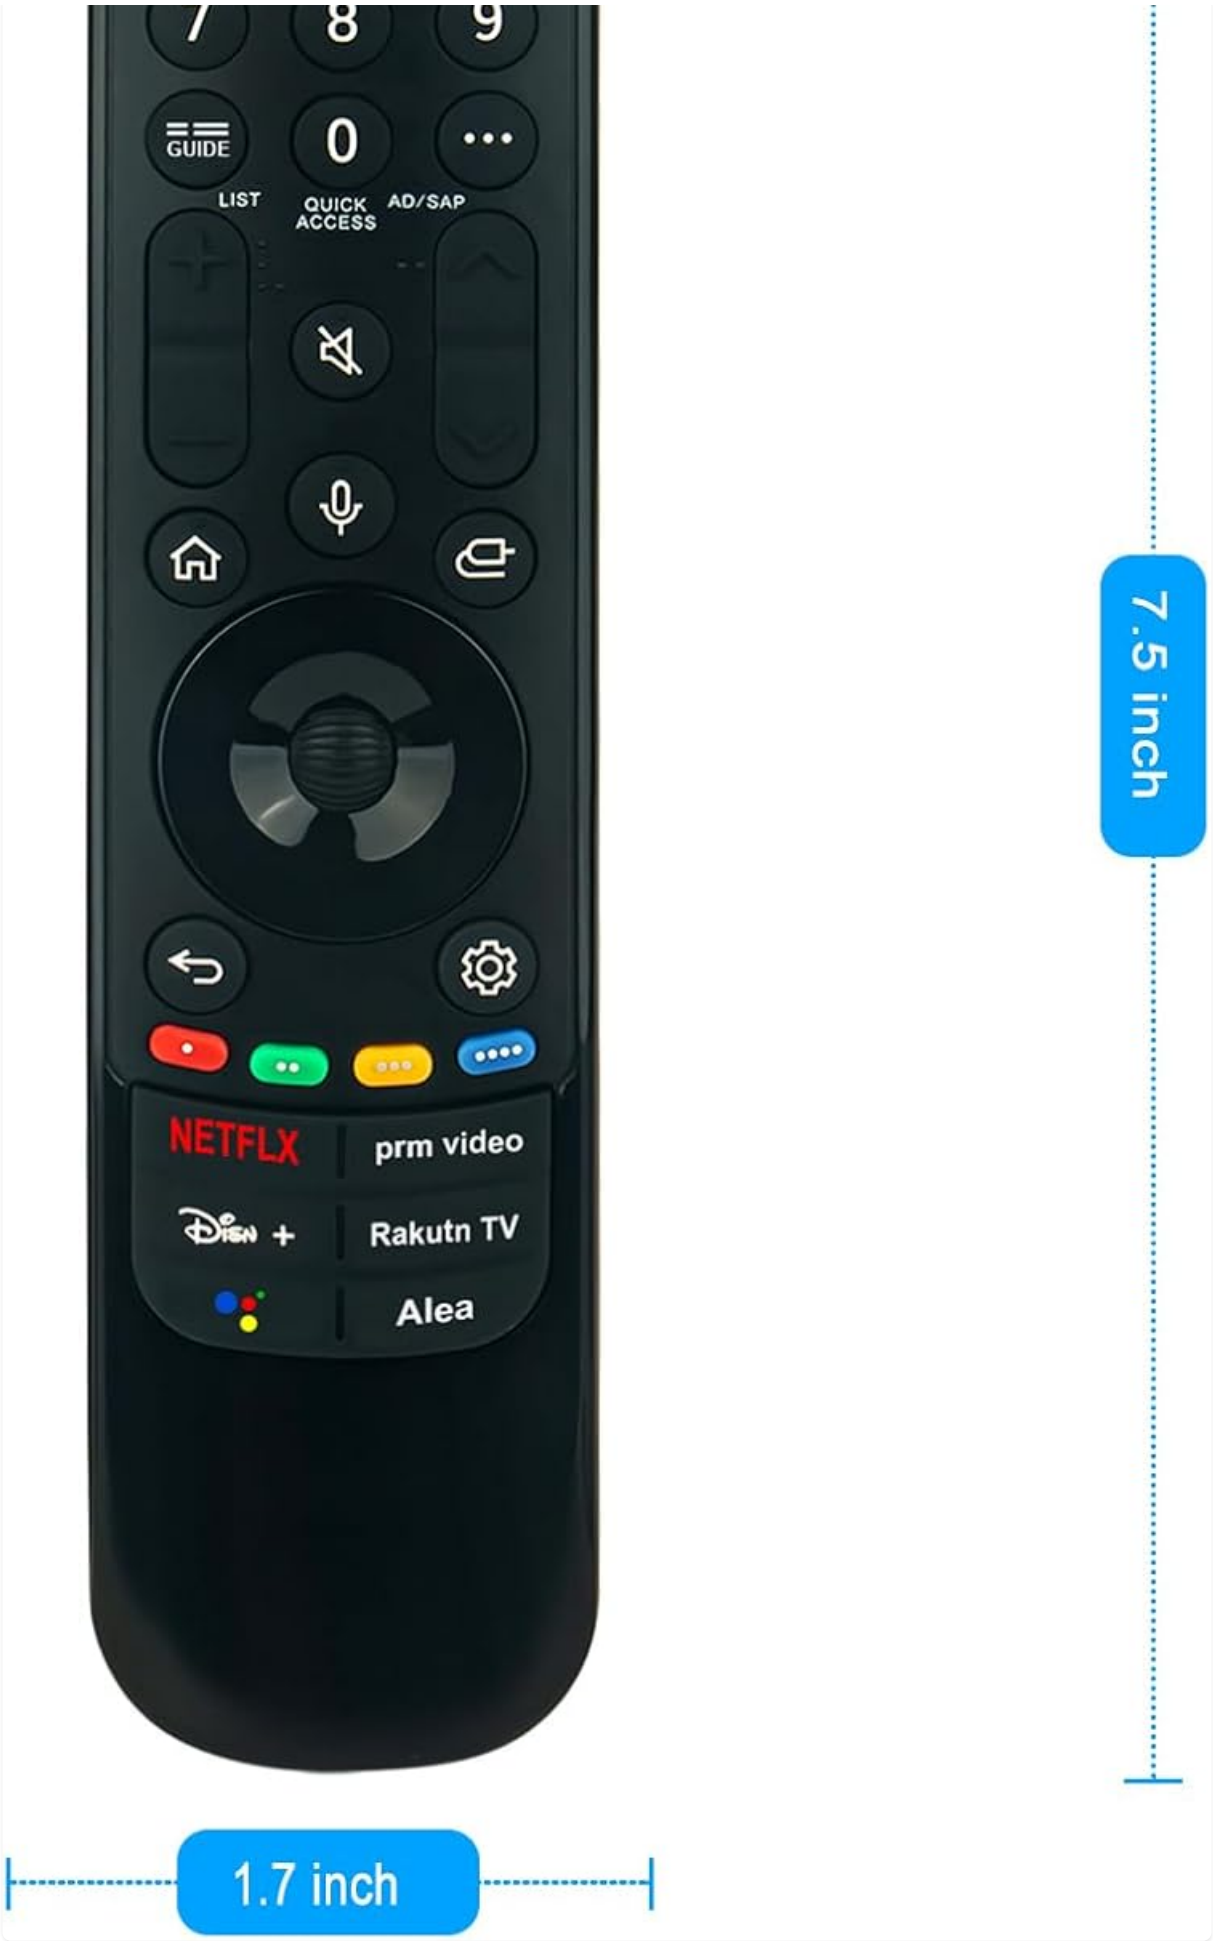


Image: ZdalaMit remote control with the battery compartment open, illustrating the correct insertion of two AA batteries.

2.2 Pairing the Remote Control

Before using the remote control, it must be paired with your LG Smart TV. The pairing process is typically automatic once batteries are installed and the remote is pointed at the TV. If automatic pairing does not occur, follow these general steps:

1. Ensure your LG Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Home** button (usually depicted as a house icon) or the **OK** button (center of the directional pad) for approximately 5-10 seconds.
4. A pairing message should appear on your TV screen, confirming successful connection.

Note: Specific pairing instructions may vary slightly depending on your LG TV model. Refer to your TV's user manual for model-specific details if needed.

3. Operating Instructions

The ZdalaMit Voice Replacement Remote Control provides intuitive navigation and quick access to your favorite content.

3.1 Key Features

- **Voice Search:** Press and hold the microphone button to activate voice commands. Speak clearly into the remote to search for content, change settings, or control your TV.
- **Pointer/Scroll Function:** The central wheel and directional pad allow for precise cursor control on your TV screen, similar to a mouse. You can point, click, and scroll through menus and applications.
- **Quick Access Buttons:** Dedicated buttons provide instant access to popular streaming services such as Netflix, Prime Video, Disney+, LG Channels, and Alexa.
- **Standard Controls:** Includes all essential buttons for power, volume, channel navigation, mute, input selection, and menu access.





Image: Front view of the ZdalaMit remote control, highlighting the layout of all buttons for easy identification and use.

4. Compatibility

This ZdalaMit Voice Replacement Remote Control is compatible with a wide range of LG Smart TV models. Please verify your TV model number against the list below to ensure full functionality:

- 50UQ7070ZUE, 43UQ7070ZUD, 55UQ7070ZUE, 50UQ8000AUB, 65NANO80AQA, 86QNED90UQA, 75QNED85UQA, 28LM400B-PU, 43UQ7590PUB, 55UQ8000AUB, 70UN7070PUA, OLED65C2AUA, OLED42C2AUA, OLED55B2PUA, 75UQ7590PUB, 65UQ7590PUB, 86QNED85UQA, 86QNED99UQA, 75QNED90UQA, 75QNED99UQA, 50UQ7590PUB, OLED88Z2PUA, 55QNED85UQA, OLED65C2SW, OLED42C2PUA, 75QNED85AQA, 65UQ7070ZUE, 50QNED80UQA, OLED55C2AUA, 43UQ7070ZUM, 55UQ7570PUA, 65QNED90UQA, 65QNED80AQA, OLED55A2AUA, 50UQ9000PUD, 86UQ9000PUD, 55NANO75UQA, 32LQ630BPUA, 55QNED85AQA, OLED48C2AUA, OLED55A2PUA, OLED65A2AUA,

55UQ7590PUB, 55UQ9000PUD, 65QNED85AQA, 65UN7000PUD, 55UQ7570PUJ, OLED77B2PUA, OLED65B2PUA, 65QNED80UQA, OLED42C2PUA, 75UQ8000AUB, 75UQ9000PUD, 43UQ8000AUB, 43UQ9000PUD, 50NANO75UQA, 86QNED85AQA, 50UQ7570PUJ, 65UQ8000AUB, 75NANO75UQA, 86QNED80UQA, OLED77Z2PUA, 75NANO80AQA, 75QNED80AQA, 75QNED80UQA, 75UQ7070ZUD, 65UQ7570PUJ, 65UQ7570PUA, 43NANO75UQA, 43UN7000PUB, 65NANO75UQA, OLED83C2AUA, 65QNED85UQA70UQ7070ZUD, OLED65A2PUA, 86UQ7590ZUD, 86UQ8000AUB, OLED88ZXPUA, 50NANO80AQA, 50QNED80AQA, 86UQ7590PUD, OLED48A2AUA, OLED48A2PUA, 50UQ7070ZUN, 50UQ7570PUA, 50UQ7570PUJ, OLED77C2AUA, 65UQ9000PUD, 65QNED99UQA, OLED77A2AUA, 86NANO75UQA, OLED77A2PUA, 55NANO80AQA, 86QNED80AQA, 55QNED80AQA, 70UQ9000PUD, 86UQ7070ZUD, 55QNED80UQA, 70NANO75UQA, 70UQ7590PUB

5. Specifications

- **Brand:** ZdalaMit
- **Model Number:** 7b71ad18-db14-4d29-92d9-63d23eb91fb5
- **Color:** Black
- **Special Feature:** Voice Search
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Television
- **Product Dimensions:** 7.54 x 1.71 x 0.55 inches
- **Item Weight:** 1.41 ounces



Image: ZdalaMit remote control displaying its approximate dimensions for reference.

6. Troubleshooting

6.1 Remote Not Responding or Pairing Issues

- **Check Batteries:** Ensure fresh 1.5V AA alkaline batteries are correctly installed with proper polarity (+/-).
- **Re-pair the Remote:** If the remote stops responding, try re-pairing it by holding the **Home** or **OK** button for 5-10 seconds while pointing at the TV.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the TV's remote sensor.
- **TV Power Cycle:** Turn off your TV, unplug it from the power outlet for a few minutes, then plug it back in and turn it on. Try pairing the remote again.

6.2 Pointer/Cursor Issues

- **Recalibrate Pointer:** If the cursor is erratic or not appearing, try shaking the remote gently or pressing the **OK** button to recalibrate the pointer.
- **Interference:** Ensure there are no other devices emitting infrared or radio signals that might interfere with the remote's operation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DJNY465K

More documents and user manuals: **https://manuals.plus/**