Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Petgravity TTQ2410USAO

Speedy Sprint Ball Toy User Manual

Model: TTQ2410USAO | Brand: Petgravity

1. Introduction

Thank you for choosing the Petgravity Speedy Sprint Ball. This interactive toy is designed to provide engaging play for your cat, stimulating their natural hunting instincts. Please read this manual carefully before use to ensure proper operation and maintenance.

2. Key Features

- **Smart Mode:** Self-driving mode for independent play, with auto-standby after 5 minutes of inactivity, reactivated by touch.
- **Normal Mode:** Automatically shuts down after 5 minutes of operation.
- **Adjustable Speed:** Two speed settings (low and high) to suit different cat personalities.
- **Interchangeable Attachments:** Includes feather accessories to stimulate hunting and chasing instincts.
- **Type-C Rechargeable:** Convenient charging with a 150mAh battery, providing up to 90 minutes of play.
- **Special Wave Texture:** High-quality silicone surface designed for unpredictable movement, increasing cat's interest.

3. Package Contents

Please ensure all items are present in the package:

- Speedy Sprint Ball (1)
- Feather Accessories (2)
- Type-C Charging Cable (1)
- User Manual (1)

4. Setup

4.1 Charging the Device

Before first use, fully charge the Speedy Sprint Ball. A full charge takes approximately 1.5 hours and provides up to 90 minutes of play time.

1. Locate the Type-C charging port on the ball.
2. Connect the provided Type-C charging cable to the ball and a 5V/1A charging adapter (not included).
3. The indicator light will flash blue during charging.
4. The indicator light will turn solid green when charging is complete. A red light flashing indicates low battery.

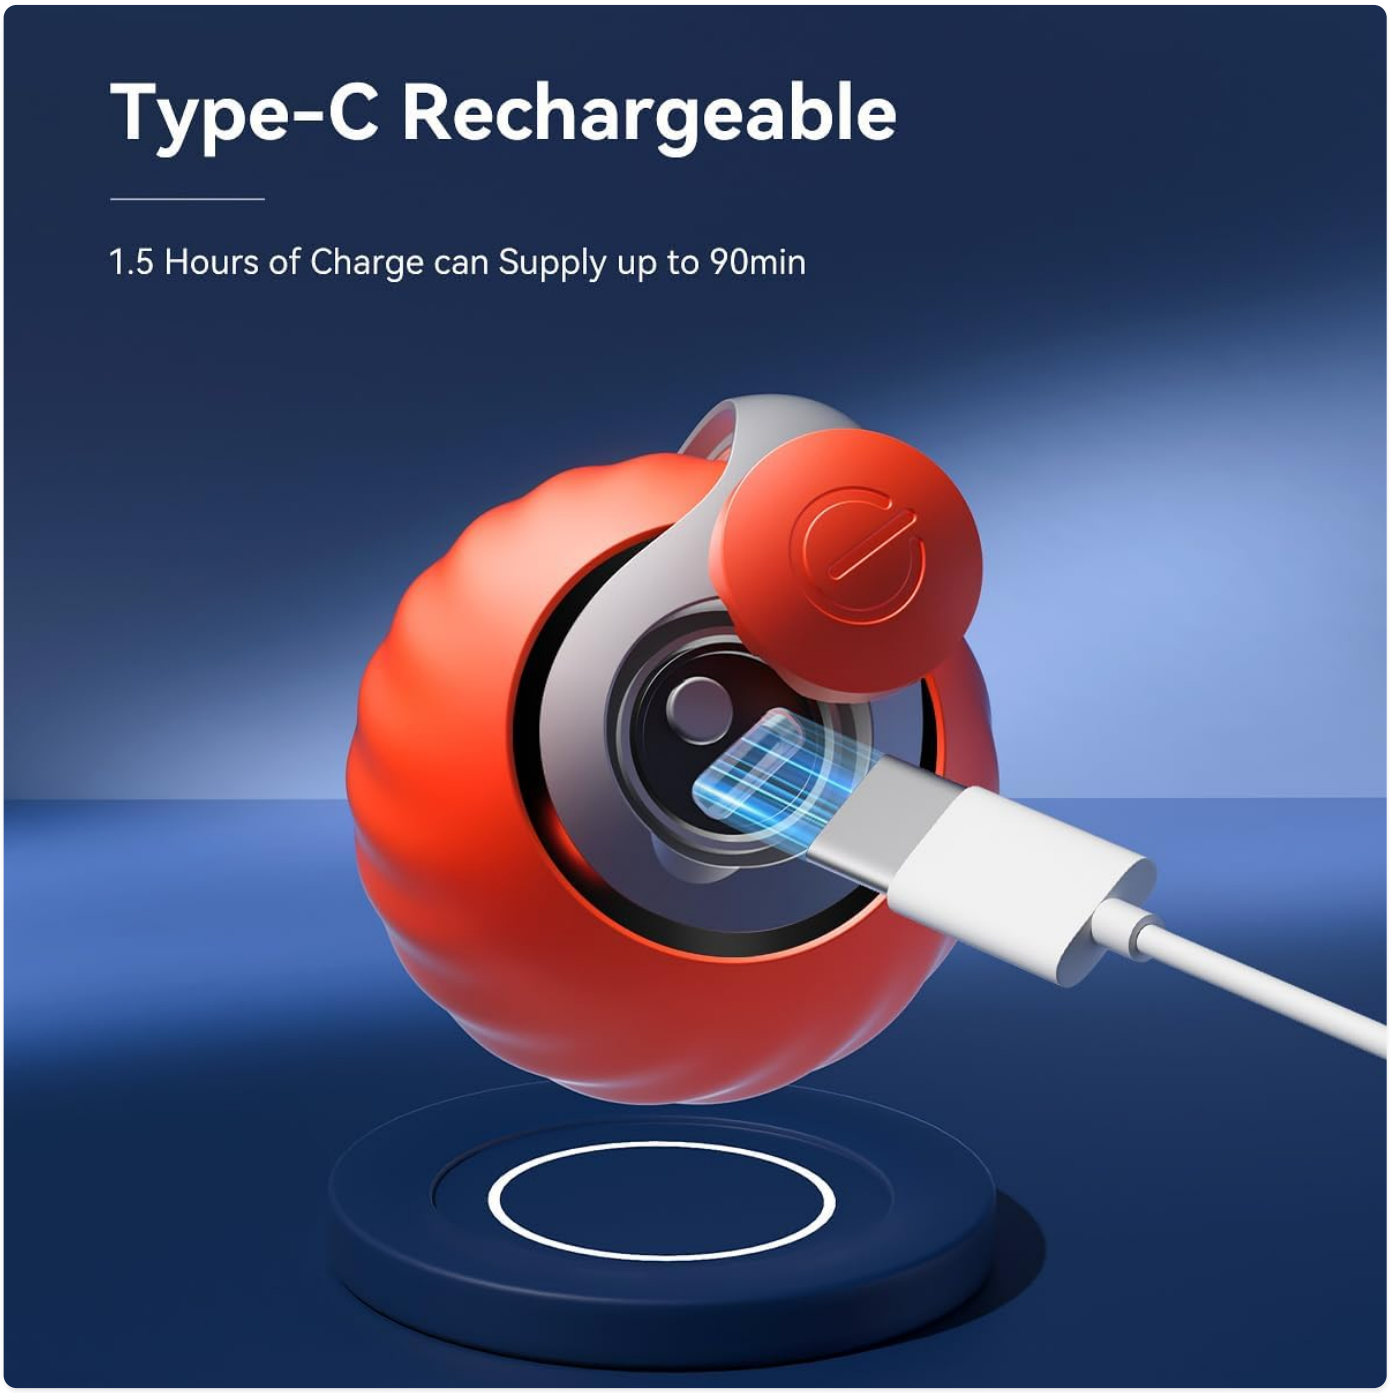


Image: The Speedy Sprint Ball connected to a Type-C charging cable, illustrating the charging process.

4.2 Attaching Accessories

The Speedy Sprint Ball comes with interchangeable feather accessories. To attach an accessory, simply insert its base into the designated slot on the ball until it clicks securely into place. To remove, gently pull the accessory out.



Image: The Speedy Sprint Ball with a feather attachment, demonstrating how accessories are connected.

5. Operation

5.1 Power On/Off

To power on or off the device, short press the power button located on the ball.

5.2 Mode Switching

The Speedy Sprint Ball features two operational modes: Normal Mode and Smart Mode.

- **Normal Mode:** Long press the power button for 3 seconds until the green light stays on for 3 seconds. In this mode,

the toy will run for 5 minutes and then automatically shut down.

- **Smart Mode:** Long press the power button for 3 seconds until the blue light stays on for 3 seconds. In this mode, the toy will run for 5 minutes and then enter standby mode. It can be reactivated by a cat's touch or movement.



Image: A visual representation of the Normal Mode (auto-off in 5 minutes) and Smart Mode (auto-standby in 5 minutes, reactivate by tapping) settings.

5.3 Adjusting Speed

After powering on, short press the on/off key to switch between speed settings.

- In Normal Mode: Light green indicates slow speed, dark green indicates fast speed.
- In Smart Mode: Light blue indicates slow speed, dark blue indicates fast speed.

It is recommended to start with the slow speed when introducing the toy to your cat.

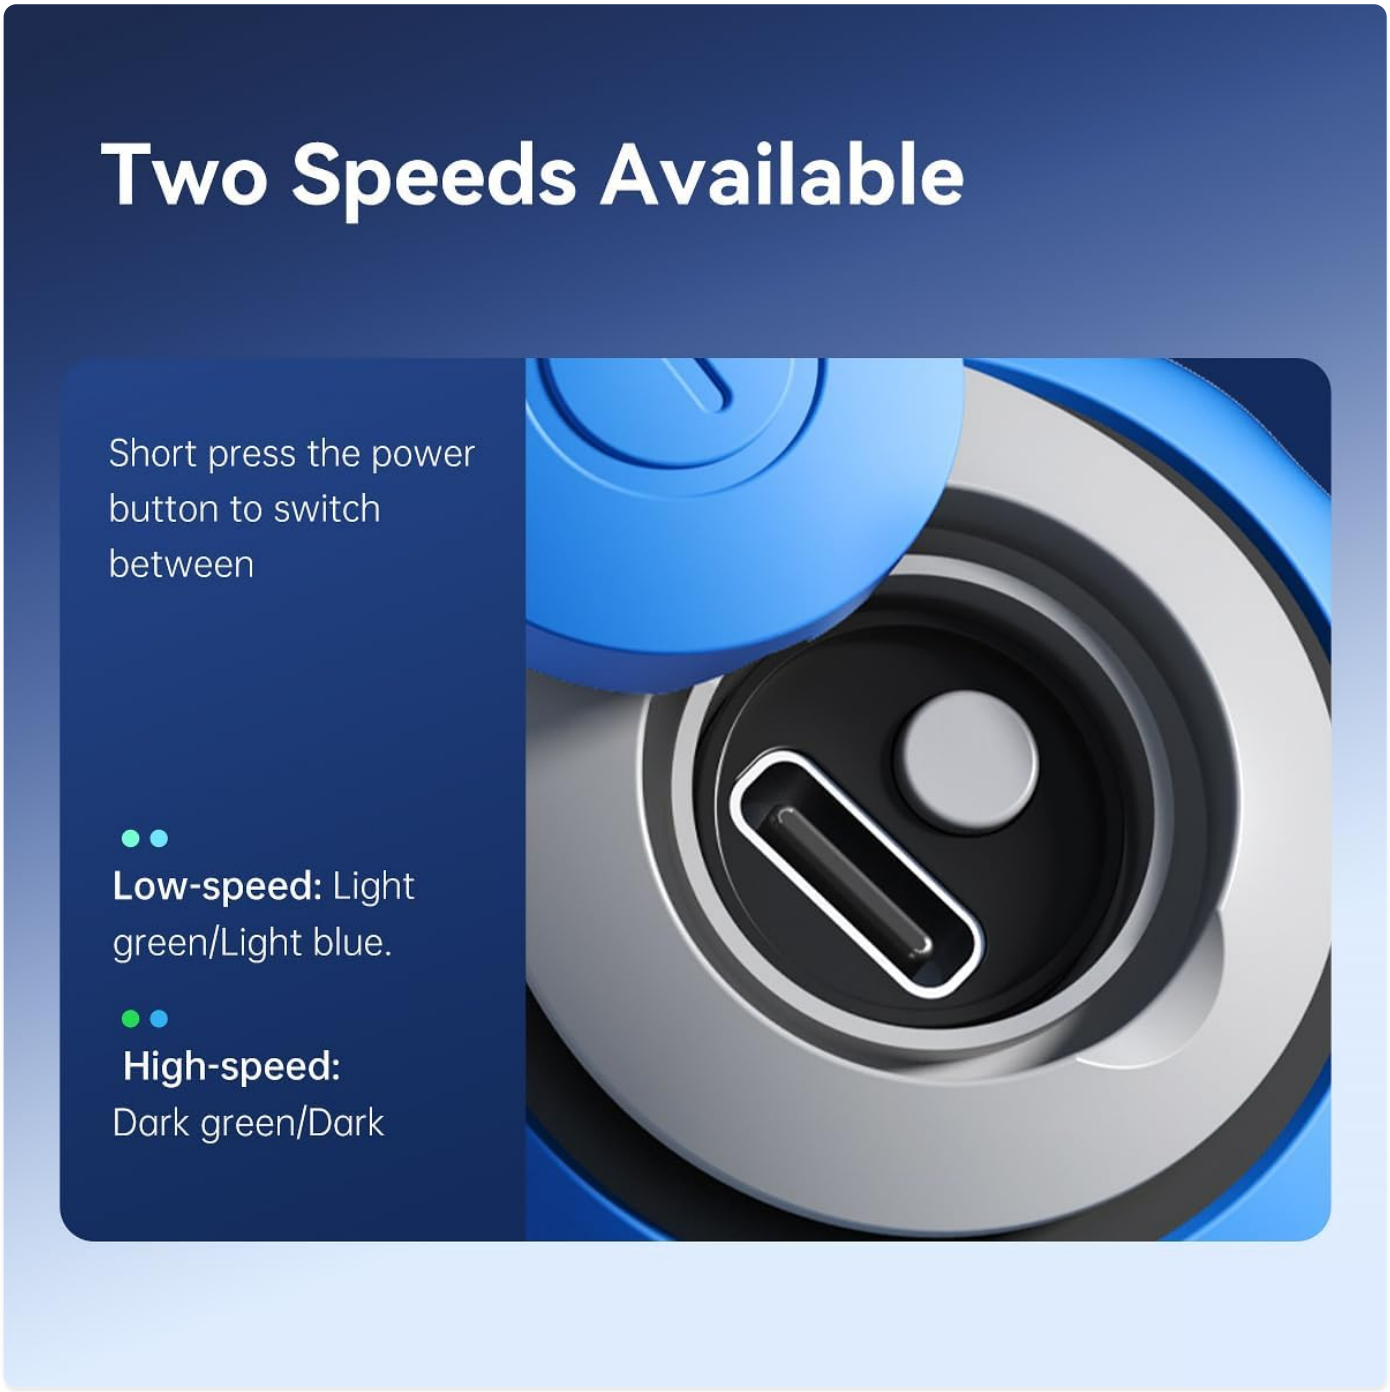


Image: A close-up of the toy's charging port and indicator lights, explaining the light colors for low and high speed settings.

5.4 Play Environment

The Speedy Sprint Ball is designed to move unpredictably on various surfaces, including tile, wooden floors, and carpets. The unique wave texture on the ball's surface enhances its erratic movement, further engaging your cat.

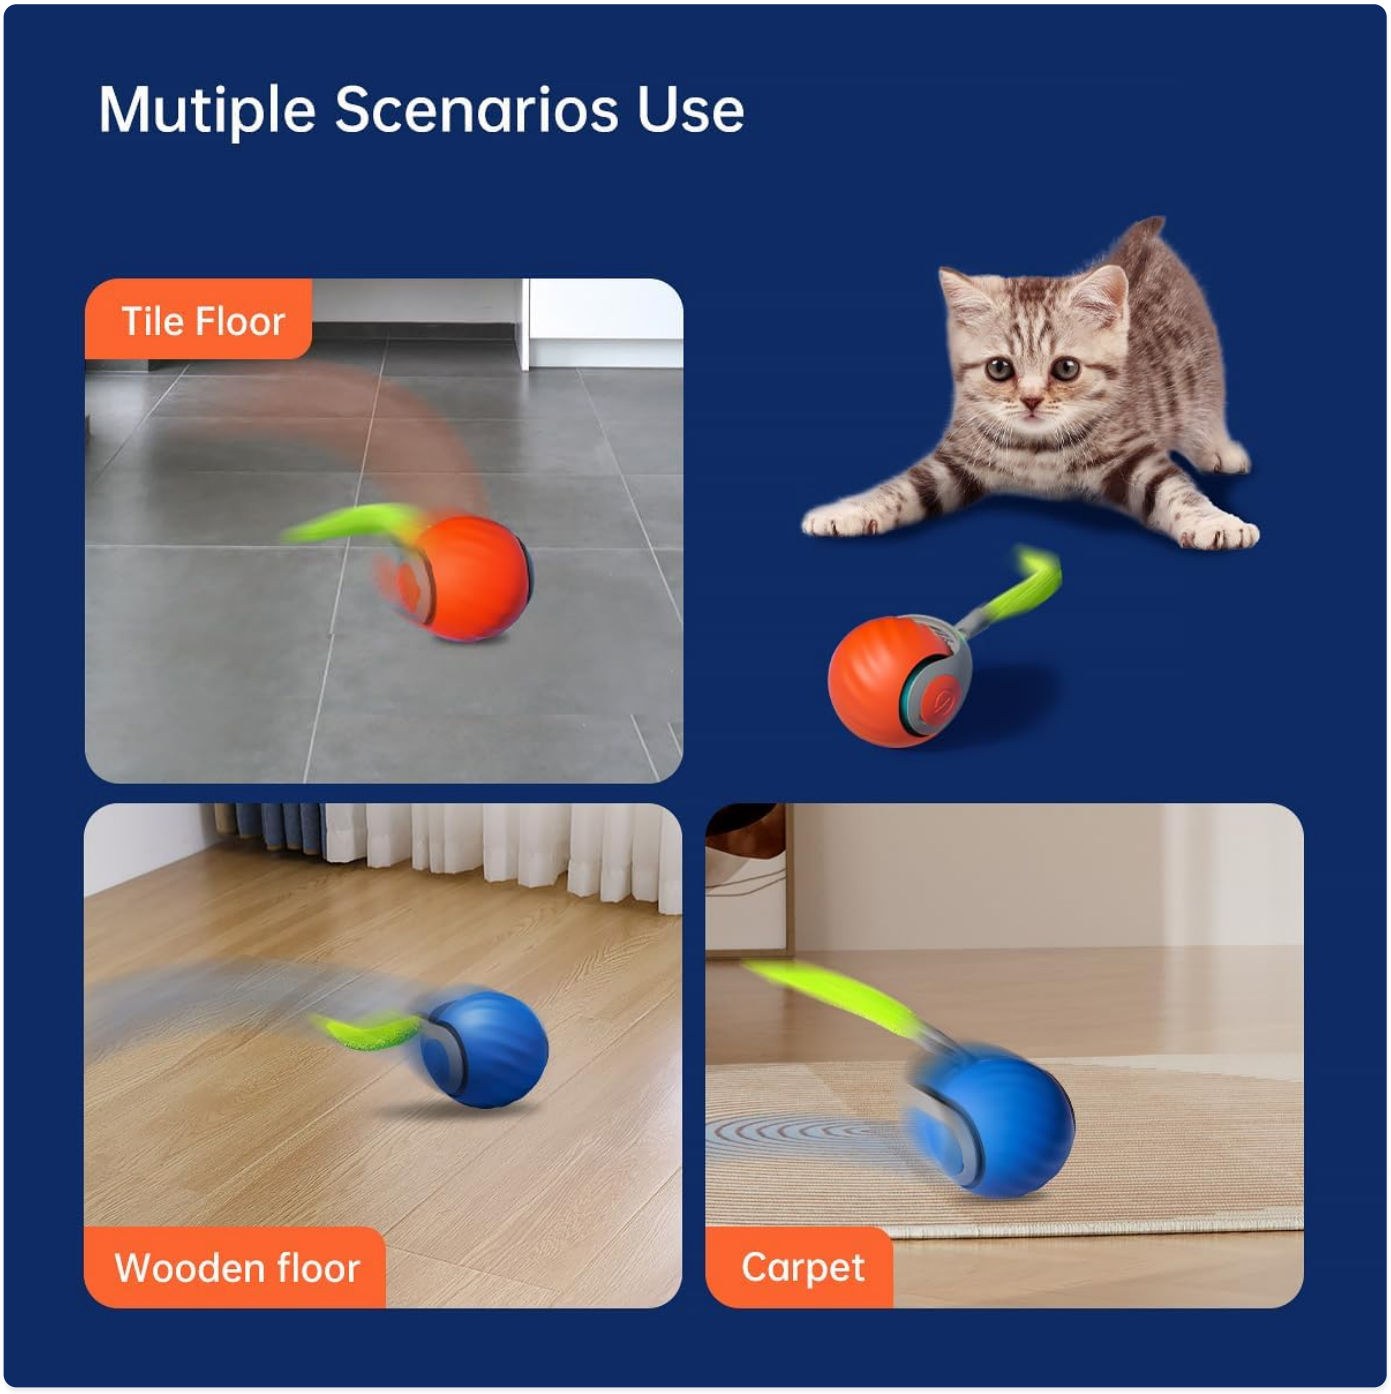


Image: Four panels showing the Speedy Sprint Ball in action on tile floor, wooden floor, and carpet, demonstrating its versatility.



Image: A cat observing multiple Speedy Sprint Balls moving unpredictably, illustrating the toy's dynamic movement.

6. Maintenance

- Clean the ball regularly with a soft, damp cloth. Do not submerge in water.
- Ensure the charging port is free of debris before charging.
- Store the toy in a dry place away from direct sunlight when not in use.
- Inspect feather attachments for wear and tear. Replace if damaged to prevent ingestion by pets.

7. Troubleshooting

Problem	Possible Cause	Solution
Toy does not turn on.	Low battery.	Charge the toy fully. The red light flashing indicates low battery.
Toy stops moving frequently in Smart Mode.	Inactivity or obstruction.	Ensure the toy is on a clear surface. A simple touch will reactivate it from standby.
Feather attachment breaks easily.	Normal wear and tear or aggressive play.	Replace with a new feather accessory. The package includes spares.

8. Specifications

Feature	Detail
Model Name	Petgravity Speedy Sprint Ball
Model Number	TTQ2410USAO
Dimensions	1.97 x 1.97 x 1.97 inches (50mm diameter)
Weight	2.39 ounces (approx. 67.7g)
Battery	150mAh Lithium Polymer (included)
Charging Port	Type-C
Charging Time	Approx. 1.5 hours
Play Time	Up to 90 minutes
Material	Acrylonitrile Butadiene Styrene, Silicone
Target Audience	Cats of all ages

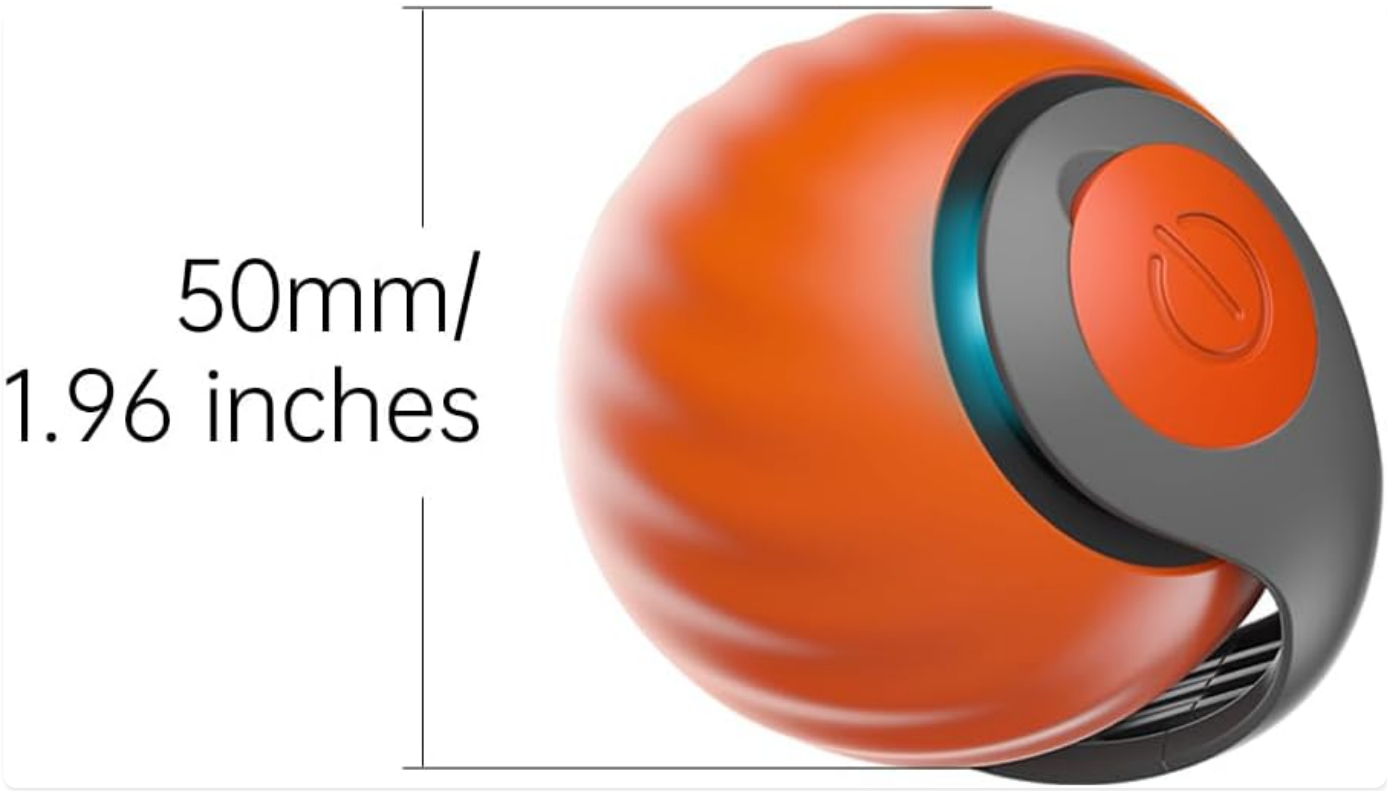


Image: A diagram illustrating the 50mm (1.96 inches) diameter of the Speedy Sprint Ball.

9. Safety Information

- This product is intended for pet use only. Keep out of reach of children.
- Do not disassemble or modify the toy.
- Do not expose the toy to extreme temperatures or direct water immersion.
- Supervise your pet during play to ensure their safety and prevent damage to the toy.
- If the toy becomes damaged, discontinue use immediately.

10. Warranty and Support

For warranty information or technical support, please contact Petgravity customer service through the official website or your purchase platform. Please have your model number (TTQ2410USAO) and purchase date ready.
Visit the Petgravity Store for more information and products.

© 2025 Petgravity. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DJY3Q9VL

More documents and user manuals: **https://manuals.plus/**