Midea MAD85F9BPK

Midea Large Air Fryer User Manual

Model: MAD85F9BPK | Brand: Midea

Introduction

Thank you for choosing the Midea Large Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with little to no oil, utilizing advanced Heatexpress Rapid Air Technology for efficient and even cooking. With its 8.5-liter capacity and versatile 8-in-1 functions, it is ideal for preparing meals for families and gatherings. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1: Midea Large Air Fryer, 8.5 Litres, Black/Rose Gold.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Product Overview and Components

Familiarize yourself with the main components of your Midea Air Fryer.

Control Panel and Display

The intuitive digital touch screen control panel allows for easy selection of preset programs and manual adjustments. It displays temperature, time, and selected functions.



Figure 2: Detailed view of the digital control panel with various cooking presets.

Cooking Basket and Crisper Plate

The large 8.5-liter capacity cooking basket is designed for ample food portions, perfect for family meals. It includes a non-stick crisper plate for optimal air circulation and easy cleaning.



Figure 3: The 8.5L capacity basket, capable of holding large quantities of food like a whole chicken or 1.5kg of fries.

See-Thru Window

A transparent viewing window allows you to monitor the cooking progress without opening the basket, ensuring consistent results and preventing heat loss.



Figure 4: The clear viewing window allows for easy monitoring of food during cooking.

Heatexpress Rapid Air Technology

This patented technology optimizes airflow convection, circulating hot air rapidly and evenly to cook food faster and achieve a crispy, fried perfection with minimal oil.

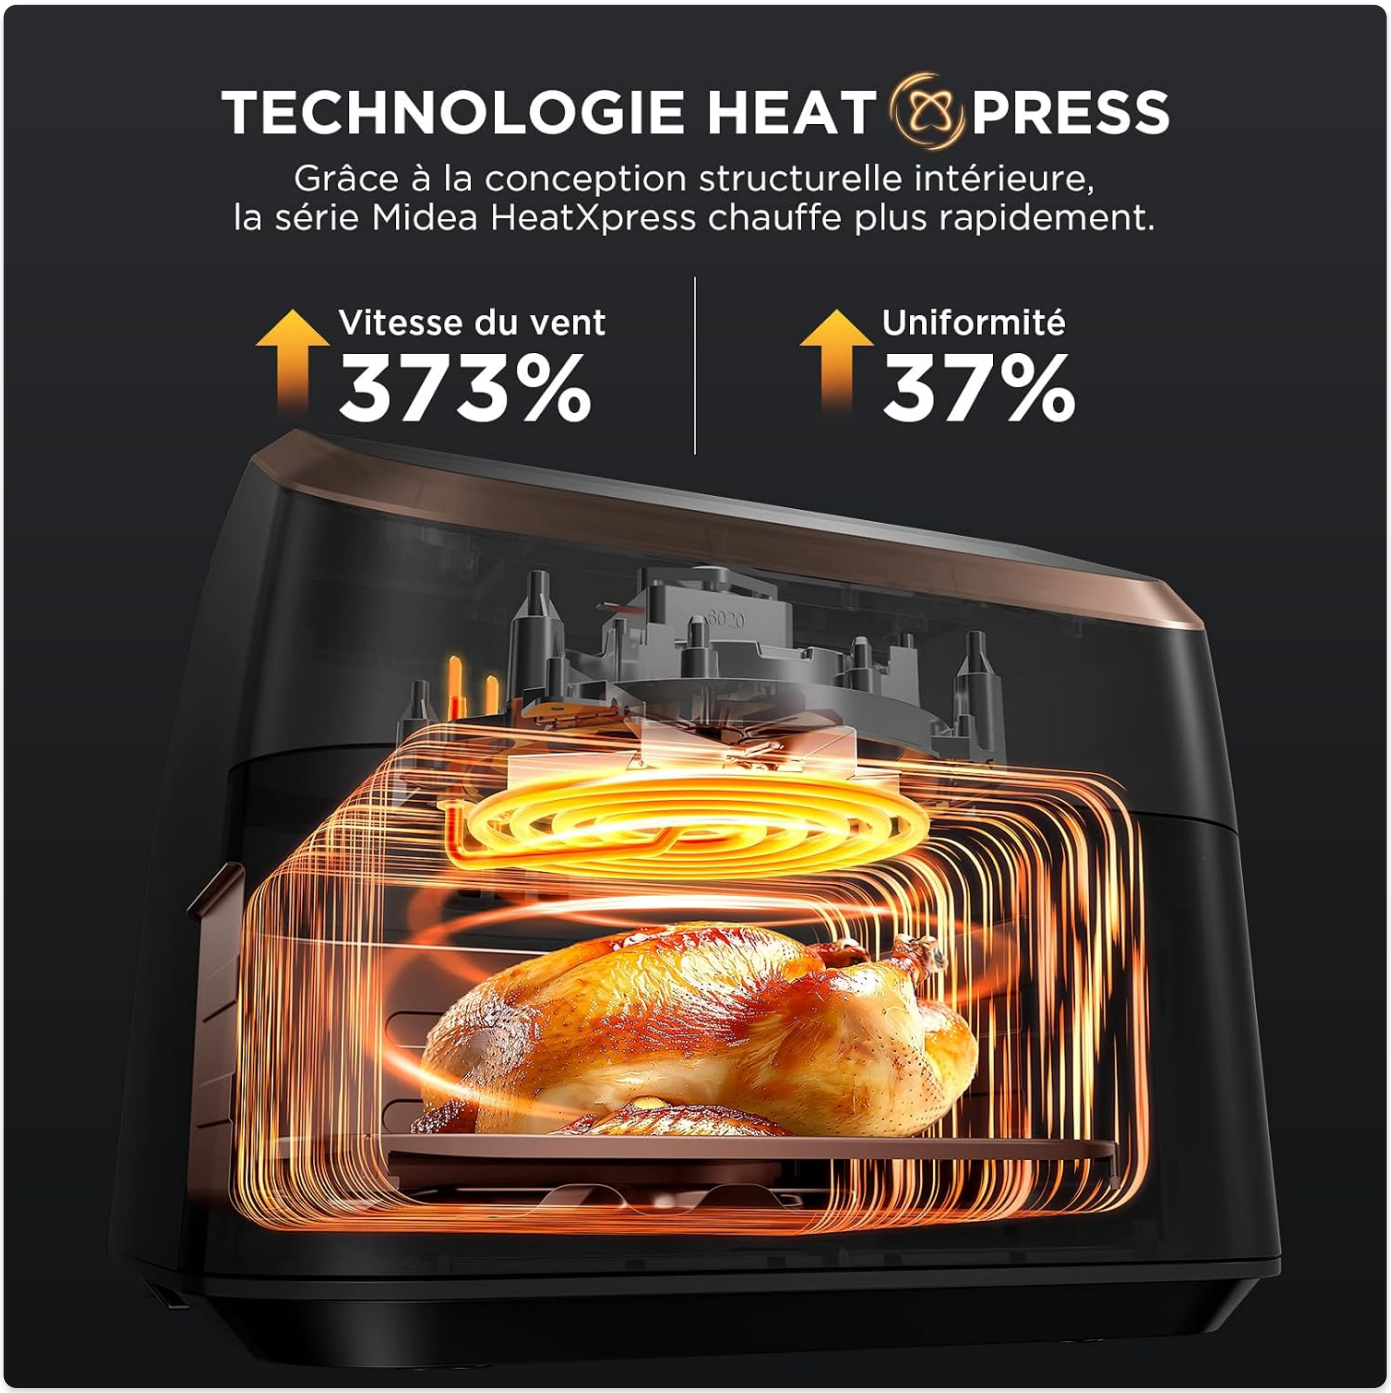


Figure 5: Illustration of the Heatexpress Rapid Air Technology, showing enhanced airflow and cooking uniformity.

Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Before first use, wash the cooking basket and crisper plate with hot soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm (4 inches) of clear space on all sides and above the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

Operating Instructions

Basic Operation

1. **Power On:** Plug in the air fryer. The display will light up.
2. **Preheating:** For best results, preheat the air fryer before adding food. Select your desired temperature and time, then press the start button.
3. **Loading Food:** Carefully pull out the cooking basket. Place food onto the crisper plate. Do not overfill the basket to allow for proper air circulation.
4. **Starting Cooking:** Slide the basket back into the air fryer. Select a preset program or manually set the temperature and time using the **TEMP +/-** and **TIME +/-** buttons. Press the **Start/Pause** button to begin cooking.
5. **Monitoring Progress:** Use the see-thru window to check on your food without interrupting the cooking cycle.
6. **Shaking/Flipping Food:** For even cooking, especially with fries or smaller items, gently shake or flip the food halfway through the cooking time. The air fryer may beep to remind you.
7. **Ending Cooking:** The air fryer will automatically shut off and beep when the timer reaches zero. Carefully pull out the basket and remove the cooked food.

Using Preset Programs (8-in-1 Functions)

The Midea Air Fryer comes with multiple preset programs for common dishes, simplifying your cooking process. These include:

- Air Fry
- Bake
- Roast
- Reheat
- Dehydrate
- Grill
- Broil
- And more...

Simply press the corresponding icon on the control panel to select a preset. The air fryer will automatically set the optimal temperature and time. You can adjust these settings manually if desired.



Figure 6: Visual representation of the diverse cooking functions available.

Flexible Heating: +1 Minute Button & Favorite Function

- **+1 Minute Button:** During cooking, press the **+1 Min** button to instantly add one minute to the remaining cooking time. This is useful for achieving extra crispiness or ensuring food is cooked to your preference.
- **Favorite Function:** To save your preferred cooking settings (temperature and time) for a specific dish, press and hold the **FAV + Save** button for 3 seconds. The next time you want to use these settings, simply press the **FAV** button.



Figure 7: The +1 Minute button and Favorite function for flexible cooking control.

Maintenance and Cleaning

Regular cleaning will ensure the longevity and optimal performance of your Midea Air Fryer.

- **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Cooking Basket and Crisper Plate:** The cooking basket and crisper plate are dishwasher safe for effortless cleaning. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak them in warm soapy water for about 10 minutes before cleaning.
- **Interior:** Wipe the interior of the air fryer with a damp cloth. For tougher stains, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

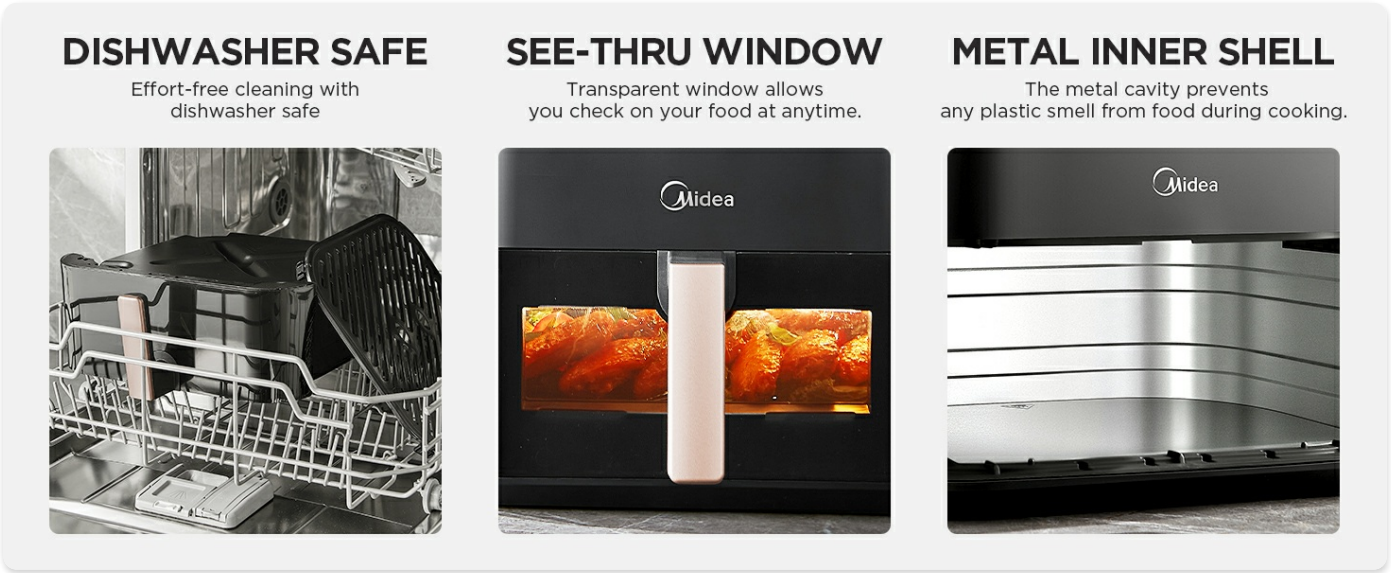


Figure 8: The air fryer basket is dishwasher safe for easy cleaning, and the metal inner shell prevents odors.

Troubleshooting

If you encounter any issues with your Midea Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped; incorrect temperature/time.	Do not overcrowd the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Not enough oil (for certain foods); basket overcrowded; temperature too low.	Lightly coat food with oil if necessary. Do not overcrowd. Increase temperature or cooking time.

Specifications

Feature	Detail
Brand	Midea
Model Number	MAD85F9BPK
Colour	Black/Rose Gold
Product Dimensions	33 x 33 x 33 cm
Item Weight	7.36 kg

Feature	Detail
Capacity	8.5 litres
Power / Wattage	2200 watts
Voltage	230 Volts
Material	Metal
Special Features	Automatic Shut-Off, Programmable, Stain Resistant, Temperature Control, Timer

Warranty and Support

Midea products are manufactured to the highest quality standards. For information regarding warranty coverage, product registration, or technical support, please visit the official Midea website or contact their customer service.
You can also find more information and products from Midea at their Amazon store: Midea Official Store on Amazon UK.

© 2025 Midea. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question