Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Marsail MSESD7B-US

Marsail Glass Standing Desk User Manual

Model: MSESD7B-US

Important Safety Information

Always keep the desk on a stable surface. Be cautious when adjusting the height of the desk to prevent injury. Keep the glass top clean and free of obstacles to prevent accidents. Do not place heavy objects on the desk that could cause it to tip over.

Product Overview

The Marsail Glass Standing Desk is an electric height-adjustable desk designed for home and office use. It features a durable glass tabletop, integrated USB charging ports, and a spacious storage drawer.



Figure 1: Marsail Glass Standing Desk with dual monitors, showing the integrated drawer and charging ports.



Figure 2: The elegant glass desktop surface provides a modern aesthetic for any workspace.

Specifications

Brand	Marsail
Model Number	MSESD7B-US
Product Dimensions	24"D x 46.5"W x 28.3"H
Height Adjustment Range	28.3" to 46.5"
Desktop Material	Tempered Glass
Base Material	Metal
Maximum Weight Capacity	120 Pounds
Charging Ports	Integrated USB-A and Type-C
Drawer Dimensions	25.4" x 12.4"



Figure 3: Detailed product dimensions for the Marsail Glass Standing Desk.

Setup and Assembly

The Marsail Glass Standing Desk features a one-piece tabletop design for simplified assembly.

Required Tools:

- Allen Wrench (Included)

- Screwdriver (Recommended)

Assembly Steps:

1. Unpack all components and verify against the parts list in the included instruction manual.
2. Attach the desk legs to the tabletop following the detailed instructions. Ensure all screws are securely tightened.
3. Connect the motor and control panel cables as indicated in the manual.
4. Place the desk in its desired location, ensuring it is on a stable and level surface.
5. Plug the power cord into a grounded electrical outlet.

Refer to the detailed instruction manual included in the packaging for step-by-step visual guides and a complete parts list.



Figure 4: Exploded view illustrating the main components for assembly.

Operating Instructions

Height Adjustment:

The desk's height can be adjusted electrically between 28.3 inches (sitting position) and 46.5 inches (standing position).

- **Up/Down Buttons:** Use the ▲ and ▼ buttons on the control panel to manually adjust the desk to your desired height.
- **Preset Buttons:** The desk features four preset buttons (1, 2, 3, 4) to save your favorite height settings.
    a. Adjust the desk to the desired height using the up/down buttons.
    b. Press the "M" button, then press one of the preset number buttons (1, 2, 3, or 4) within 3 seconds to save the current height.
    c. To recall a saved height, simply press the corresponding preset number button.



Figure 5: The electric height adjustment allows seamless transition between sitting and standing positions.

USB Charging Ports:

The desk is equipped with integrated USB-A and Type-C charging ports on the front panel for convenient device charging.

- Simply plug your compatible device's charging cable into the appropriate USB port.
- Ensure the desk is powered on for the charging ports to function.

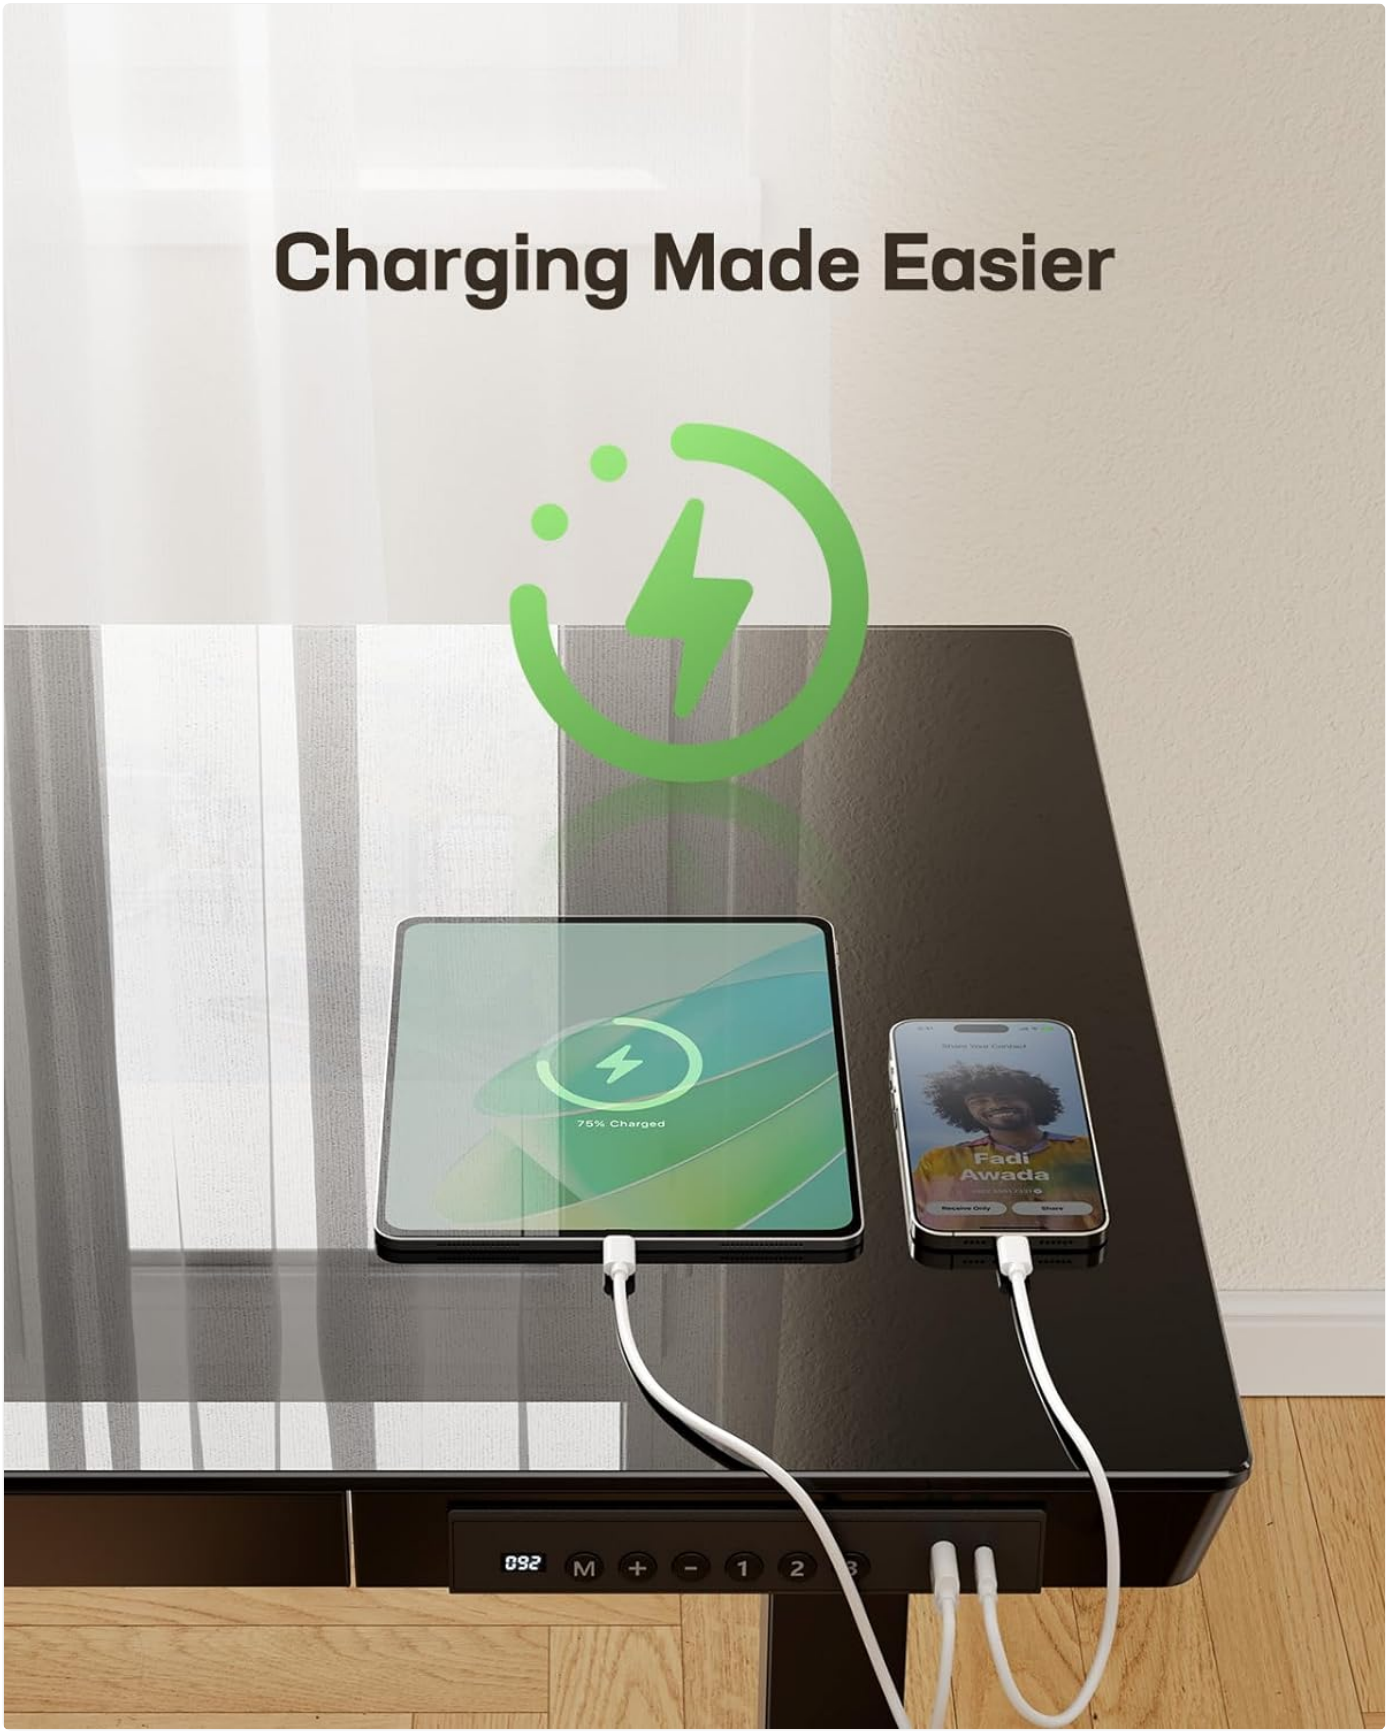


Figure 6: Integrated USB-A and Type-C ports provide convenient charging for your devices.

Storage Drawer:

The spacious drawer provides organized storage for office supplies and accessories, helping to maintain a clutter-free desktop.



Figure 7: The integrated drawer helps keep your workspace organized and clutter-free.

Maintenance

- **Cleaning the Glass Top:** Wipe the glass desktop with a dry cloth. For stubborn marks, use a glass cleaner and a soft cloth. Avoid abrasive cleaners or materials that could scratch the glass.
- **General Cleaning:** Regularly wipe down the desk frame and other surfaces with a damp cloth and mild detergent, then dry thoroughly.
- **Motor Care:** Do not obstruct the motor or lifting mechanism. Keep the area around the legs clear of debris.
- **Cable Management:** Periodically check and organize cables to prevent tangles and damage.



Figure 8: The tempered glass surface is easy to clean and can be used with dry erase markers.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Desk does not move.	Power cord unplugged; circuit breaker tripped; motor issue.	Check power connection. Reset circuit breaker if necessary. Contact customer support if issue persists.
Desk moves unevenly or makes unusual noise.	Loose connections; obstruction; uneven load.	Ensure all connections are secure. Remove any obstructions. Distribute weight evenly on the desktop.
USB charging ports not working.	Desk not powered on; device not compatible; cable issue.	Ensure desk is plugged in and powered. Verify device compatibility. Try a different USB cable.
Height presets not saving/recalling.	Incorrect saving procedure.	Follow the "Operating Instructions" for saving presets carefully. Ensure "M" button is pressed before the number.

If you encounter problems not listed here, or if the suggested solutions do not resolve the issue, please contact Marsail customer support.

Warranty and Support

Warranty Information:

The Marsail Glass Standing Desk comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and what is covered.
Mfg Warranty Type (i.e. Parts, Labor): 5 - This indicates a 5-year warranty, likely on parts.

Customer Support:

For technical assistance, warranty claims, or general inquiries, please contact Marsail customer support.

- **Online Support:** Visit the official Marsail website for FAQs and support resources.
- **Email Support:** Refer to your product manual or the Marsail website for the customer service email address.
- **Phone Support:** Refer to your product manual or the Marsail website for the customer service phone number.

When contacting support, please have your model number (MSESD7B-US) and purchase date ready.

© 2024 Marsail. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DK1XR9YV

More documents and user manuals: **https://manuals.plus/**