Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

xiskt A7505

XISKT 11-Inch Android 13 Tablet User Manual

Model: A7505

1. Introduction and Overview

Welcome to the user manual for your new XISKT 11-inch Android 13 Tablet. This tablet is designed to provide a powerful and versatile computing experience, featuring an Octa-Core processor, a vibrant 2K display, and ample storage. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your device to ensure optimal performance and user satisfaction.




Figure 1.1: XISKT 11-inch Android 13 Tablet (Lake Blue)

Key features include:

- **Operating System:** Android 13 for faster app running speed and lower power consumption.
- **Performance:** Octa-Core processor for powerful performance and graphics.
- **Memory & Storage:** 14GB RAM (6GB actual + 8GB virtual) and 256GB built-in storage, expandable up to 512GB via TF card.
- **Display:** 11-inch 2K (2000x1200) IPS high-resolution touchscreen.
- **Cameras:** 13MP rear camera and 5MP front camera for photos, videos, and video conferencing.
- **Battery:** 7500mAh large capacity battery with 18W fast charging, providing up to 16 hours of reading or browsing.
- **Connectivity:** Fast 2.4G/5G Wi-Fi, Bluetooth 5.0, Dual SIM support, and GPS.

2. What's in the Box

Upon opening your XISKT Tablet package, please verify that all the following items are included:

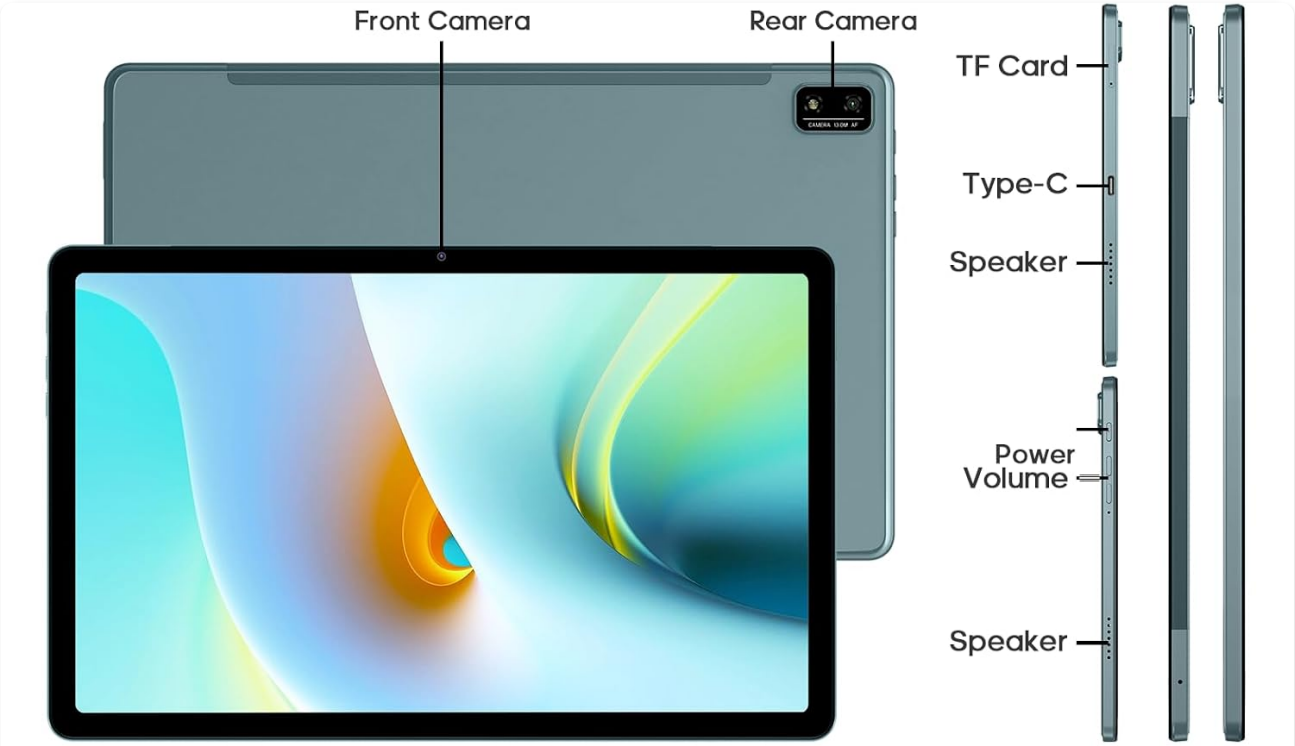



- XISKT 11-inch Android 13 Tablet (x1)
- Power Adapter (x1)
- Charging Cable (x1)
- Instruction Manual (x1)
- Ejection Pin (x1)
- Wired Headphones (x1)

If any items are missing or damaged, please contact customer support immediately.

3. Setup

3.1 Initial Charging

Before first use, it is recommended to fully charge your tablet. Connect the provided charging cable to the tablet's Type-C port and the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging progress. The tablet supports 18W fast charging.



Figure 3.1: Charging the XISKT Tablet via Type-C port.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the XISKT logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select 'Power off' and confirm.
- **To Restart:** From the power menu, select 'Restart'.

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, or password).
- Review and accept terms and conditions.

3.4 Inserting SIM and TF Cards

The tablet supports Dual SIM cards and a TF (microSD) card for expanded storage. Locate the SIM/TF card tray on the side of the tablet. Use the provided ejection pin to open the tray. Carefully place your SIM card(s) and/or TF card into the designated slots, ensuring correct orientation. Gently push the tray back into the tablet until it clicks into place.



Figure 3.2: Location of TF Card slot and other ports.

4. Operating Instructions

4.1 Basic Navigation

The XISKT Tablet features an 11-inch 2K touchscreen display. Navigate the interface using standard Android gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or menus.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move app icons.

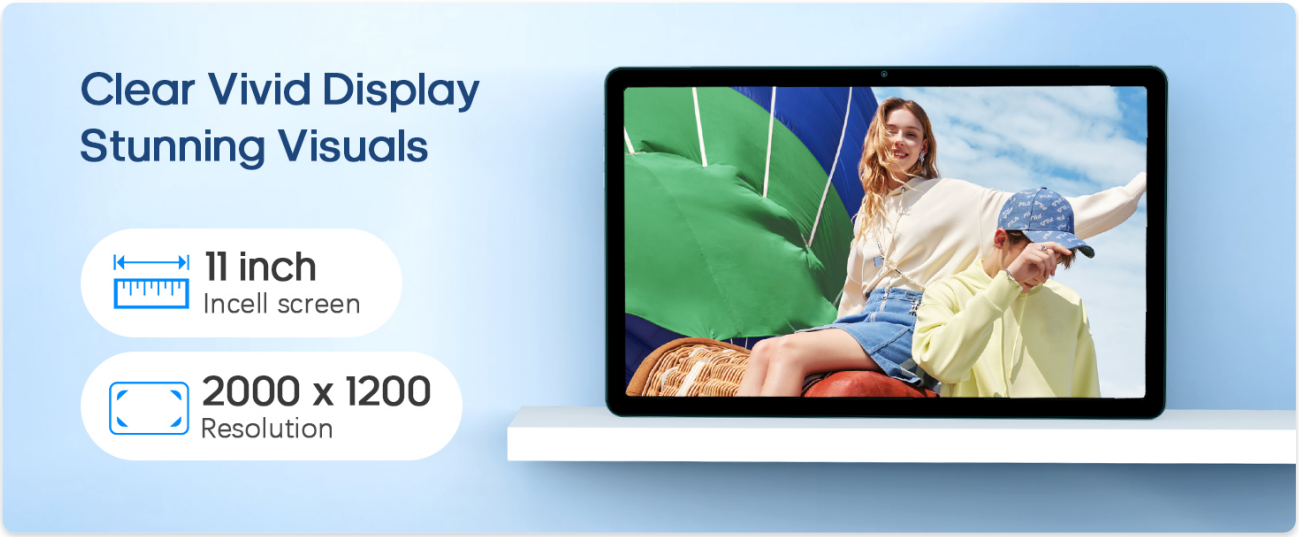


Figure 4.1: The tablet's 11-inch 2K display.

4.2 Wi-Fi and Bluetooth Connectivity

To connect to Wi-Fi or Bluetooth devices:

- Go to **Settings** > **Network & internet** for Wi-Fi. Select your network and enter the password. The tablet supports 2.4G and 5G Wi-Fi.
- Go to **Settings** > **Connected devices** > **Bluetooth**. Turn on Bluetooth, scan for devices, and select the device you wish to pair with. The tablet features Bluetooth 5.0 for efficient transmission.



Figure 4.2: Seamless connectivity for sharing content.

4.3 Camera Usage

The tablet is equipped with a 13MP rear camera and a 5MP front camera. Open the Camera app to capture photos and 2K FHD videos. Switch between front and rear cameras using the icon on the screen. Explore various modes like Panorama, Portrait, and more, if available.

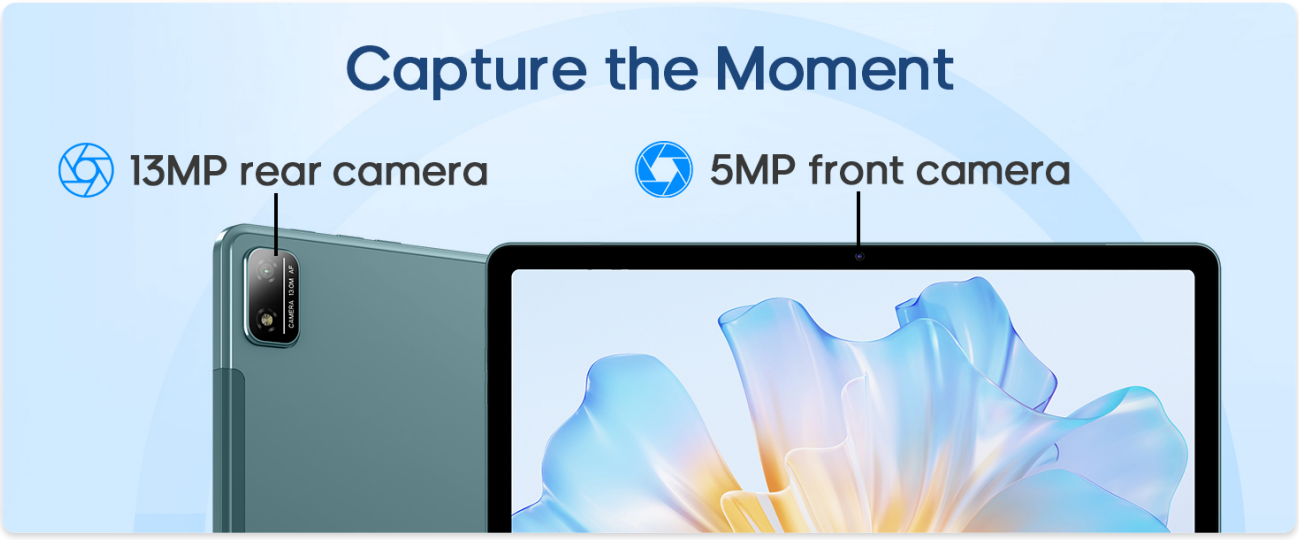


Figure 4.3: Camera specifications and placement.

4.4 Media and Entertainment

Enjoy movies, music, and games on your XISKT Tablet. The 2K display provides stunning visuals, and the dual speakers with a digital amplifier chip deliver high-quality stereo sound. Download your favorite streaming apps from the Google Play Store.



Figure 4.4: Enhanced audio experience with dual speakers.



Figure 4.5: Tablet optimized for gaming.



Figure 4.6: Tablet suitable for reading.

5. Maintenance

5.1 Cleaning Your Tablet

To clean the screen and body of your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the device.

5.2 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging regularly.
- Use only the provided charger or a certified compatible charger.

5.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings** > **System** > **System update** to check for and install available updates.

6. Troubleshooting

This section addresses common issues you might encounter with your XISKT Tablet.

Problem	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If it still doesn't turn on, try holding the power button for 10-15 seconds for a forced restart.

Problem	Possible Solution
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance or freezing	Close unused apps running in the background. Clear cache for frequently used apps. Restart the tablet. Ensure sufficient storage space is available.
Apps crashing or not responding	Force close the app (Settings > Apps > [App Name] > Force Stop). Clear the app's cache and data. Uninstall and reinstall the app. Ensure the tablet's software is up to date.
Battery drains quickly	Reduce screen brightness. Turn off Wi-Fi, Bluetooth, and GPS when not in use. Close background apps. Limit push notifications. Check battery usage in settings to identify power-hungry apps.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please refer to the Warranty and Support section for further assistance.

7. Specifications

Below are the detailed technical specifications for your XISKT 11-inch Android 13 Tablet (Model A7505):

Feature	Specification
Model Name	X-A7505
Operating System	Android 13
Processor	Octa-Core (Unisoc)
RAM	14GB (6GB actual + 8GB virtual)
Internal Storage	256GB ROM
Expandable Storage	Up to 512GB via TF Card
Screen Size	11 Inches
Screen Resolution	2000x1200 Pixels (2K IPS)
Rear Camera	13MP
Front Camera	5MP
Battery Capacity	7500mAh Lithium Ion
Charging	18W Fast Charging, Type-C
Wireless Type	802.11ac (2.4G/5G Wi-Fi)
Bluetooth	Bluetooth 5.0

Feature	Specification
SIM Support	Dual SIM
GPS	Integrated GPS
Item Weight	1.98 pounds (approx. 800g)
Product Dimensions	10.13 x 6.37 x 0.28 inches (approx. 7.3mm thickness)
Color	Lake Blue

8. Warranty and Support

Your XISKT Tablet comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.
For warranty claims, technical support, or any inquiries regarding your product, please contact XISKT customer service through the retailer where you purchased the device or visit the official XISKT support website. Please have your purchase receipt and product model number (A7505) ready when contacting support.
We are committed to providing 100% satisfaction after-sale guarantee.

© 2024 XISKT. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DK38VBXV

More documents and user manuals: **https://manuals.plus/**