AMZCHEF CE-FS-I95S-GFFDD01

AMZCHEF 80cm 5-Zone Induction Cooktop Instruction Manual

Model: CE-FS-I95S-GFFDD01

Introduction Safety Information Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the AMZCHEF 80cm 5-Zone Induction Cooktop. This manual provides essential information for safe installation, operation, and maintenance of your new appliance. Please read it thoroughly before use and keep it for future reference.



Figure 1: AMZCHEF 80cm 5-Zone Induction Cooktop overview.

2. Important Safety Information

To prevent accidents and ensure proper operation, always follow these basic safety precautions:

- Read all instructions carefully before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation during use.
- This appliance is for household use only.
- Keep children away from the appliance during operation and cooling.
- Do not immerse the cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Only use magnetic cookware suitable for induction cooktops.

- The appliance must be installed by a qualified technician.
- **Residual Heat Indicator:** The "H" symbol indicates a cooking zone is still hot. Avoid touching it to prevent burns.



Figure 2: Residual heat indicator "H" on the cooktop.

- **Overheating Protection:** The cooktop will automatically shut down if it overheats.



Figure 3: Visual representation of overheating protection.

- **Child Safety Lock:** Activate the safety lock to prevent accidental operation by children.



Figure 4: Multiple safety protections including child lock.

3. Setup and Installation

3.1 Product Dimensions and Cut-out Size

The AMZCHEF 80cm 5-Zone Induction Cooktop is designed for built-in installation. Ensure your countertop has the correct cut-out dimensions for a secure fit.

Product Size: 77 x 52 x 5.5 cm

Opening Size: (73.3~73.5) x (48.8~49.0) mm

A minimum space of 50 mm around the opening is required for proper ventilation.

The thickness of the work surface should be at least 30 mm.



Figure 5: Detailed dimensions for built-in installation.

3.2 Electrical Wiring

This product does not include a plug and requires direct wiring by a qualified electrician. Refer to the wiring diagram for correct connection to your domestic power supply.



Figure 6: Wiring diagram for the induction cooktop.

3.3 Cookware Compatibility

The induction cooktop is only compatible with cookware that has magnetic bases. Examples include:

- Iron pots
- Cast iron pots
- Enameled iron pots
- Stainless steel pots

Non-magnetic materials such as heat-resistant glass, copper, aluminum, or ceramic pots are not suitable.



Figure 7: Visual guide to compatible and incompatible cookware.

4. Operating Instructions

The cooktop features independent slider controls for each cooking zone, offering flexible and precise temperature adjustments.

4.1 Power On/Off and Power Levels

- Press the **ON/OFF** button to turn the cooktop on or off.
- Each cooking zone has 9 power levels, adjustable via its dedicated slider control. Slide your finger from left to right (or vice versa) to set the desired heat level.

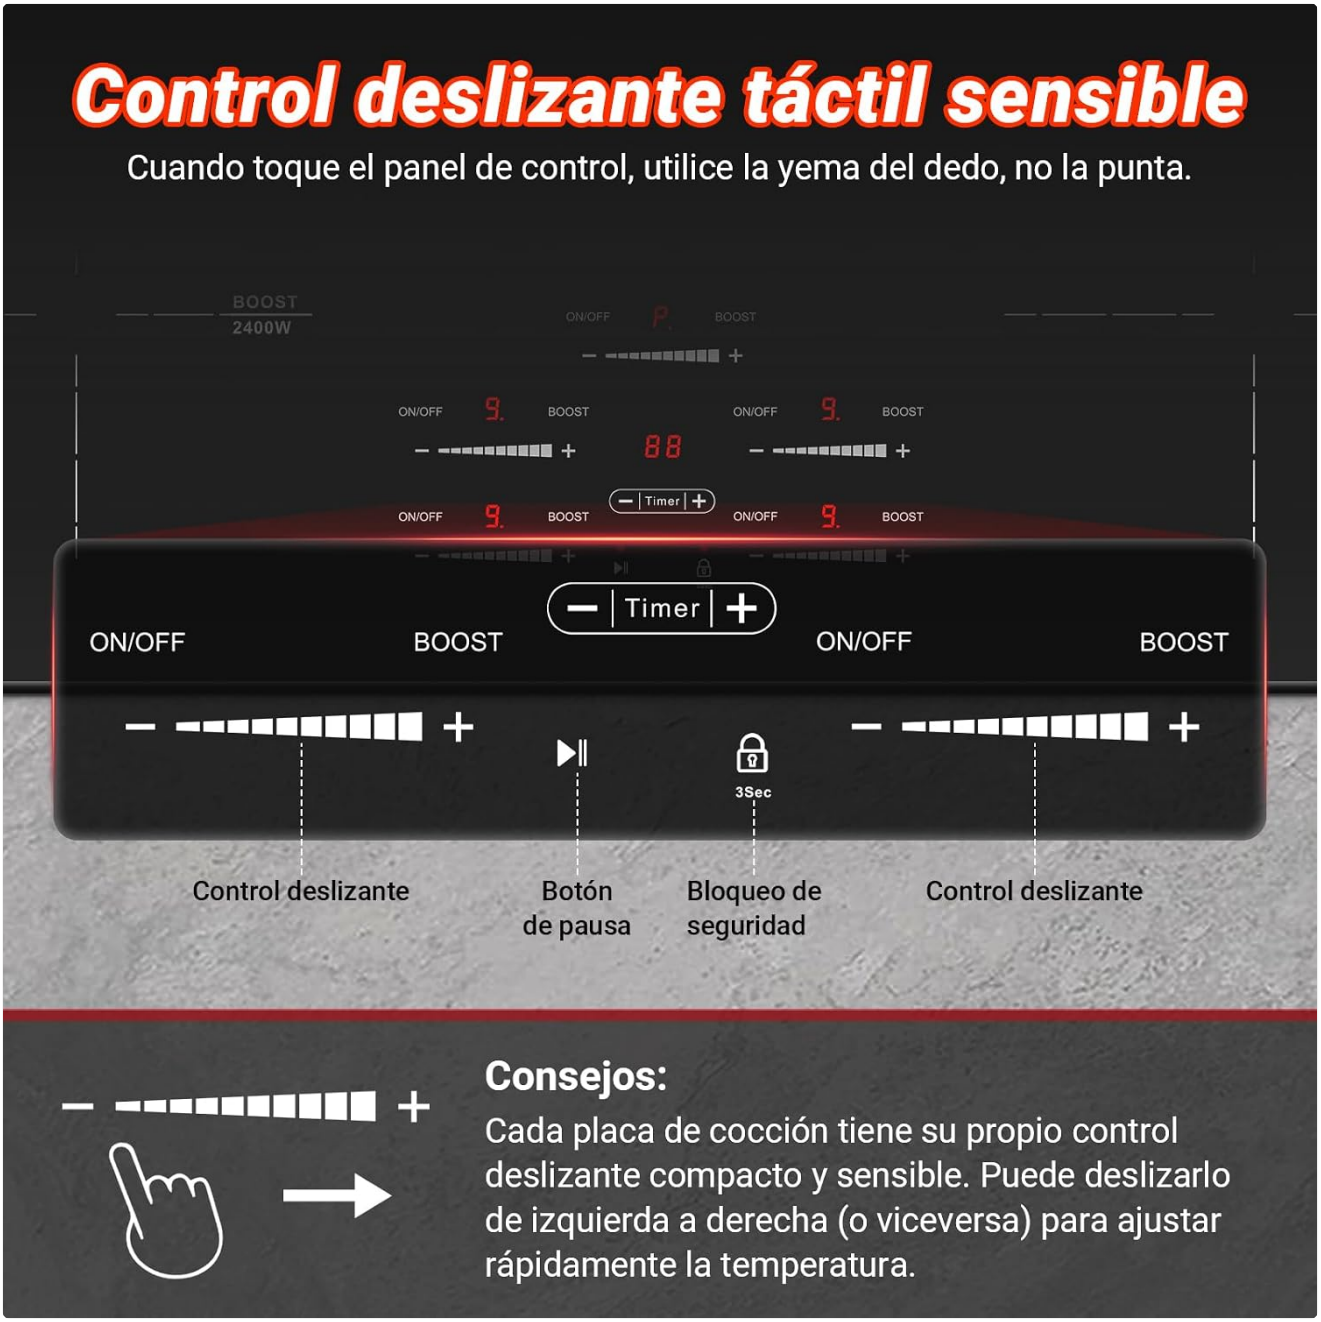


Figure 8: Independent tactile slider control for easy operation.



Figure 9: Visual representation of 9 power levels for various cooking methods.

4.2 Boost Function

The Boost function provides a rapid increase in power, allowing liquids to boil quickly (e.g., water in 1 minute). This helps retain moisture and nutrients in ingredients.

- Activate the **Boost** function for any cooking zone by pressing the dedicated Boost button.
- The Boost function typically operates for 10 minutes, increasing power by up to 25%.



Figure 10: Illustration of the Boost function for rapid heating.

4.3 Timer Function

Set a timer for up to 99 minutes for precise cooking control. The cooktop will automatically shut off the selected zone when the timer expires.

- Press the **Timer** button and use the slider to set the desired cooking duration.



Figure 11: Keep Warm and Timer functions for flexible cooking.

4.4 Keep Warm Function

Use the Keep Warm function to maintain food at an optimal serving temperature without overcooking.

- Activate the **Keep Warm** function for a selected zone.

4.5 Pause (Stop+Start) Function

The Stop+Start function allows you to pause cooking and resume it later with the same settings.

- Press the **Pause** button to temporarily stop cooking. Press it again to resume.



Figure 12: The Pause function allows temporary interruption of cooking.

4.6 Child Lock

To prevent accidental changes to settings or activation of the cooktop, use the child safety lock.

- Press and hold the **Lock** button for 3 seconds to activate or deactivate the child lock.

4.7 Videos Demonstrating Operation

Your browser does not support the video tag.

Video 1: Demonstration of a 5-zone induction cooktop in operation, showing various cooking processes.

Your browser does not support the video tag.

Video 2: Overview of a 5-zone induction cooktop, highlighting its features and cooking capabilities.

Your browser does not support the video tag.

Video 3: Demonstration of comfortable and easy-to-use slider controls on an induction cooktop.

5. Cleaning and Maintenance

The cooktop is made of polished black crystal glass, which is resistant to high temperatures and wear, making it easy to clean.

- Always ensure the cooktop has cooled down completely before cleaning.
- Use a soft cloth and mild detergent to wipe the surface.
- Avoid abrasive cleaners or scouring pads that could scratch the glass.
- For stubborn stains, use a specialized ceramic hob cleaner.



Figure 13: The premium black crystal panel is easy to clean and scratch-resistant.



Figure 14: Demonstration of easy cleaning for the cooktop surface.

6. Troubleshooting Guide

If you encounter any issues with your induction cooktop, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated.	Check power connection; Deactivate child lock by pressing and holding the lock button for 3 seconds.
Cooking zone not heating.	Incompatible cookware; Pan not centered; Overheating protection activated.	Use magnetic cookware; Center the pan on the zone; Allow cooktop to cool down.
Unusual noise during operation.	Normal operation sound (fan, coil vibration); Cookware quality.	Some noise is normal for induction cooktops; Try different cookware.
Error code displayed.	Specific malfunction.	Refer to the full user manual for specific error code meanings and solutions. If the problem persists, contact customer support.

7. Product Specifications

Feature	Detail
Brand	AMZCHEF
Model Number	CE-FS-I95S-GFFDD01
Product Dimensions	77 x 52 x 5.5 cm
Weight	14.44 kg
Heating Zones	5 Induction Zones
Total Power	9500W
Power Levels	9 levels per zone
Special Functions	Boost Function, Independent Sliders, Automatic Shutdown, Child Lock, Timer, Keep Warm, Pause
Surface Material	Polished Black Crystal Glass (Ceramic)
Power Source	Electric Cable (no plug included)

8. Warranty and Customer Support

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official AMZCHEF website. Keep your proof of purchase for any warranty claims.
If you require further assistance, please contact AMZCHEF customer service.

© 2024 AMZCHEF. All rights reserved.