Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KENNEAS Wireless Controller

KENNEAS Wireless Controller User Manual

For Nintendo Switch, Switch OLED, and Switch Lite

Introduction

Thank you for choosing the KENNEAS Wireless Controller. This controller is designed to enhance your gaming experience on Nintendo Switch, Switch OLED, and Switch Lite consoles. It features advanced functionalities such as a 6-axis gyroscope, adjustable vibration, turbo function, and programmable back buttons. Please read this manual carefully to ensure proper setup and operation.



Image: Overview of the KENNEAS Wireless Controller highlighting key features like HD vibration, LED lighting, 15-hour playtime, turbo function, precise sticks, and 6-axis gyroscope.

Package Contents

Please check the package to ensure all items are present:

- 1 x KENNEAS Wireless Controller
- 2 x Replaceable Faceplates (one pre-installed, one extra)
- 1 x USB Charging Cable
- 1 x User Manual



Image: The complete package contents, including the controller, an additional faceplate, USB cable, and manual.

Setup and Pairing

1. **Initial Pairing:**
    - Turn on your Nintendo Switch console.
    - From the HOME Menu, select **"Controllers"** > **"Change Grip/Order"**.
    - Press and hold the **SYNC Button** on the top of the KENNEAS controller for 3-5 seconds until the LED indicators start flashing rapidly.
    - Once paired, the player LED(s) on the controller will light up solid.
2. **Reconnecting:**
    - If the controller has been paired before, simply press the **HOME Button** to wake it up. It will automatically reconnect to your Switch console.

Note: Ensure your Switch console is updated to the latest system version for optimal compatibility.

Operating Instructions

Button Layout

The KENNEAS Wireless Controller features a standard layout for intuitive gameplay:

- **Left Joystick:** For movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **Right Joystick:** For camera control or specific in-game actions.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **HOME Button:** Returns to the Switch HOME Menu.
- **CAPTURE Button:** Takes screenshots.
- **PLUS (+) / MINUS (-) Buttons:** Start/Select functions.
- **M1/M2 Buttons:** Programmable back buttons.

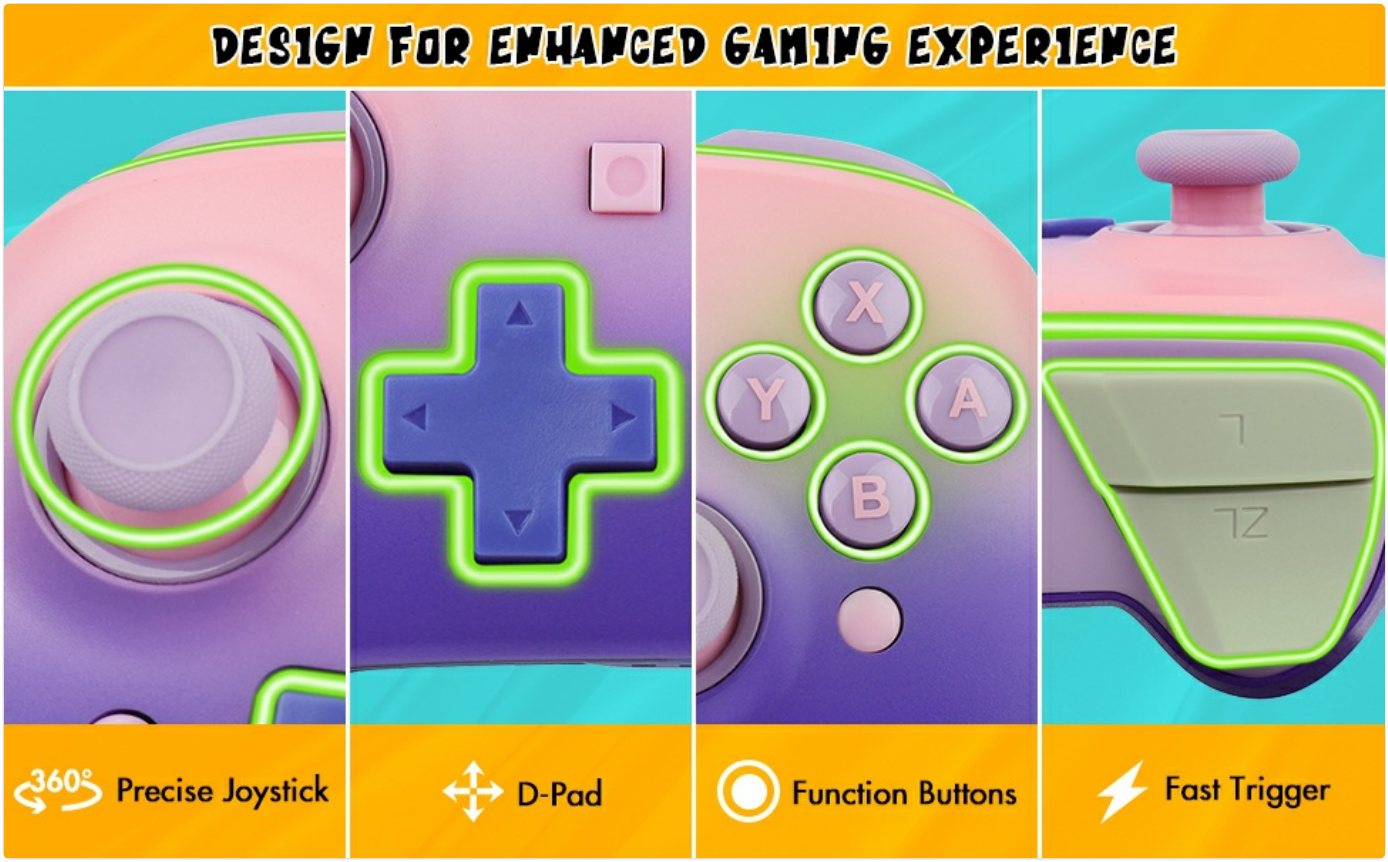


Image: Detailed view of the controller's main input components, including joysticks, D-pad, action buttons, and triggers.

LED Lighting

The controller features 8 different LED color options. Refer to the full instruction manual for specific button combinations to cycle through or set your preferred LED color.

Turbo Function

The Turbo function allows for rapid, continuous pressing of a button. To activate:

1. Press and hold the button you wish to set for Turbo (e.g., A, B, X, Y, L, R, ZL, ZR).
2. While holding the button, press the **Turbo Button** (usually a dedicated button or a combination with another button, refer to the full manual for exact location).
3. Release both buttons. The button will now continuously activate when held.

To deactivate Turbo for a specific button, repeat the process. To clear all Turbo settings, press and hold the Turbo button for 5 seconds.

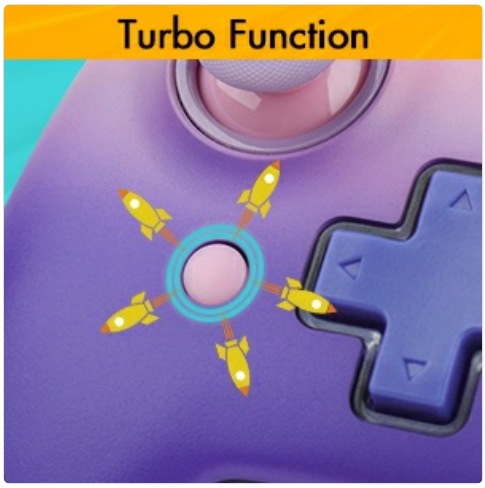


Image: Illustration of the Turbo function, indicating rapid input from a button.

Programmable Back Buttons (M1/M2)

The controller features two programmable back buttons (M1 and M2) for custom key mapping. This allows you to assign complex button sequences or frequently used actions to a single button.

1. **To Program:**
    - Press and hold the **Program Button** (refer to the full manual for exact location, often a small button on the back or bottom). The indicator light will flash.
    - Press the **M1** or **M2** button you wish to program.
    - Press the button(s) or sequence of buttons you want to assign (e.g., A+B, or X then Y).
    - Press the **Program Button** again to save the setting. The indicator light will stop flashing.
2. **To Clear:**
    - Press and hold the **Program Button** for 5 seconds until the indicator light turns off. This will clear all programmed settings.



Image: A close-up of the programmable back button (ML) on the controller.

Immersive Vibration Motor (Adjustable)

The controller features dual vibration motors with 3 adjustable levels to provide immersive feedback during gameplay. To adjust the vibration intensity, refer to the specific instructions in the full manual, usually involving a combination of the Turbo button and the D-pad up/down.

6-Axis Gyroscope and Motion Control

The built-in 6-axis gyroscope provides precise motion sensing, allowing for immersive motion control in compatible games. This feature enhances gameplay by translating your physical movements into in-game actions.



Image: Visual representation of the 6-axis sensor detecting motion and orientation.

Charging and Battery Life

The KENNEAS Wireless Controller is equipped with an 850 mAh rechargeable battery, providing up to 15 hours of playtime on a full charge.

- **Charging:** Connect the controller to a USB power source (e.g., Switch dock, computer, USB wall adapter) using the provided USB charging cable. The LED indicators will show charging status.
- **Battery Status:** The LED indicators will typically flash slowly while charging and turn off or change color when fully charged. During use, the LEDs may indicate low battery status.

Faceplate Replacement

The controller comes with two magnetic replaceable faceplates, allowing for customization. To change the faceplate:

1. Gently lift the edges of the installed faceplate to detach it from the controller. The faceplates are held by magnets.
2. Align the new faceplate with the controller's body and gently press it into place until the magnets secure it.



Image: Demonstration of the replaceable faceplates, showing two different styles.

Troubleshooting

- **Controller not connecting:**
  - Ensure the controller is charged.
  - Repeat the initial pairing steps.

- Check for interference from other wireless devices.
- Restart your Nintendo Switch console.

- **Buttons not responding:**
  - Ensure the controller is properly connected.
  - Check if any button is stuck.
  - Reset the controller (usually a small pinhole button on the back).
- **Drifting joysticks:**
  - Calibrate the joysticks through the Nintendo Switch system settings (**System Settings** > **Controllers and Sensors** > **Calibrate Control Sticks**).
- **Charging issues:**
  - Try a different USB port or charging cable.
  - Ensure the charging cable is securely connected.

Specifications

Feature	Description
Compatibility	Nintendo Switch, Switch OLED, Switch Lite
Connectivity	Wireless (Bluetooth)
Battery Capacity	850 mAh
Playtime	Up to 15 hours (approx.)
Charging Port	USB-C (cable included)
Sensors	6-Axis Gyroscope
Vibration	Dual motors, 3 adjustable levels
Special Features	Turbo function, Programmable back buttons (M1/M2), 8-color LED lighting, Replaceable magnetic faceplates

Warranty and Support

KENNEAS provides a standard warranty for this product. For detailed warranty information, technical support, or any inquiries, please refer to the warranty card included in your package or contact KENNEAS customer service through the retailer where you purchased the product.
You can also visit our official website for FAQs and additional support resources.

© 2023 KENNEAS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DK7CK27D

More documents and user manuals: **https://manuals.plus/**