Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Mattel JGC01

Mattel Jurassic World JGC01 Interactive Dino Action Figure Instruction Manual

Model: JGC01

Introduction

The Mattel Jurassic World JGC01 Interactive Dino Action Figure offers an immersive play experience, bringing the dinosaurs of Jurassic World to life with sound and motion. This figure is designed with movie-accurate details, realistic textures, and vibrant colors to enhance imaginative play. Its interactive features include exciting roars and movements, making the dinosaur feel alive as it engages in dynamic play. With poseable limbs, this figure is perfect for recreating action-packed scenes or imagining new dinosaur adventures.

- **Interactive Features:** Experience sound and motion for dynamic play.
- **Poseable Limbs:** Allows for various poses and action scenes.
- **Realistic Design:** Movie-accurate details with authentic textures and colors.



Image: A child engaging in play with the interactive dinosaur figure, demonstrating its appeal and size in a natural setting.

Setup

Battery Installation

The Jurassic World JGC01 Interactive Dino Action Figure requires 3 LR44 batteries for its interactive sound and motion features. The batteries are included with the product.

1. Locate the battery compartment on the underside of the figure.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 new LR44 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Initial Assembly and Posing

The figure comes largely pre-assembled. Minor adjustments may be needed to position the poseable limbs as desired for

play or display. Gently move the joints to achieve the desired stance.



Image: The interactive dinosaur figure in a standing position, ready for play after battery installation.

Operating Instructions

The JGC01 Dino Action Figure features multiple interactive elements to enhance play.

Activating Sounds and Movements

To activate the exciting roars and movements, locate the interactive trigger point on the figure's head. Pressing this point will initiate various sound effects and dynamic actions.



Image: A hand demonstrating how to press the top of the dinosaur's head to activate its interactive features.

Dynamic Action Sequence

Some figures may feature a specific action sequence. For example, to trigger a lunging or attacking motion:

1. Hold the figure by its back, allowing its front to be elevated.
2. Press the designated button or area on the figure's back to initiate the action, causing it to lunge forward.

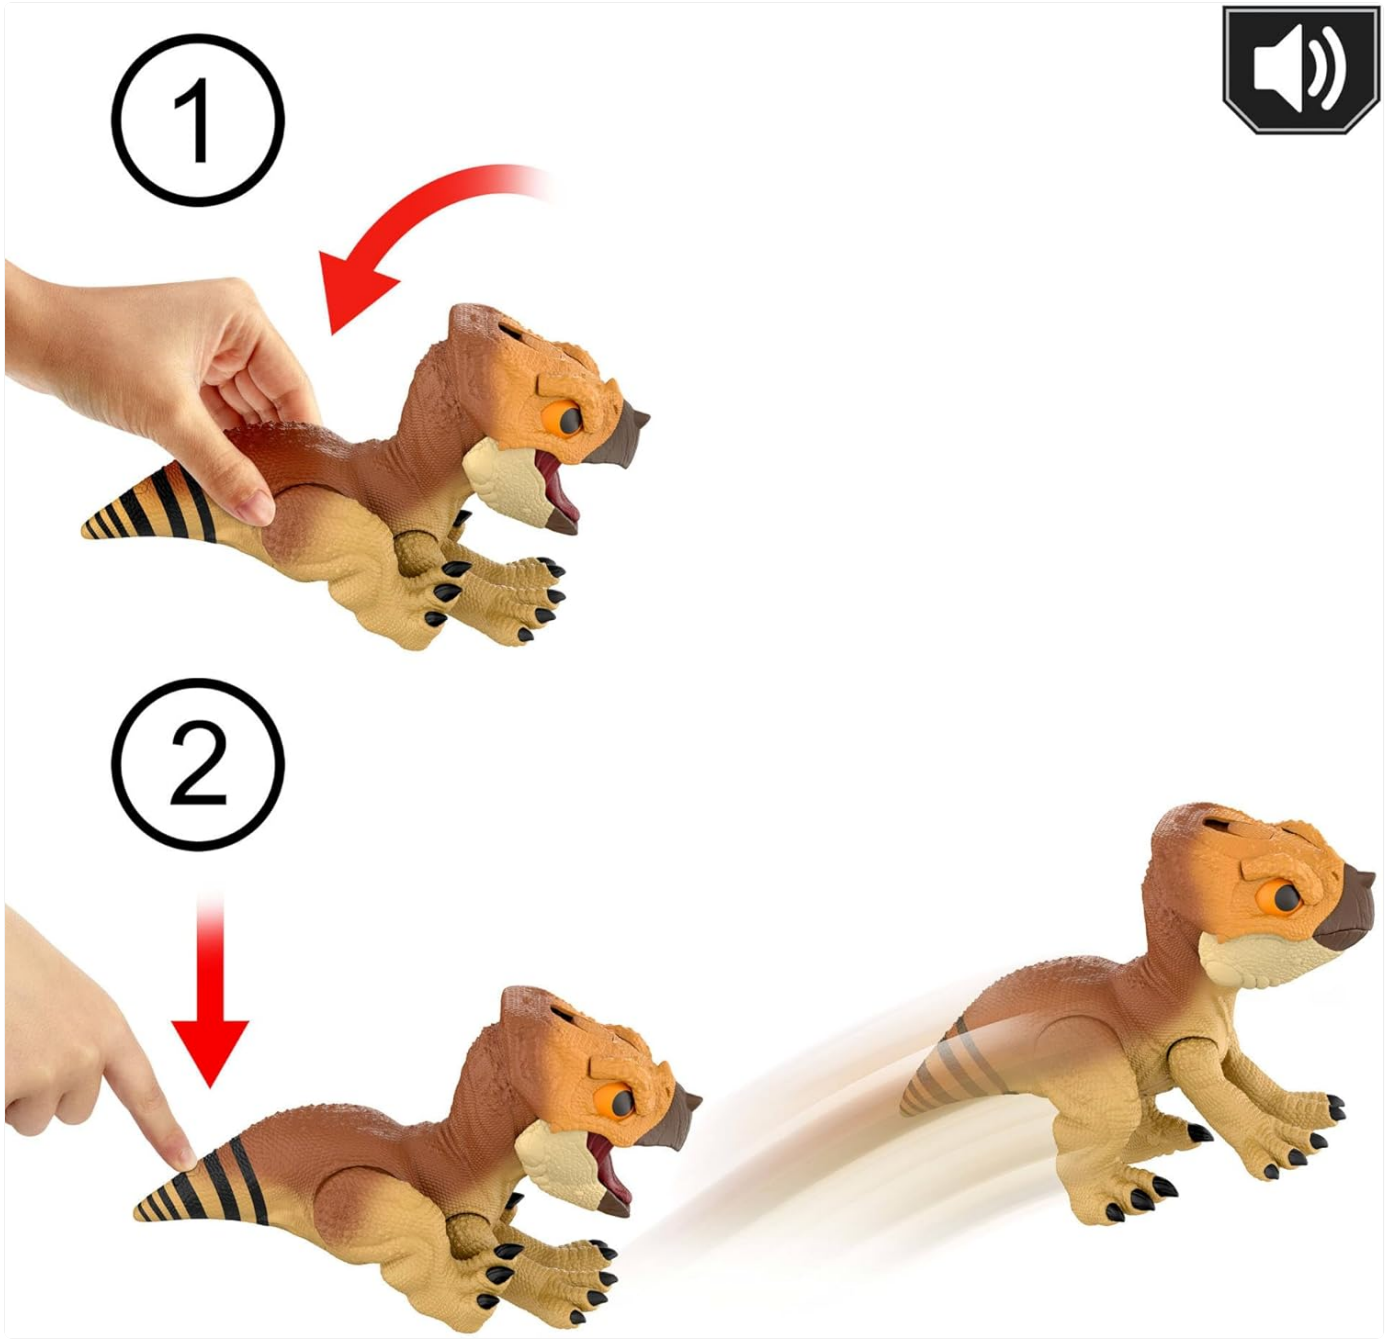


Image: A visual guide illustrating the two steps required to activate a specific dynamic action, such as a lunge, for the dinosaur figure.

Feeding Feature

Some figures include a feeding accessory. To use this feature, gently place the accessory into the dinosaur's open mouth. This may trigger additional sounds or movements.



Image: A hand demonstrating the feeding action by placing a red accessory into the dinosaur's mouth, highlighting an interactive play element.

Maintenance

Cleaning

To clean the action figure, gently wipe it with a soft, damp cloth. Do not submerge the figure in water or use harsh chemicals, as this may damage the electronic components and paint finish.

Storage

Store the figure in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation and battery leakage. If storing for an extended period, it is recommended to remove the batteries.

Troubleshooting

- **No Sound or Movement:**
  - Check if the batteries are correctly installed with the proper polarity.
  - Replace old batteries with new LR44 batteries.
  - Ensure the interactive trigger points are being pressed firmly.
- **Stiff or Stuck Limbs:**

- Gently manipulate the poseable joints. Avoid excessive force to prevent damage.

Specifications

Model Number	JGC01
Brand	Mattel
Material Type	Plastic
Product Dimensions	7.62 x 20.32 x 12.5 cm
Item Weight	280 g
Batteries Required	Yes (3 x LR44)
Batteries Included	Yes
Manufacturer Recommended Age	4 years and up
Educational Objective(s)	Supporting imaginative play and motor skills development

Safety Information

- **Choking Hazard:** This toy may contain small parts. Not suitable for children under 3 years due to potential choking hazards.
- **Battery Safety:**
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Remove batteries if the product is not used for a long period.
  - Dispose of used batteries responsibly.
- **Adult Supervision:** Adult supervision is recommended during play, especially for younger children.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Mattel website. You can typically find details regarding product guarantees, returns, and contact information for technical assistance there.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DK7XZ26N

More documents and user manuals: **https://manuals.plus/**