FPD CA43-P3

FPD 43 Inch Smart TV User Manual

Model: CA43-P3 (Palette-Series 2025, Android TV 1080P)

1. Introduction

Thank you for choosing the FPD 43 Inch Smart TV. This manual provides essential information for setting up, operating, and maintaining your new television. Please read this manual thoroughly before using the product to ensure proper and safe operation.



Image: Front view of the FPD 43 Inch Smart TV, showcasing its sleek design and vibrant display.

2. What's in the Box

Before you begin, please check the contents of your product packaging. Ensure all items listed below are present and in

good condition.

- FPD 43 Inch Smart TV
- Remote Control with AAA Batteries (x2)
- Base Mounting Accessories (TV Stands and Screws)
- AV Adapter Cable
- User Manual (this document)

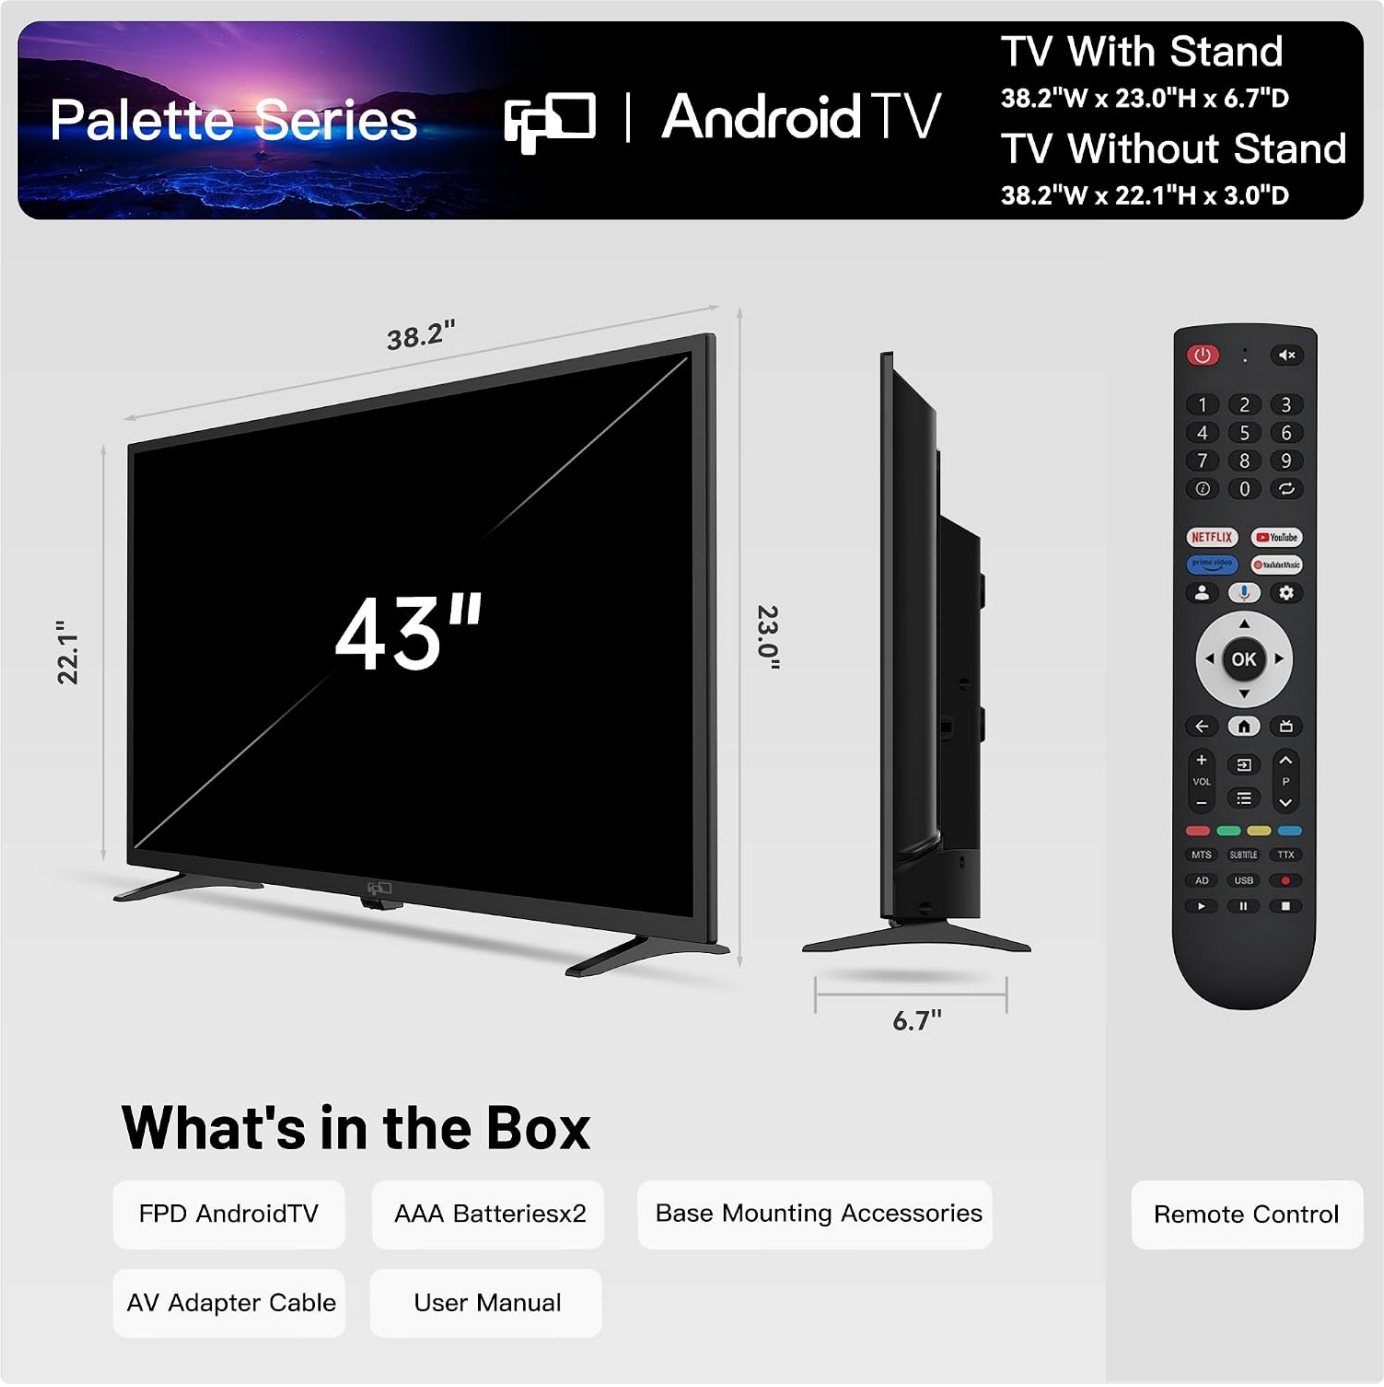


Image: Diagram showing the FPD 43 Inch Smart TV, remote control, and other included accessories.

3. Setup Guide

3.1 Attaching the TV Stands

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Identify the left and right stands.

3. Align each stand with the corresponding screw holes on the bottom of the TV.
4. Secure the stands using the provided screws. Do not overtighten.

3.2 Wall Mounting (Optional)

The FPD 43 Inch Smart TV supports VESA wall mounts. Refer to your wall mount's instructions for proper installation. Ensure the wall mount is compatible with the TV's VESA pattern and weight.

- **VESA Standard:** Refer to the specifications section for VESA dimensions.
- **Safety:** Always seek professional assistance for wall mounting to prevent injury or damage.

3.3 Connecting Devices

Your FPD Smart TV offers various connectivity options:

- **HDMI:** Connect Blu-ray players, game consoles, cable boxes, etc.
- **USB:** Connect USB drives for media playback.
- **Ethernet (LAN):** For a wired internet connection.
- **AV Input:** Use the provided AV adapter cable for older devices.
- **Wi-Fi:** For wireless internet connection.
- **Bluetooth:** For connecting wireless accessories like headphones or speakers.

3.4 Initial Power On and Setup Wizard

1. Plug the power cord into the TV and then into a wall outlet.
2. Press the Power button on the remote control or the TV.
3. Follow the on-screen instructions for the initial setup, which typically includes:
    - Language selection
    - Network connection (Wi-Fi or Ethernet)
    - Google Account sign-in (recommended for full Android TV features)
    - Channel scanning (for antenna/cable connections)

4. Operating Your Smart TV

4.1 Remote Control Functions

Familiarize yourself with the remote control buttons for easy navigation and control.

- **Power:** Turns the TV on/off.
- **Source/Input:** Selects input sources (HDMI, AV, TV).
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Back/Return:** Returns to the previous screen.
- **Home:** Accesses the Android TV home screen.
- **Volume Up/Down:** Adjusts volume.
- **Channel Up/Down:** Changes TV channels.
- **App Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, Prime Video).
- **Google Assistant Button:** Activates voice commands.

4.2 Android TV Interface

The Android TV home screen provides access to your favorite apps, live TV, movies, and settings.



Image: Screenshot of the Android TV home screen, showing various streaming app icons and content recommendations.

- **Apps:** Browse and launch installed applications.
- **Inputs:** Switch between connected devices.
- **Settings:** Configure TV settings, network, accounts, and more.
- **Google Play Store:** Download new apps and games.

4.3 Google Cast Functionality

The built-in Google Cast allows you to stream content from your mobile devices, tablets, or computers directly to your FPD Smart TV.



Image: A smartphone displaying content being cast wirelessly to the FPD Smart TV.

1. Ensure your mobile device and TV are connected to the same Wi-Fi network.
2. Open a compatible app (e.g., YouTube, Netflix) on your mobile device.
3. Tap the Cast icon **(a square with a Wi-Fi signal in the corner)**within the app.
4. Select your FPD Smart TV from the list of available devices.

4.4 HDR10 and 1080P FHD Display

Experience stunning visuals with 1080P Full HD resolution and HDR10 support, providing enhanced contrast, brightness, and a wider color gamut for a more immersive viewing experience.



Image: A split screen showing the visual difference with HDR10 enabled, highlighting vibrant colors and contrast.

5. Maintenance

5.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, dampen the cloth slightly with water or a mild, non-abrasive screen cleaner. Never spray liquid directly onto the TV.
- Avoid using abrasive cleaners, waxes, or solvents.

5.2 Software Updates

Your FPD Smart TV may receive periodic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates.

- **Automatic Updates:** Enable automatic updates in the TV settings for convenience.
- **Manual Check:** You can manually check for updates via *Settings > Device Preferences > About > System update*

5.3 Storage and Handling

- Store the TV in a cool, dry place away from direct sunlight and extreme temperatures.
- When moving the TV, always lift it by the bottom and top edges, avoiding pressure on the screen.

6. Troubleshooting

If you encounter issues with your FPD Smart TV, refer to the following common problems and solutions before contacting support.

Problem	Possible Cause	Solution
No power	Power cord unplugged; outlet issue; remote batteries dead.	Check power cord connection; test outlet with another device; replace remote batteries.
No picture, but sound is present	Incorrect input source; loose HDMI/AV cable.	Press the "Source" button on the remote to select the correct input; ensure cables are securely connected.
No sound, but picture is present	Volume muted or too low; external audio system issue.	Unmute volume or increase level; check connections to external audio devices.
Cannot connect to Wi-Fi	Incorrect password; router issue; TV too far from router.	Double-check Wi-Fi password; restart router; move TV closer to router or use Ethernet.
Remote control not working	Dead batteries; obstruction; remote not paired.	Replace batteries; remove obstructions; re-pair remote if it's a Bluetooth remote (refer to TV settings).

7. Specifications

Detailed technical specifications for your FPD 43 Inch Smart TV.

Feature	Detail
Brand	FPD
Model Number	CA43-P3
Screen Size	43 Inches (110 cm diagonal)
Display Technology	LED
Resolution	1080p Full HD (1920 x 1080)
Refresh Rate	60 Hz
HDR Support	HDR10
Operating System	Android TV
Processor	Cortex-A55 Quad-Core (as per A+ content)
Connectivity	Wi-Fi, Bluetooth, Ethernet, HDMI (multiple ports), USB (multiple ports), AV Input

Feature	Detail
Special Features	Built-In Speaker, Eye Comfort Mode, Flat Screen, Game Mode, Google Cast
Audio	Dual 8W Box Speakers, Dolby Audio (as per A+ content)
Product Dimensions (with stand)	38.2"W x 23.0"H x 6.7"D
Product Dimensions (without stand)	38.2"W x 22.1"H x 3.0"D
Item Weight	13.2 Pounds
Color	Black
Power Consumption	55 watts

8. Warranty and Support

FPD is committed to providing excellent customer service and support for your product.

8.1 Manufacturer's Warranty

Your FPD Smart TV comes with an industry-leading 1-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

- **Coverage:** Parts and labor for manufacturing defects.
- **Exclusions:** Damage due to misuse, accidents, unauthorized repairs, or normal wear and tear.
- **Proof of Purchase:** Retain your purchase receipt for warranty claims.

8.2 Extended Protection Plans

Extended protection plans may be available for purchase to provide additional coverage beyond the standard manufacturer's warranty. Please check with your retailer for options such as 2-Year or 3-Year Protection Plans.

8.3 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact FPD customer service. Our team is ready to assist you.

- **Support Availability:** 24/7 technical assistance.
- **Response Time:** We aim to reply within 24 hours.
- **Contact Information:** Refer to the contact details provided on the FPD official website or your purchase documentation.



Image: Illustration of customer service representatives, symbolizing FPD's commitment to support.

© 2025 FPD. All rights reserved.

FPD Smart Home

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question