PRETTYCARELIFE P4

PRETTYCARELIFE Cordless Stick Vacuum Cleaner User Manual

Model: P4

Introduction

Thank you for choosing the PRETTYCARELIFE Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance or the battery pack.

Package Contents

Please check the package contents upon unboxing to ensure all components are present and undamaged:



Image: The PRETTYCARELIFE Cordless Stick Vacuum Cleaner shown with its various components and attachments, including the main engine, adjustable metal tube, brush head, and smaller tools.

1. Crevice Nozzle
2. 2-in-1 Brush

3. Self-Standing Brush Head
4. HEPA Filter x 2
5. Power Adapter
6. Wall Bracket
7. Adjustable Metal Tube
8. Main Engine
9. Instruction Manual



Image: A detailed diagram illustrating each component included in the PRETTYCARELIFE P4 package, numbered for easy identification.

Setup and Assembly

Follow these steps to assemble your vacuum cleaner:

1. **Charging the Battery:** Before first use, fully charge the vacuum cleaner's battery. Connect the power adapter to the charging port on the main engine and plug it into a wall outlet. The LED display will indicate charging status. A full charge provides up to 40 minutes of running time.
2. **Attaching the Adjustable Metal Tube:** Insert the adjustable metal tube into the main engine until it clicks securely into place.
3. **Attaching the Brush Head:** Connect the self-standing brush head to the other end of the adjustable metal tube. Ensure it clicks firmly.
4. **Attaching Accessories:** For specific cleaning tasks, you can attach the crevice nozzle or 2-in-1 brush directly to the main engine or the end of the metal tube.
5. **Wall Mounting (Optional):** Use the provided wall bracket to store your vacuum cleaner conveniently. Choose a suitable location near a power outlet for easy charging.



Image: The vacuum cleaner displayed in its full stick configuration, as well as handheld modes with different attachments, demonstrating assembly versatility.

Operating Instructions

Powering On/Off and Suction Modes

- To turn on the vacuum, press the power button on the main engine.
- The vacuum features 2 speed modes. Press the mode button to switch between standard and max suction power.
- To turn off the vacuum, press the power button again.

LED Display

The integrated LED display provides real-time information:

- **Battery Level:** Indicates the remaining battery percentage.
- **Suction Mode:** Shows the current power setting (standard or max).



Image: A detailed view of the vacuum's main engine, highlighting the LED display that shows battery percentage and indicates continuous power supply from the high-capacity battery.

Cleaning Different Surfaces

The PRETTYCARELIFE vacuum is designed for versatile cleaning:

- **Hard Floors:** Use the standard suction mode for daily cleaning of hard floors like wood, tile, and laminate. The soft roller brush is gentle on surfaces.
- **Carpets and Rugs:** Switch to max suction mode for deeper cleaning on carpets and rugs to effectively pick up embedded dirt and debris.

- **Above-Floor Cleaning:** Detach the main engine and attach the crevice nozzle or 2-in-1 brush for cleaning furniture, curtains, car interiors, and tight spaces.



Image: The vacuum cleaner in action, demonstrating its effectiveness on both carpeted and hard floor surfaces, indicating deep cleaning capabilities.



Image: A user demonstrating the lightweight and multi-functional aspects of the vacuum, using it to clean high curtains and as a handheld unit for furniture.

Self-Standing Feature

The vacuum is designed with a self-standing feature, allowing you to pause cleaning and place the vacuum upright anywhere without needing to lean it against a wall or furniture.

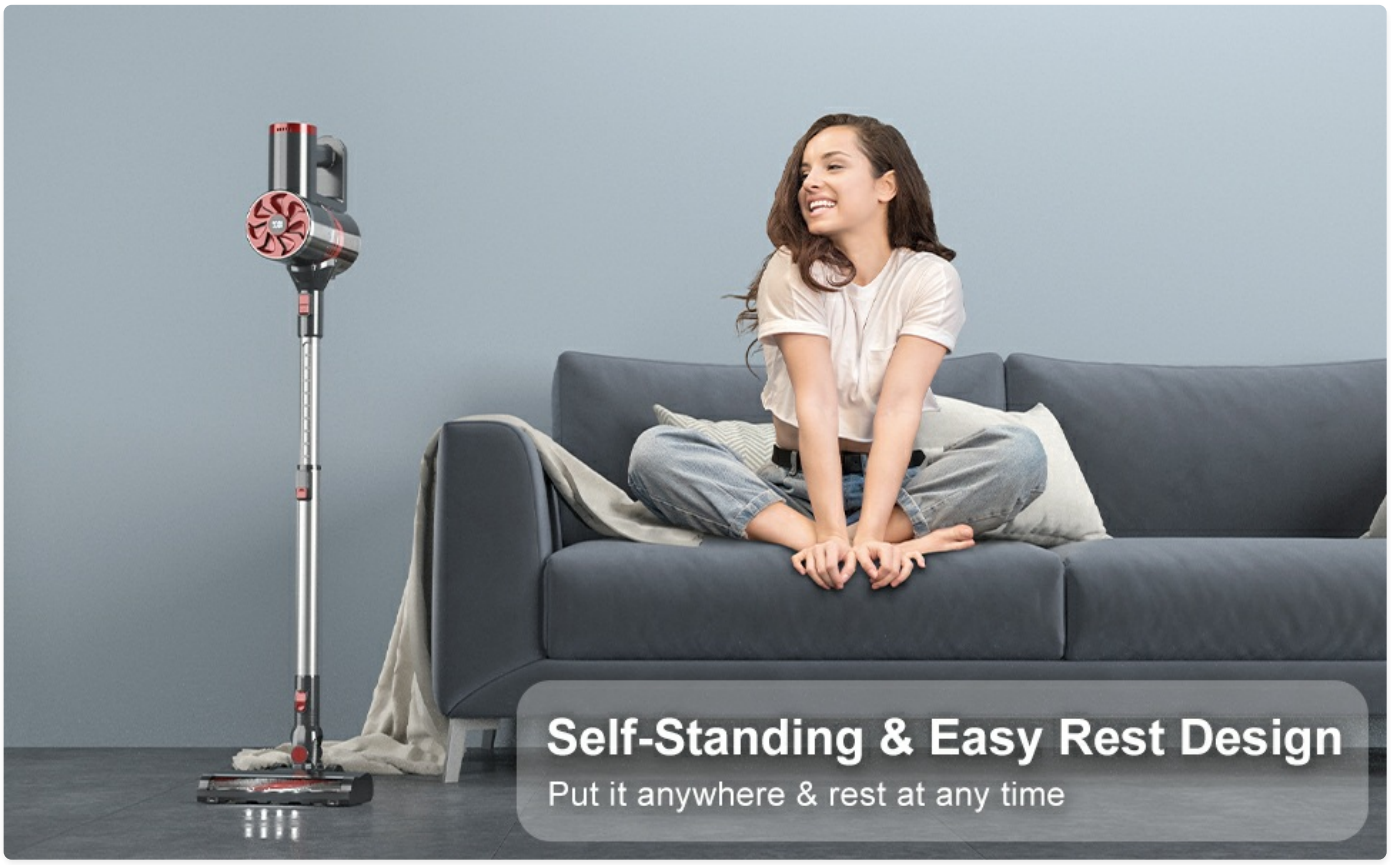


Image: The PRETTYCARELIFE vacuum standing upright on its own, demonstrating its self-standing and easy rest design, allowing it to be placed anywhere.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup

- It is recommended to empty the dust cup after each use or when the MAX fill line is reached.
- Press the dust cup release button to detach it from the main engine.
- Open the bottom lid of the dust cup to dispose of collected debris into a trash bin.
- Close the lid and reattach the dust cup to the main engine until it clicks.

Cleaning Filters

The vacuum features a multi-stage filtration system, including a HEPA filter. Regularly clean the filters to maintain suction power and prevent blockages.

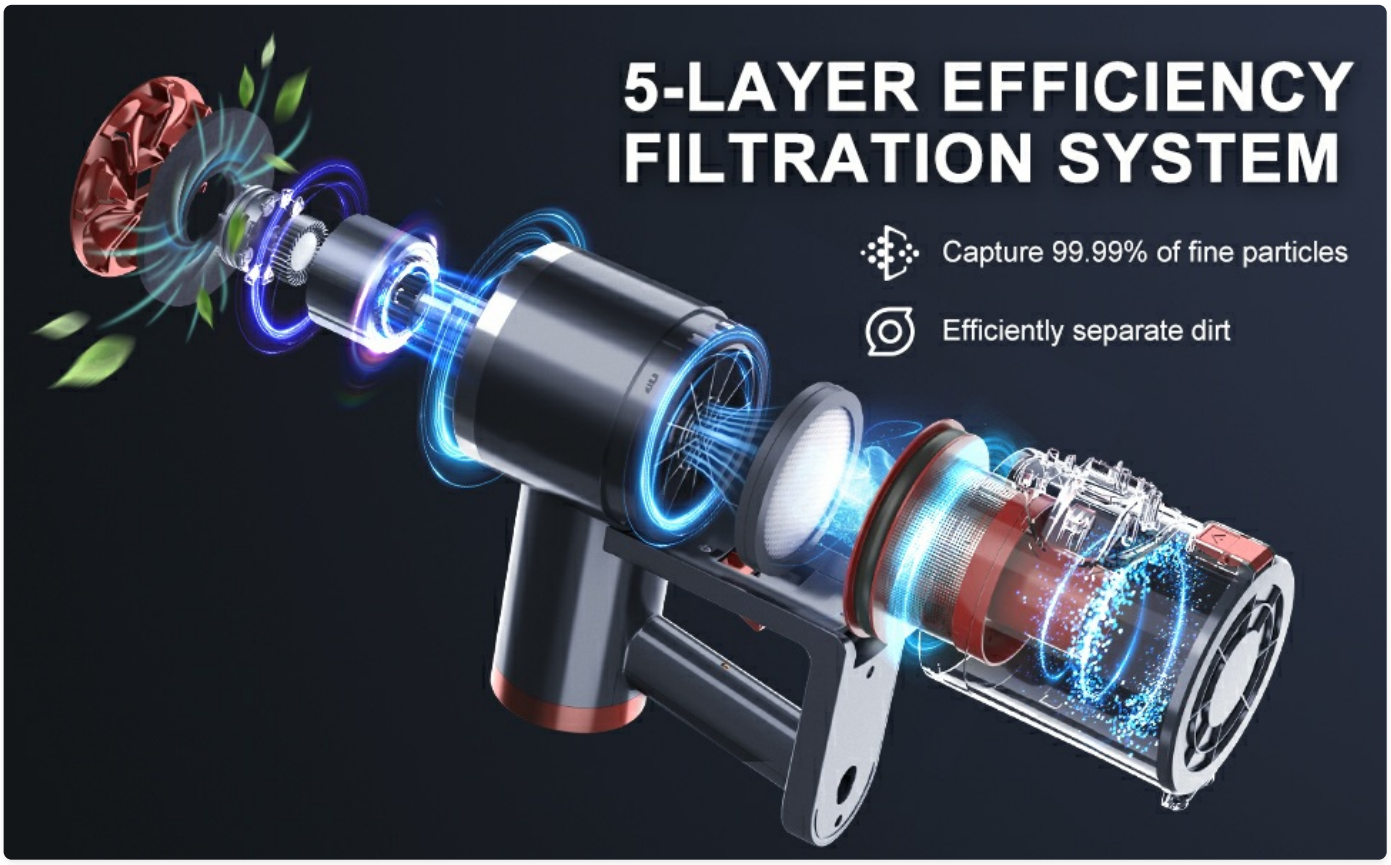


Image: An exploded view diagram illustrating the 5-layer efficiency filtration system, including the high-density sponge, HEPA filter, metal mesh filtration, and strong cyclone filtration, designed to capture 99.99% of fine particles.

1. **Disassembly:** Twist and pull to remove the dust cup and then carefully remove the internal filter components (metal mesh, HEPA filter, and sponge).
2. **Washing:** Rinse the metal mesh filter, HEPA filter, and sponge under running water until clean. Do not use detergents.
3. **Drying:** Allow all filter components to air dry completely for at least 24 hours before reassembling. Ensure they are completely dry to prevent mold or damage to the motor.
4. **Reassembly:** Once dry, reassemble the filters in reverse order and reattach the dust cup to the main engine.

Note: Filters and sponges can be washed. Regularly clean the filter/sponge to prevent the vacuum cleaners from weakening and blocking.

Cleaning the Brush Roll

- Periodically check the brush roll for tangled hair or debris.
- To access the brush roll, unlock the side latch on the brush head.
- Remove any tangled hair or fibers using scissors or the provided cleaning tool.
- Reinsert the brush roll and secure the latch.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
Low suction power.	Dust cup is full. Filters are clogged. Brush roll is tangled. Nozzle or tube is blocked.	Empty the dust cup. Clean and dry the filters. Remove tangled hair from brush roll. Check and clear any blockages in the nozzle or tube.
Brush roll not spinning.	Brush roll is tangled or jammed. Brush head is not properly attached.	Clean the brush roll. Ensure the brush head is securely attached.
Vacuum stops suddenly during operation.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. Check for blockages.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Feature	Detail
Brand	PRETTYCARELIFE
Model	P4
Suction Power	Up to 40Kpa
Running Time	Up to 40 minutes
Battery Capacity	2200 mAh (6-cell battery)
Dust Cup Capacity	1.2 liters
Noise Level	63dB
Filtration System	Fully sealed cyclone filtration with HEPA filter
Weight	Approximately 1.5 kg (3.3 lbs)
Dimensions	25.15 x 20.07 x 107.95 cm
Voltage	120 Volts

Warranty and Support

PRETTYCARELIFE products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official PRETTYCARELIFE website. Please retain your proof of purchase for warranty claims.
For assistance, you may also contact the seller through the platform where the purchase was made.

© 2025 PRETTYCARELIFE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question