Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Skyworth 40E5500A

Skyworth 40 Inch E5500A Series Smart TV User Manual

Model: 40E5500A

1. Introduction

This manual provides essential information for the setup, operation, and maintenance of your Skyworth 40 Inch E5500A Series 1080P Full HD Smart TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.

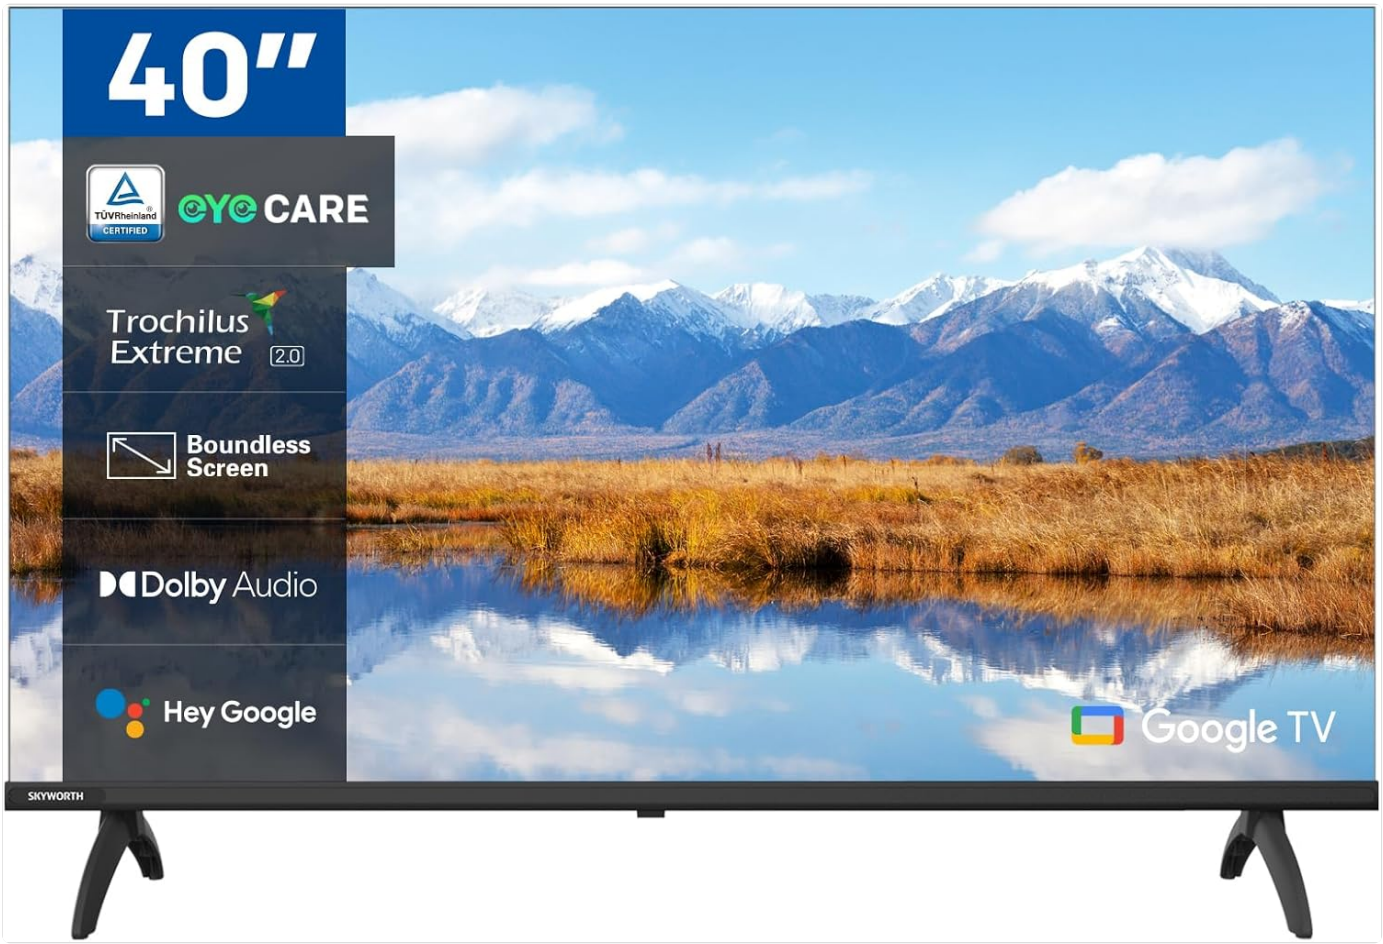


Figure 1: Front view of the Skyworth 40 Inch E5500A Series Smart TV.

2. Setup

2.1 Unpacking

Carefully remove the television and all accessories from the packaging. Ensure all components listed below are present:

- Skyworth 40 Inch E5500A Series Smart TV
- Remote Control
- Power Cable
- TV Stand (2 pieces)
- Screws for Stand Assembly
- User Manual (this document)

2.2 Stand Assembly

To attach the stand to your television:

1. Place the TV face down on a soft, flat surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly but do not overtighten.





Width x Depth x Height with base
89.2 x 21.4 x 56.5 cm (35.1 x 8.42 x 22.2 in)
Width x Depth x Height without base
89.2 x 7.4 x 51.1 cm (35.1 x 2.9 x 20.1 in)
Weight with base / without base
4.8 / 4.7 kg

Figure 2: Dimensions and input/output ports of the Skyworth E5500A Series TV. This image illustrates the physical dimensions of the television with and without its stand, and details the available input ports including HDMI, USB, Digital Audio Out, LAN, AV, ATSC, and Headphone jack.

2.3 Connecting Power and Devices

Connect the power cable to the TV's power input and then to a wall outlet. Connect your external devices (e.g., cable box, gaming console, Blu-ray player) to the appropriate input ports (HDMI, USB, Composite Video) on the TV. Refer to Figure 2 for port locations.

3. Operating Instructions

3.1 Initial Power On and Setup Wizard

After connecting the power, press the power button on the remote control or the TV. The TV will guide you through an initial setup wizard, including language selection, network connection (Wi-Fi or Ethernet), and Google TV account setup.

3.2 Remote Control Functions

The included remote control allows you to navigate the Google TV interface, adjust volume, change channels, and access smart features. The "Find-My Remote" feature allows you to locate a misplaced remote by pressing a button on the TV (if available) or through a voice command to a paired Google Assistant device.

3.3 Smart Features and Picture/Sound Enhancements

Your Skyworth E5500A Series TV comes equipped with several advanced features:

- **Google TV:** Access a vast library of movies, shows, and apps.
- **HDR10 & Trochilus Extreme 2.0:** Experience enhanced contrast, brightness, and overall picture quality for more realistic visuals.
- **Dolby Audio & DTS Studio Sound:** Enjoy immersive sound with rich depth and clarity.
- **Eye Care Technology:** Features like Low Blue Light and Flicker Free technology reduce eye strain during extended viewing.



Figure 3: Visual comparison demonstrating the enhanced imagery and contrast provided by Trochilus Extreme 2.0 and HDR10 technologies compared to a normal display.



Figure 4: Illustration of Dolby Audio enhancing the sound experience, creating a cinematic sound environment.

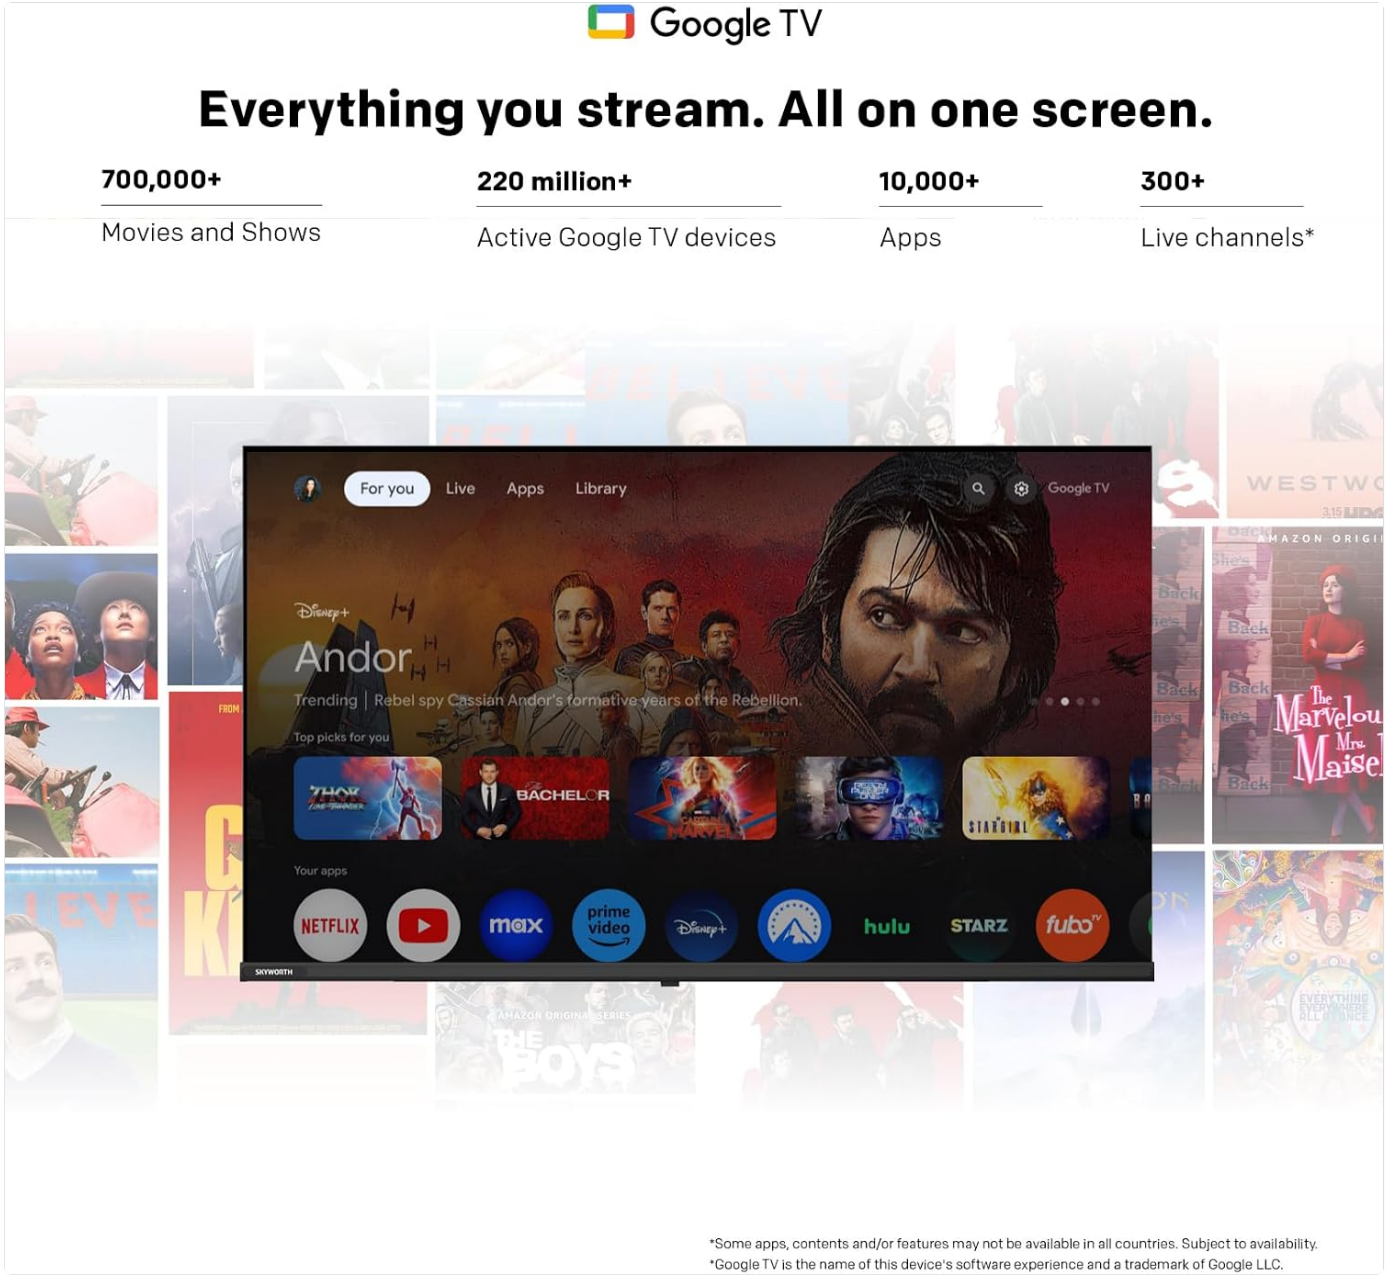


Figure 5: The Google TV interface, showcasing the wide array of streaming services and applications available on the platform.



Figure 6: A visual demonstration of the Flicker Free technology, highlighting how it eliminates screen flickering for a more comfortable viewing experience.

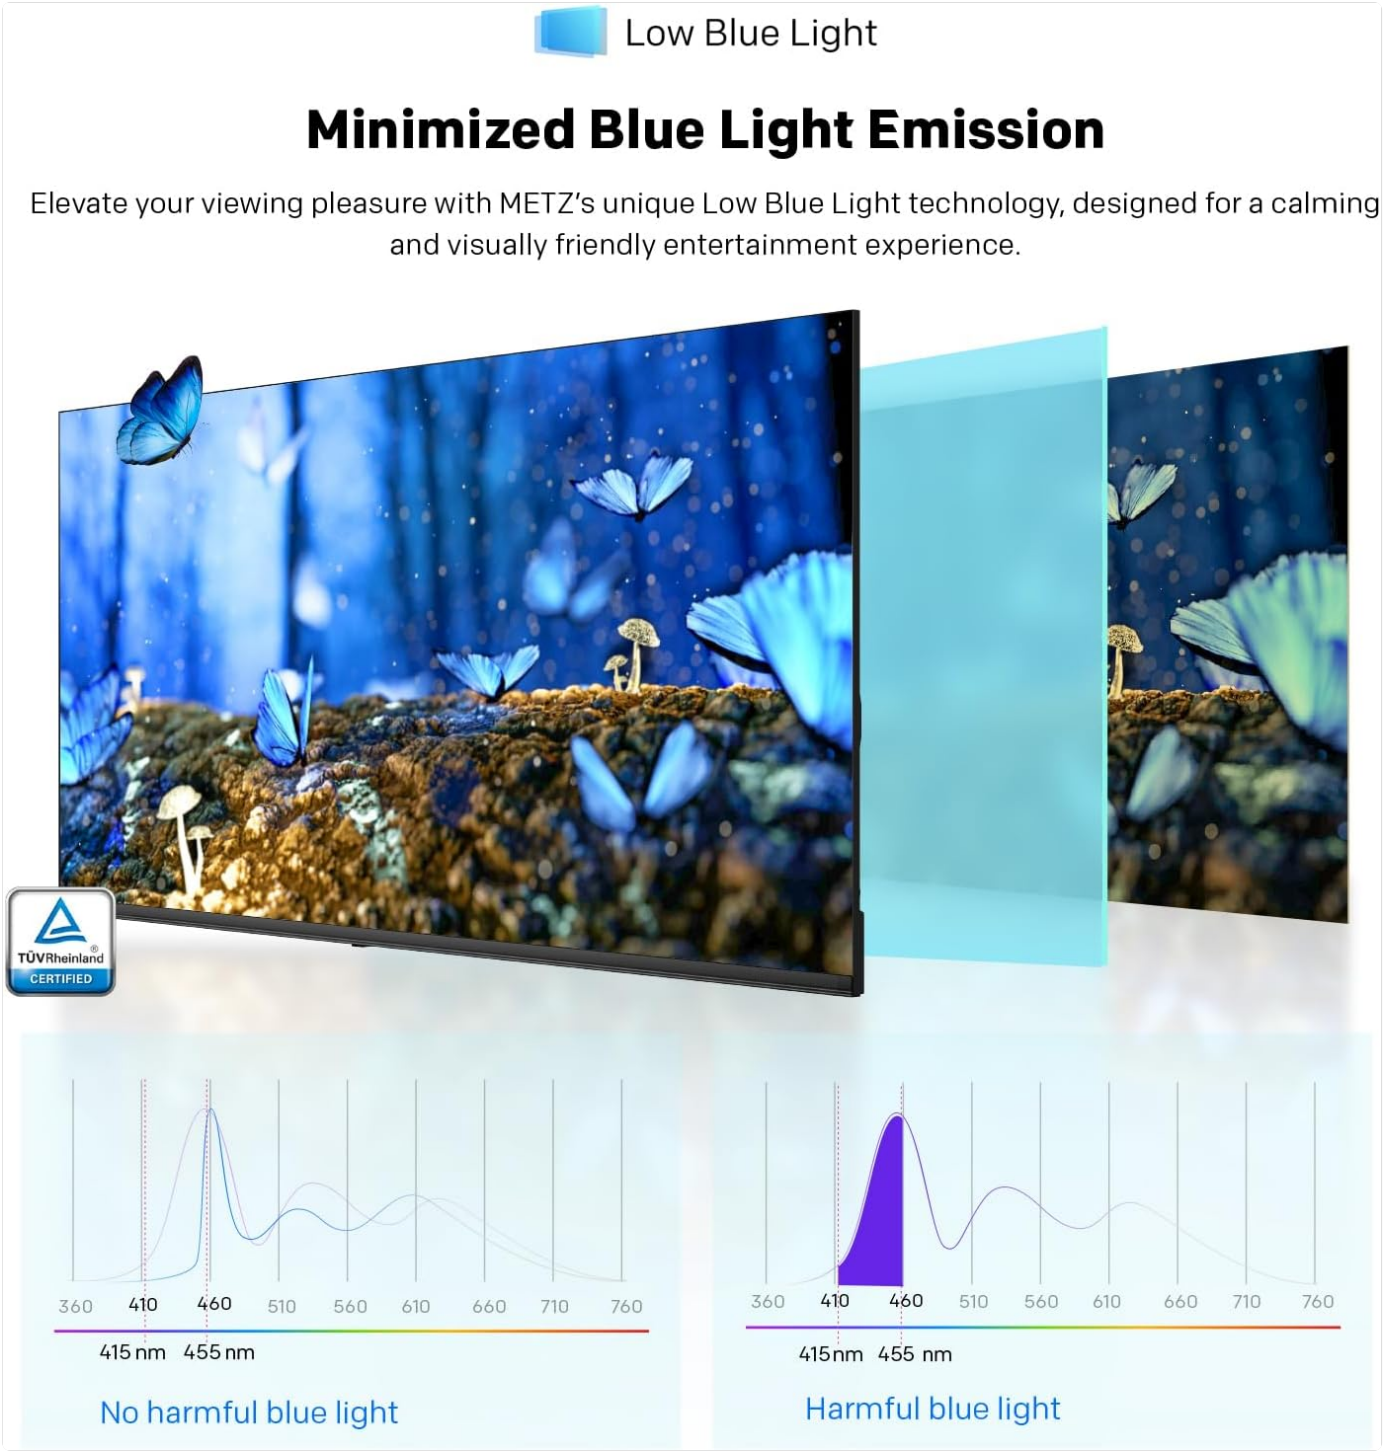


Figure 7: An illustration explaining the Low Blue Light emission technology, designed to reduce eye strain by minimizing harmful blue light.



Figure 8: Overview of the Health Platform features, including Night Mode, Eye Protection, and Auto Volume Control, designed to enhance viewing comfort.

4. Maintenance

4.1 Cleaning the Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of screen cleaner specifically designed for electronics. Do not spray cleaner directly onto the screen.

4.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents that may damage the finish.

5. Troubleshooting

Before contacting customer support, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
No Power	Power cable not connected; outlet not working.	Ensure power cable is securely connected. Test the outlet with another device.
No Picture, But Sound is Present	Incorrect input source selected; external device issue.	Press the "Input" button on the remote to select the correct source. Check connections to external devices.
No Sound, But Picture is Present	Volume muted or too low; audio settings incorrect.	Unmute the TV or increase volume. Check audio output settings in the TV menu.
Remote Control Not Working	Batteries are dead or incorrectly inserted; obstruction.	Replace batteries. Ensure no obstructions between remote and TV sensor.
Wi-Fi Connection Issues	Router issues; incorrect password.	Restart your router. Re-enter Wi-Fi password. Ensure TV is within router range.

6. Specifications

Feature	Detail
Model	40E5500A
Screen Size	40.0 inches
Display Technology	LED
Resolution	1920 x 1080 (Full HD 1080P)
Refresh Rate	60 Hz
Operating System	Google TV
Special Features	HDR10 & Trochilus Extreme 2.0, Dolby Audio & DTS Studio Sound, Find-My Remote, Eye Care (Low Blue Light, Flicker Free)
Connectivity	HDMI, USB, Composite Video, Bluetooth
Audio Output	2.1 Speaker Surround Sound Channel Configuration
Product Dimensions (with stand)	89.2 cm (W) x 21.4 cm (D) x 56.5 cm (H)
Weight (with stand)	8.86 kg

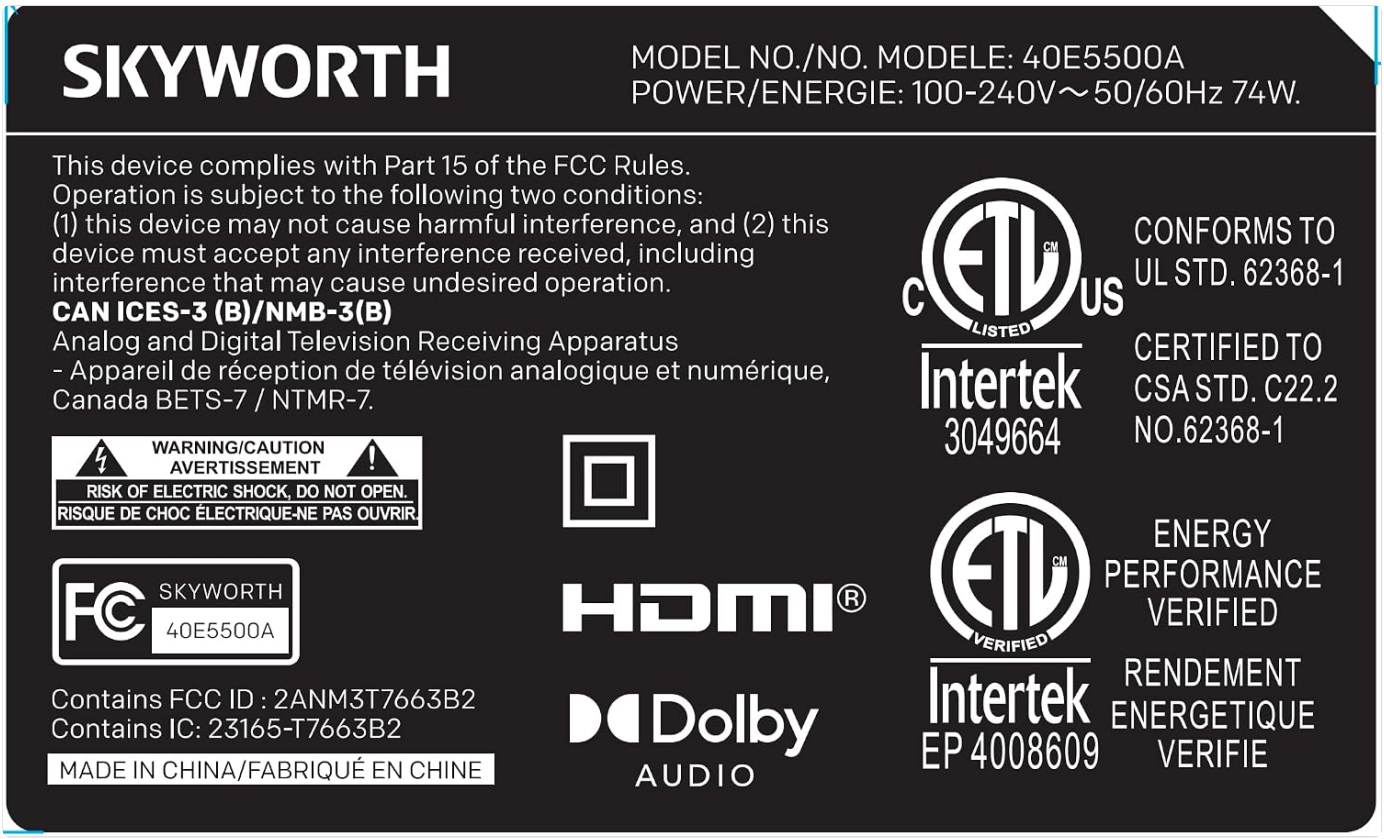


Figure 9: Product label displaying model number (40E5500A), power requirements, FCC compliance, and various certifications including ETL, Intertek, HDMI, and Dolby Audio.

7. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Skyworth website. You may also contact Skyworth customer service directly for assistance with product issues or inquiries.

Online Resources: www.skyworth.net

© 2024 Skyworth. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DKFKSN67

More documents and user manuals: **https://manuals.plus/**