Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LIKIMIO HK-DCD-01

LIKIMIO Dresser with Charging Station Model HK-DCD-01 User Manual

Comprehensive instructions for assembly, operation, and maintenance.

1. Introduction

Thank you for choosing the LIKIMIO Dresser with Charging Station, Model HK-DCD-01. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new dresser. Please read these instructions carefully before beginning assembly and retain them for future reference.



Figure 1.1: The LIKIMIO 6-Drawer Dresser in Charcoal Grey, featuring a charging station and removable storage bag.

2. Safety Information

To ensure safe use of this product, please adhere to the following guidelines:

- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are correctly installed and fasteners are tightened securely before use.
- **Anti-Tipping Device:** An anti-tipping device is included to prevent accidental tipping. It is crucial to install this device as instructed to secure the dresser to a wall, especially in households with children or pets.
- **Weight Capacity:** Do not overload drawers or the top surface. Distribute weight evenly. Refer to the specifications section for maximum weight capacities.
- **Charging Station:** Only use the integrated charging station for compatible electronic devices. Do not exceed the specified electrical ratings (110V/12A AC, 5V/2A USB/Type-C). Avoid exposing the charging station to liquids.
- **Movement:** When moving the dresser, empty all drawers and lift the unit. Do not drag the dresser, as this may

damage the legs or structure.

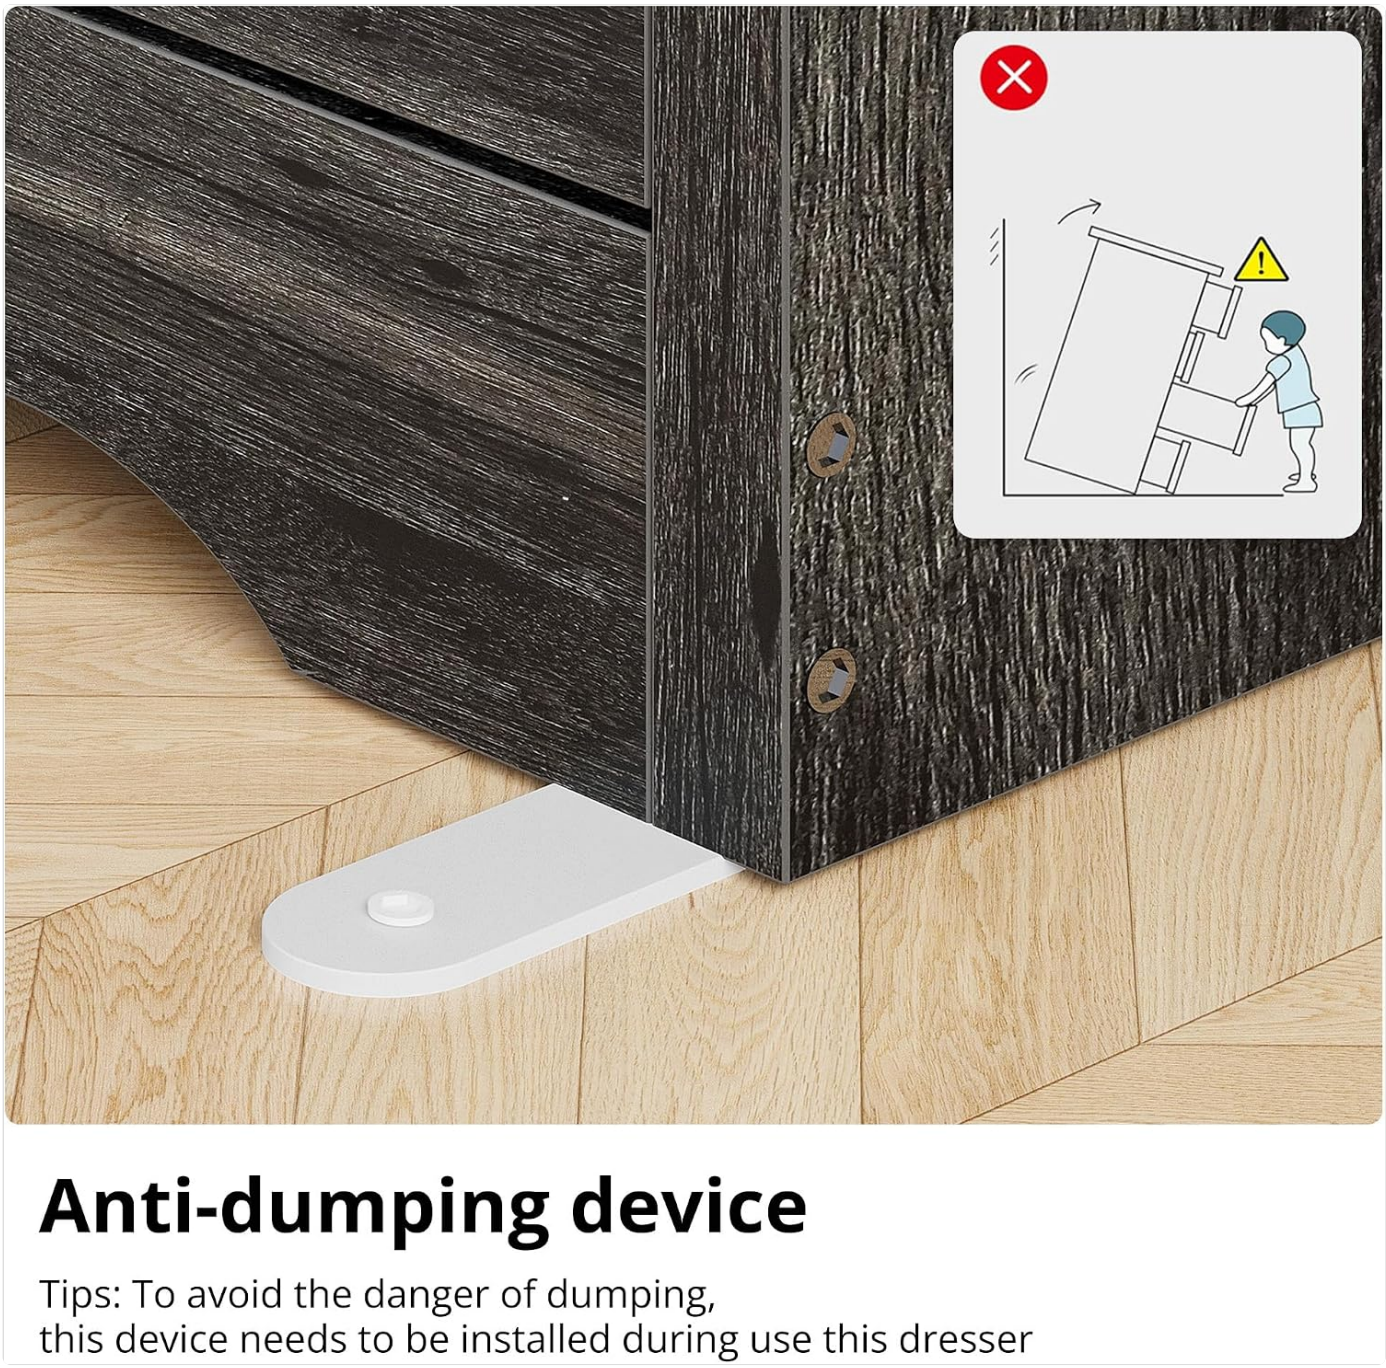


Figure 2.1: Illustration of the anti-tipping device installation. This device must be installed to prevent accidental tipping.

3. Package Contents

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact LIKIMIO customer support.

- Dresser panels (top, bottom, sides, back)
- Drawer panels and hardware (6 sets)
- Drawer slides (12 sets)
- Metal handles (6 pieces)
- Integrated charging station with power cord
- Removable storage bag
- Anti-tipping device and hardware

- Assembly hardware (screws, dowels, cam locks, etc.)
- Assembly instructions manual

4. Assembly Instructions

Assembly is required for this dresser. Follow the detailed, step-by-step instructions provided in the separate assembly guide included in your package. All parts are numbered for easy identification.

1. **Preparation:** Clear a spacious area and lay out all components on a soft, clean surface to prevent damage.
2. **Follow Guide:** Refer to the numbered diagrams and instructions in the dedicated assembly manual.
3. **Secure Fasteners:** Ensure all screws, cam locks, and other fasteners are tightened securely. Do not overtighten.
4. **Install Anti-Tipping Device:** This is a critical safety step. Attach the anti-tipping device to the dresser and secure it to a wall stud using the provided hardware.

Estimated assembly time: Approximately 1-2 hours for two adults.

5. Product Features and Operation

5.1 Six Large Capacity Drawers

The dresser features six spacious drawers designed for organized storage. Each drawer operates on smooth slides for easy opening and closing.



Figure 5.1: The dresser with multiple drawers open, illustrating the internal storage space for various items.



Figure 5.2: An example of drawer capacity, showing approximate number of shirts (25-30) and pants (14-17) that can be stored. Individual drawer dimensions are approximately 25.8"W x 11.2"D x 4.7"H.

5.2 Integrated Charging Station

A built-in charging station is located on the top surface of the dresser, providing convenient access to power for your electronic devices. It includes:

- 2 x 110V/12A AC Outlets
- 1 x 5V/2A Type-C Port
- 1 x 5V/2A USB Port

The charging station is equipped with a 4.92-foot power cord. Plug the cord into a standard wall outlet to activate the charging features.



Figure 5.3: Detailed view of the charging station, highlighting the AC outlets, USB, and Type-C ports.

5.3 Removable Storage Bag

A removable storage bag is attached to the side of the dresser, offering additional convenient storage for items such as books, magazines, or remote controls.



Figure 5.4: The removable storage bag, shown holding books and magazines, providing accessible side storage.

5.4 Versatile Placement and TV Stand Functionality

This dresser is suitable for various rooms including bedrooms, living rooms, hallways, and entryways. Its robust top surface can accommodate televisions up to 60 inches, functioning as a TV stand.

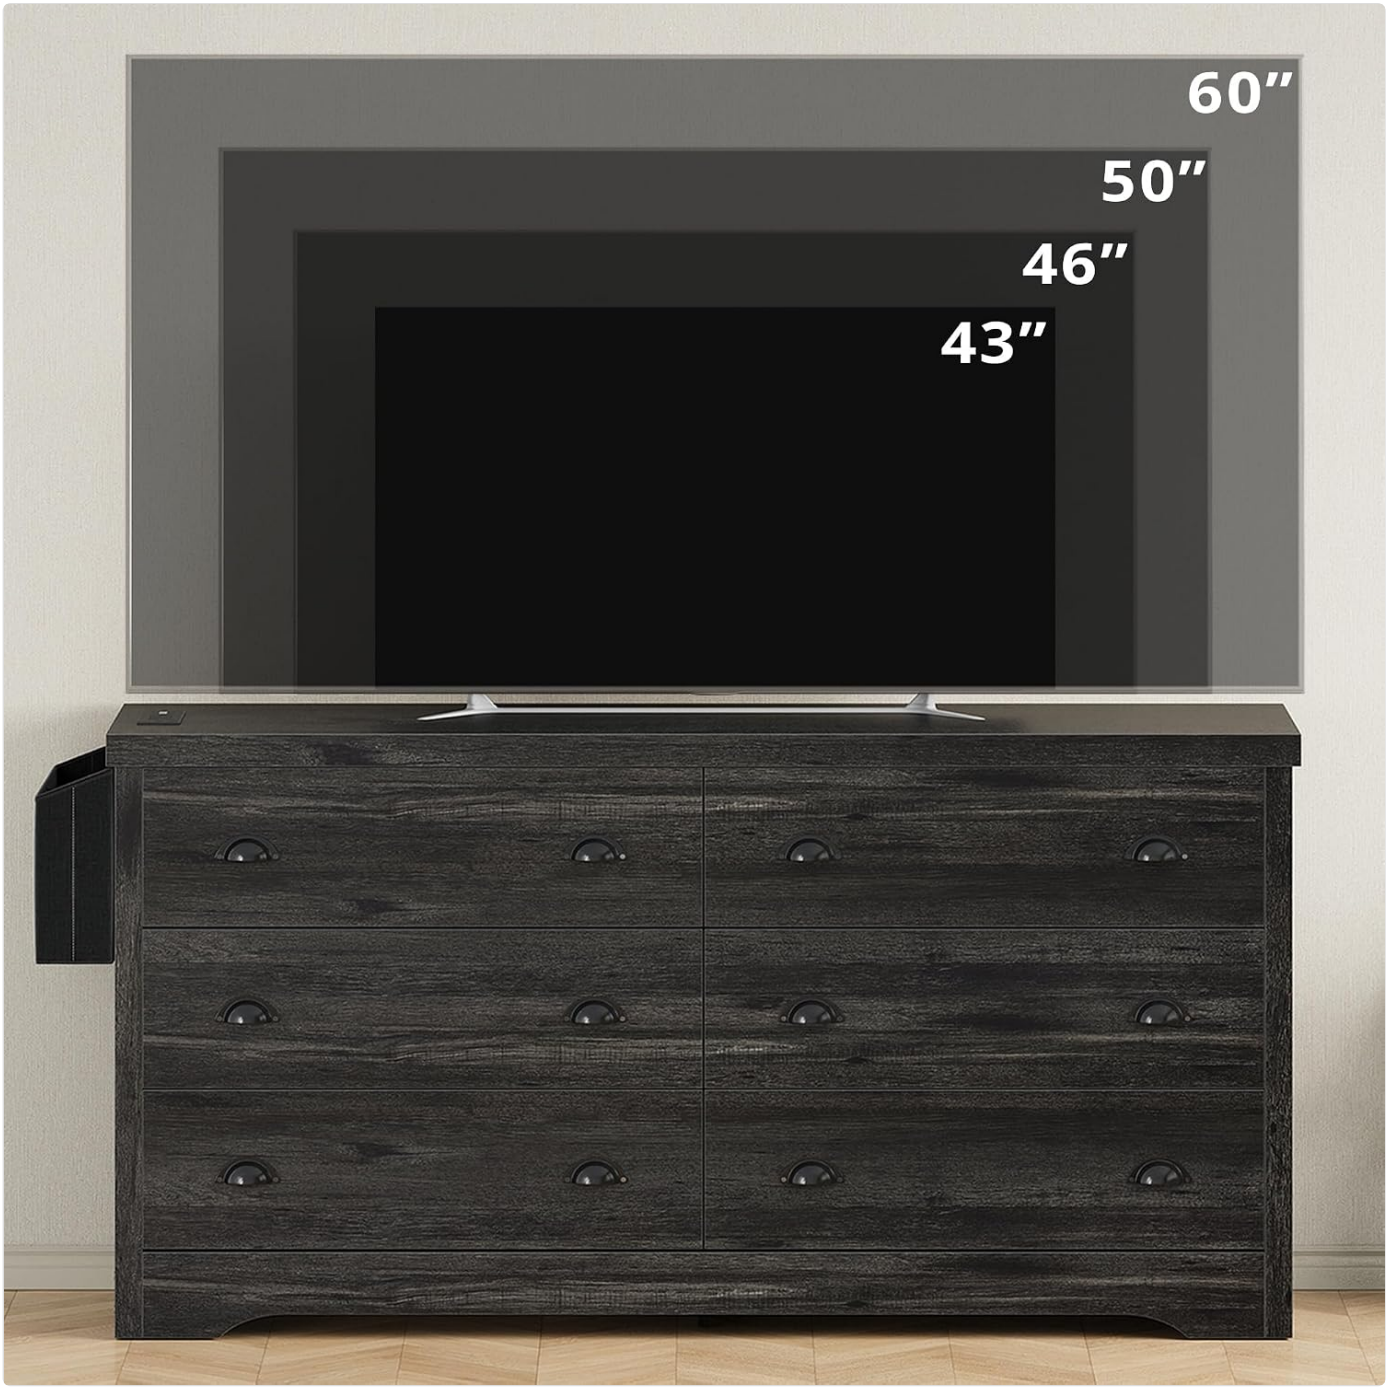


Figure 5.5: The dresser supporting a television, demonstrating its use as a TV stand and its compatibility with TV sizes up to 60 inches.

6. Maintenance

Proper care will extend the life and appearance of your LIKIMIO dresser:

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.
- **Charging Station:** Keep the charging station free of dust and debris. Do not attempt to disassemble or repair the electrical components yourself.

7. Troubleshooting

If you encounter issues with your dresser, consider the following common solutions:

- **Wobbly Dresser:** Ensure the dresser is placed on a level surface. Check all assembly hardware and tighten any loose screws. Verify the anti-tipping device is securely installed.
- **Drawers Not Sliding Smoothly:** Check that drawer slides are correctly aligned and free of obstructions. Ensure drawers are not overloaded.
- **Charging Station Not Working:** Verify the power cord is securely plugged into both the dresser and a functional wall outlet. Check if the wall outlet is receiving power. Ensure devices are properly connected to the USB/Type-C ports or AC outlets.
- **Missing Parts:** If parts were missing during initial unboxing, refer to the contact information for LIKIMIO customer support to request replacements.

8. Specifications

Feature	Detail
Brand	LIKIMIO
Model Name	HK-DCD-01
Product Dimensions	15.8"D x 59.1"W x 31.5"H
Color	Charcoal Grey
Room Type	Bedroom, Living Room, Hallway, Entryway
Material	MDF Board
Item Weight	97.5 Pounds
Assembly Required	Yes
Charging Station	2 x 110V/12A AC Outlets, 1 x 5V/2A Type-C Port, 1 x 5V/2A USB Port
Power Cord Length	4.92 Feet
UPC	788046970500

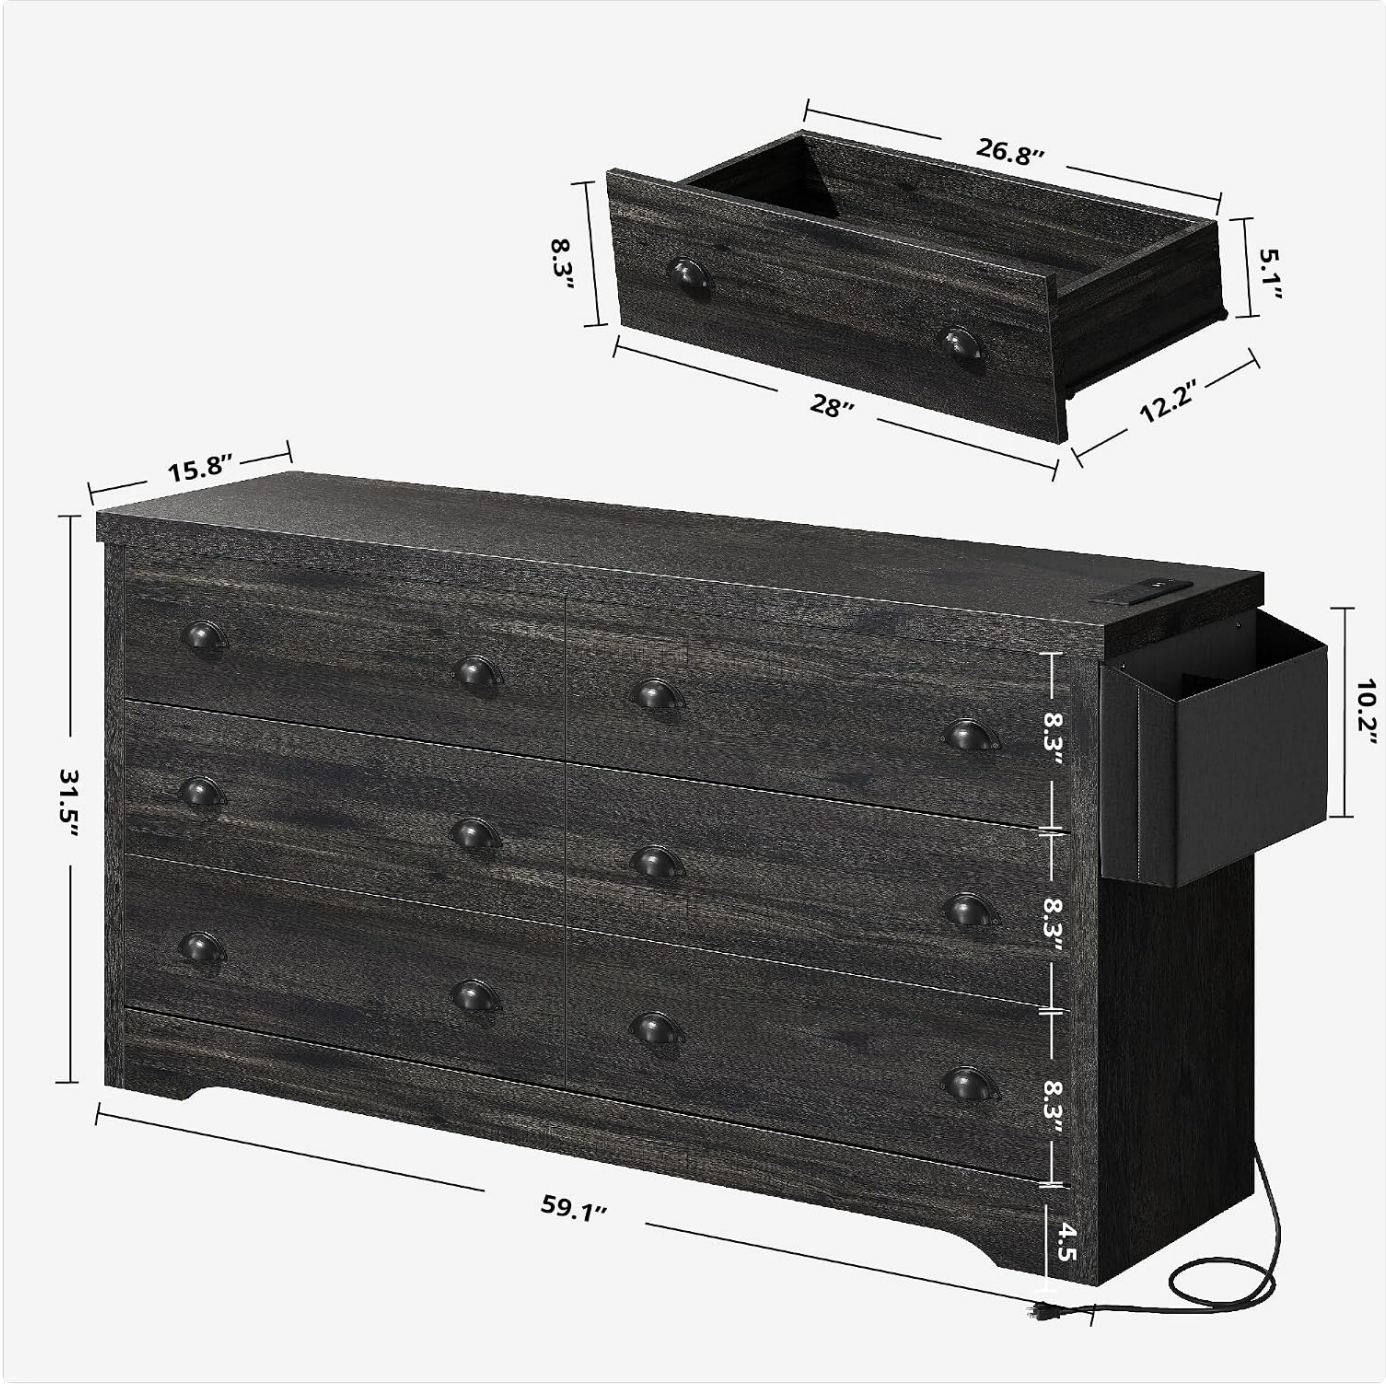


Figure 8.1: Detailed dimensions of the LIKIMIO dresser, including overall size and individual drawer measurements.

9. Warranty and Support

LIKIMIO stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official LIKIMIO website. If you require assistance with assembly, missing parts, or have any questions regarding your dresser, please contact LIKIMIO customer support directly.

Customer Support: Refer to the contact information provided in your product packaging or on the LIKIMIO official website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DKSN3RGF

More documents and user manuals: **https://manuals.plus/**