Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VOGOE HR110

VOGOE Epilator HR110 User Manual

Model: HR110

1. Product Overview

The VOGOE Epilator HR110 is a cordless electric hair removal device designed for women. It features 21 hypoallergenic tweezers, an integrated LED light for enhanced visibility, and two-speed settings for customized use on different body areas. The device is USB rechargeable, offering up to 4 hours of cordless operation on a 2.5-hour charge.



Image: The VOGOE Epilator HR110, a compact purple and white device.

2. Package Contents

Verify that all items are present in the package:

- 1 x VOGOE HR110 device body
- 1 x Epilator head
- 1 x USB charging cable
- 1 x Cleansing brush
- 1 x User manual

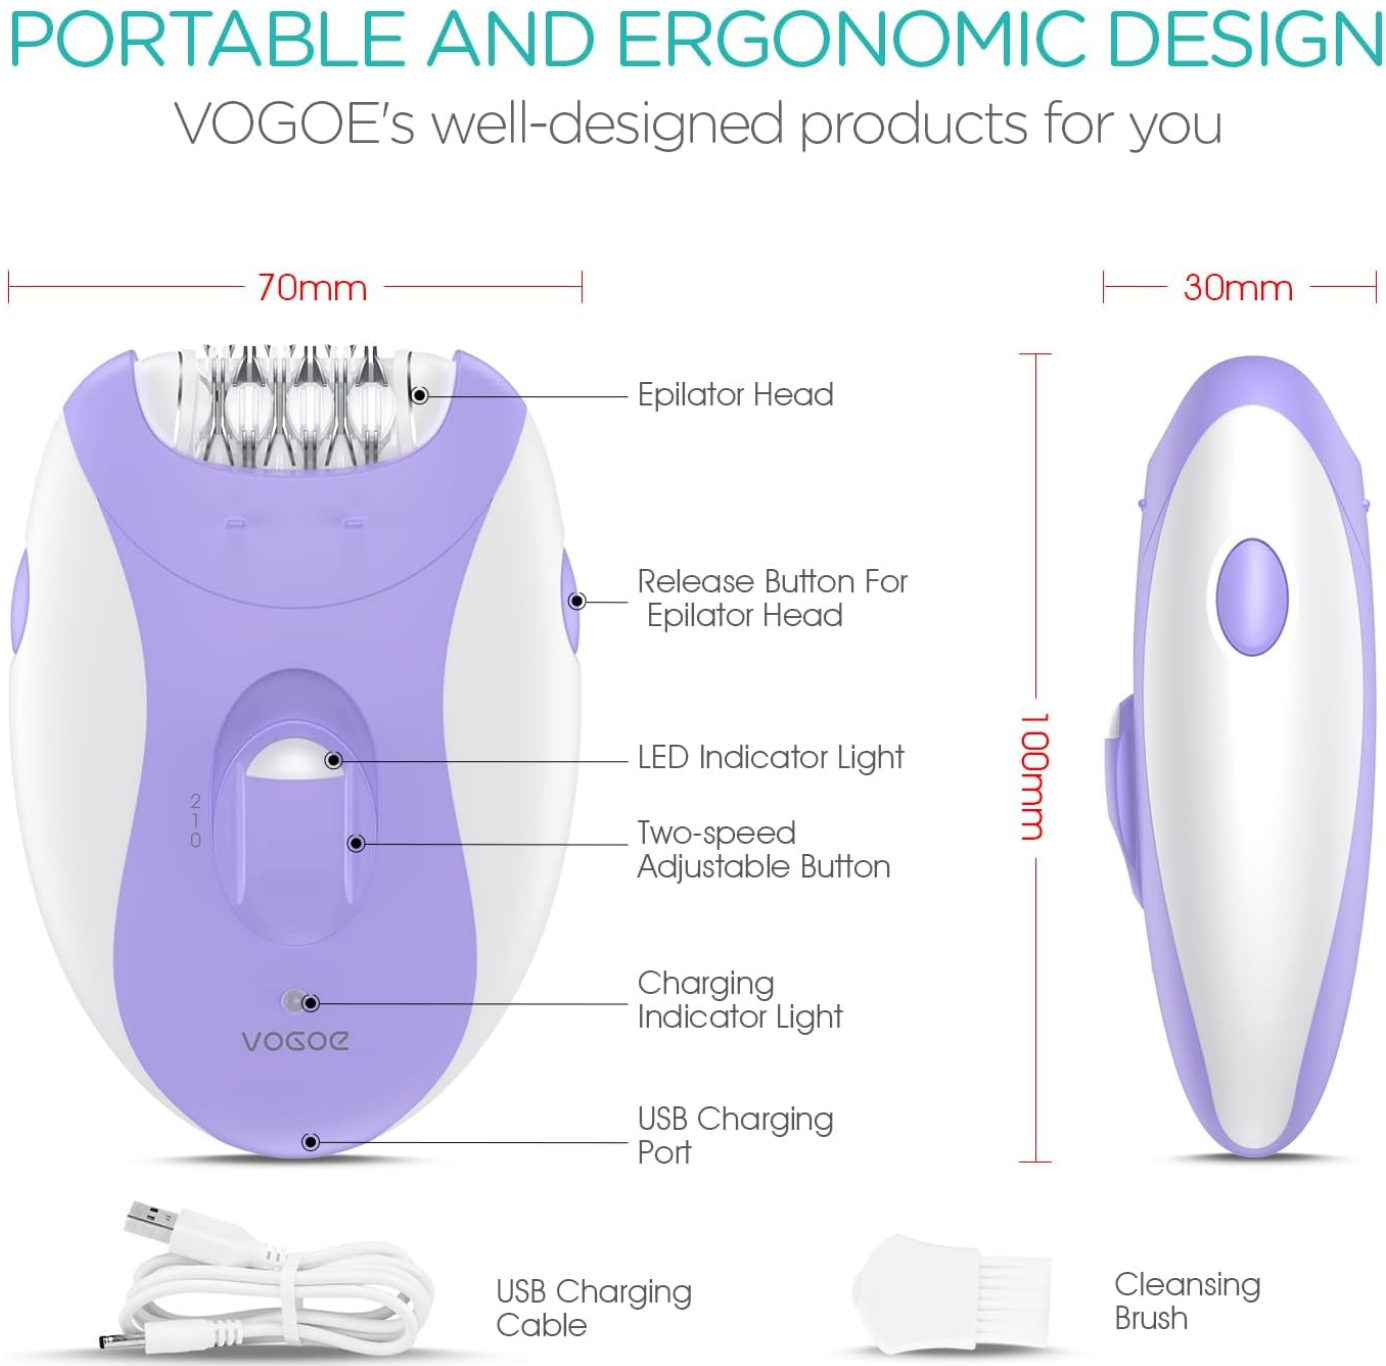


Image: A diagram illustrating the epilator head, release button, LED indicator light, two-speed adjustable button, charging indicator light, USB charging port, USB charging cable, and cleansing brush.

3. Setup

3.1 Charging the Device

Before first use, fully charge the epilator. Connect the provided USB charging cable to the device's USB charging port and a suitable USB power source. The charging indicator light will illuminate during charging. A full charge takes approximately 2.5 hours and provides up to 4 hours of cordless use.



Image: Close-up of the epilator showing the charging indicator light and USB charging port.

3.2 Attaching/Detaching the Epilator Head

To attach the epilator head, align it with the device body and press firmly until it clicks into place. To detach, press the release buttons on the sides of the device and gently pull the epilator head away from the body.



Image: A user demonstrating how to press the release buttons and pull off the epilator head for cleaning or replacement.

4. Operating Instructions

4.1 Preparation for Epilation

- Ensure your skin is clean and dry.
- For optimal results, hair length should be between 0.5mm and 3mm.
- Consider taking a warm shower or bath beforehand to soften hairs and open pores, which can reduce discomfort.

4.2 Powering On and Speed Selection

Slide the power switch to turn on the device. The integrated LED light will illuminate to enhance visibility. The HR110 offers two speed settings:

- **Speed 1 (Low):** Recommended for sensitive areas and finer hair, such as arms.
- **Speed 2 (High):** Recommended for larger areas and thicker hair, such as legs.



Image: Visual representation of the two-speed settings, indicating Speed 1 for arms and Speed 2 for legs.

4.3 Epilation Technique

Hold the epilator at a 90-degree angle to your skin, moving it slowly against the direction of hair growth. Apply light pressure. The 21 hypoallergenic tweezers will effectively remove hair from the root.

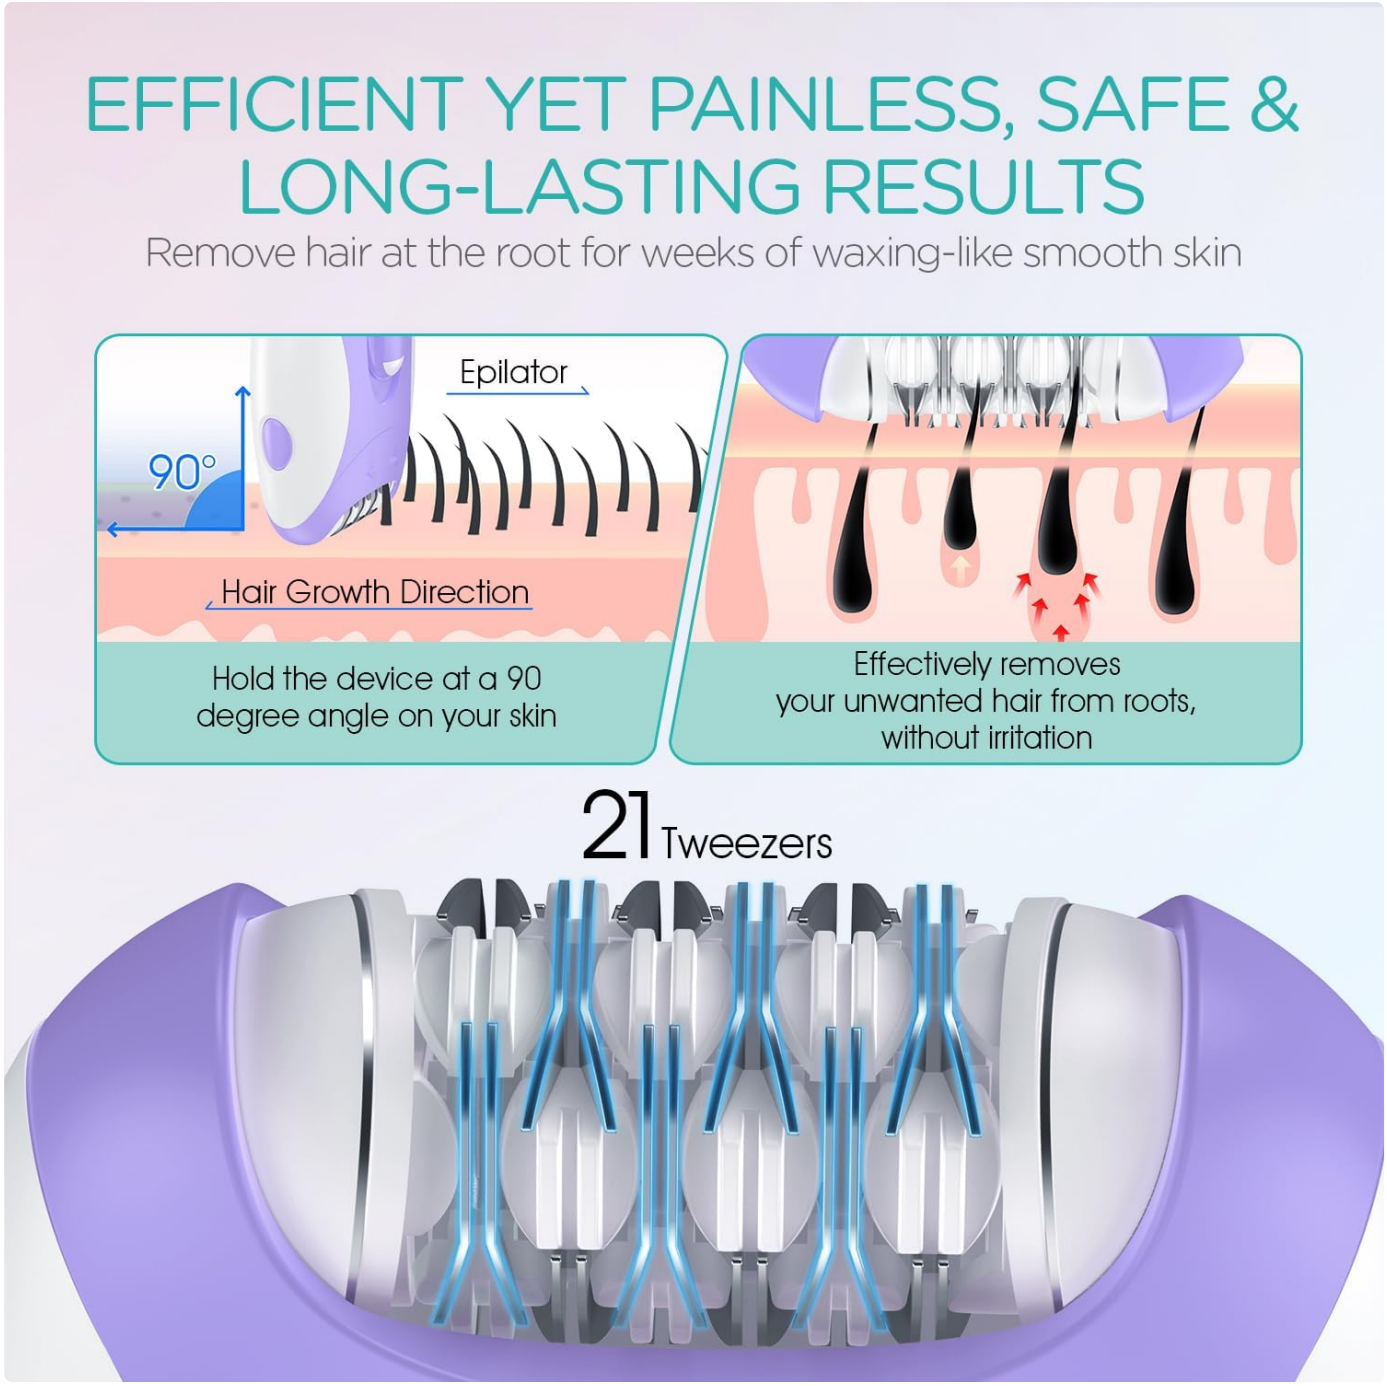


Image: Diagram showing the correct 90-degree angle for holding the epilator against the skin and how tweezers remove hair from the root.

4.4 Recommended Usage Areas

The VOGOE HR110 epilator is suitable for use on various body parts, including:

- Arms
- Legs
- Armpits
- Bikini Area



Image: Visual guide showing the epilator being used on different body areas like face, arm, armpit, bikini area, and leg.

4.5 Post-Epilation Care

After epilation, apply a soothing lotion or moisturizer to help calm the skin.



Image: A four-step guide showing preparation (soften hairs), speed selection, epilation technique (90-degree angle), and post-epilation skin relaxation.

Your browser does not support the video tag.

Video: Official product introduction video for the VOGOE Electric Epilator HR110, demonstrating its features and usage.

5. Maintenance

5.1 Cleaning the Epilator Head

Regularly clean the epilator head after each use to maintain hygiene and performance. Detach the epilator head from the device body. Use the provided cleansing brush to remove any trapped hairs by rotating it clockwise. The epilator head can be rinsed under running water. Ensure the head is completely dry before reattaching it to the device body.
Important: The main body of the epilator cannot be immersed in water. Do not use the device while it is charging.



Image: Visual guide demonstrating how to clean the epilator head with a brush and rinse it, along with warnings not to immerse the main body or use while charging.

5.2 Storage

Store the epilator in a cool, dry place, away from direct sunlight and out of reach of children.

6. Troubleshooting

If you encounter issues with your VOGOE Epilator HR110, refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Poor hair removal performance:**
  - Check if the epilator head is clean and free of hair.
  - Ensure you are holding the device at a 90-degree angle to the skin and moving it against hair growth.
  - Verify that the hair length is suitable (0.5mm to 3mm).
  - Try using Speed 2 for thicker hair.
- **Discomfort or skin irritation:**
  - Ensure your skin is clean and dry.
  - Apply light pressure only.
  - Use Speed 1 for more sensitive areas.
  - Apply a soothing lotion after epilation.

7. Specifications

Model Number	HR110
Power Source	Battery Powered (700mAh Lithium-ion)
Voltage	3.7 Volts
Charging Time	2.5 Hours
Usage Time	Up to 4 Hours (cordless)
Number of Tweezers	21

Dimensions	5.4 x 1.7 x 0.04 inches
Item Weight	0.21 Kilograms (7.41 ounces)
Included Components	Device body, Epilator head, USB charging cable, Cleansing brush, User manual

8. Warranty and Support

8.1 Warranty Information

Specific warranty details for the VOGOE Epilator HR110 are not provided in this manual. Please refer to the product packaging or contact VOGOE customer support for warranty information.

8.2 Customer Support

For further assistance, product inquiries, or technical support, please contact VOGOE customer service. Contact information can typically be found on the product packaging or the official VOGOE website.

© 2026 VOGOE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DKSVDYC6

More documents and user manuals: **https://manuals.plus/**