Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl 1

Onerbl AC-DC Adapter User Manual

FOR TEKTRONIX 222, 222PS, 222-PS HANDHELD DIGITAL STORAGE OSCILLOSCOPES

Introduction

This manual provides essential information for the safe and effective use of your Onerbl AC-DC adapter. This power supply is designed to convert AC power from electrical outlets into the DC power required by compatible devices, specifically the Tektronix 222, 222PS, and 222-PS handheld digital storage oscilloscopes. Please read these instructions thoroughly before use.

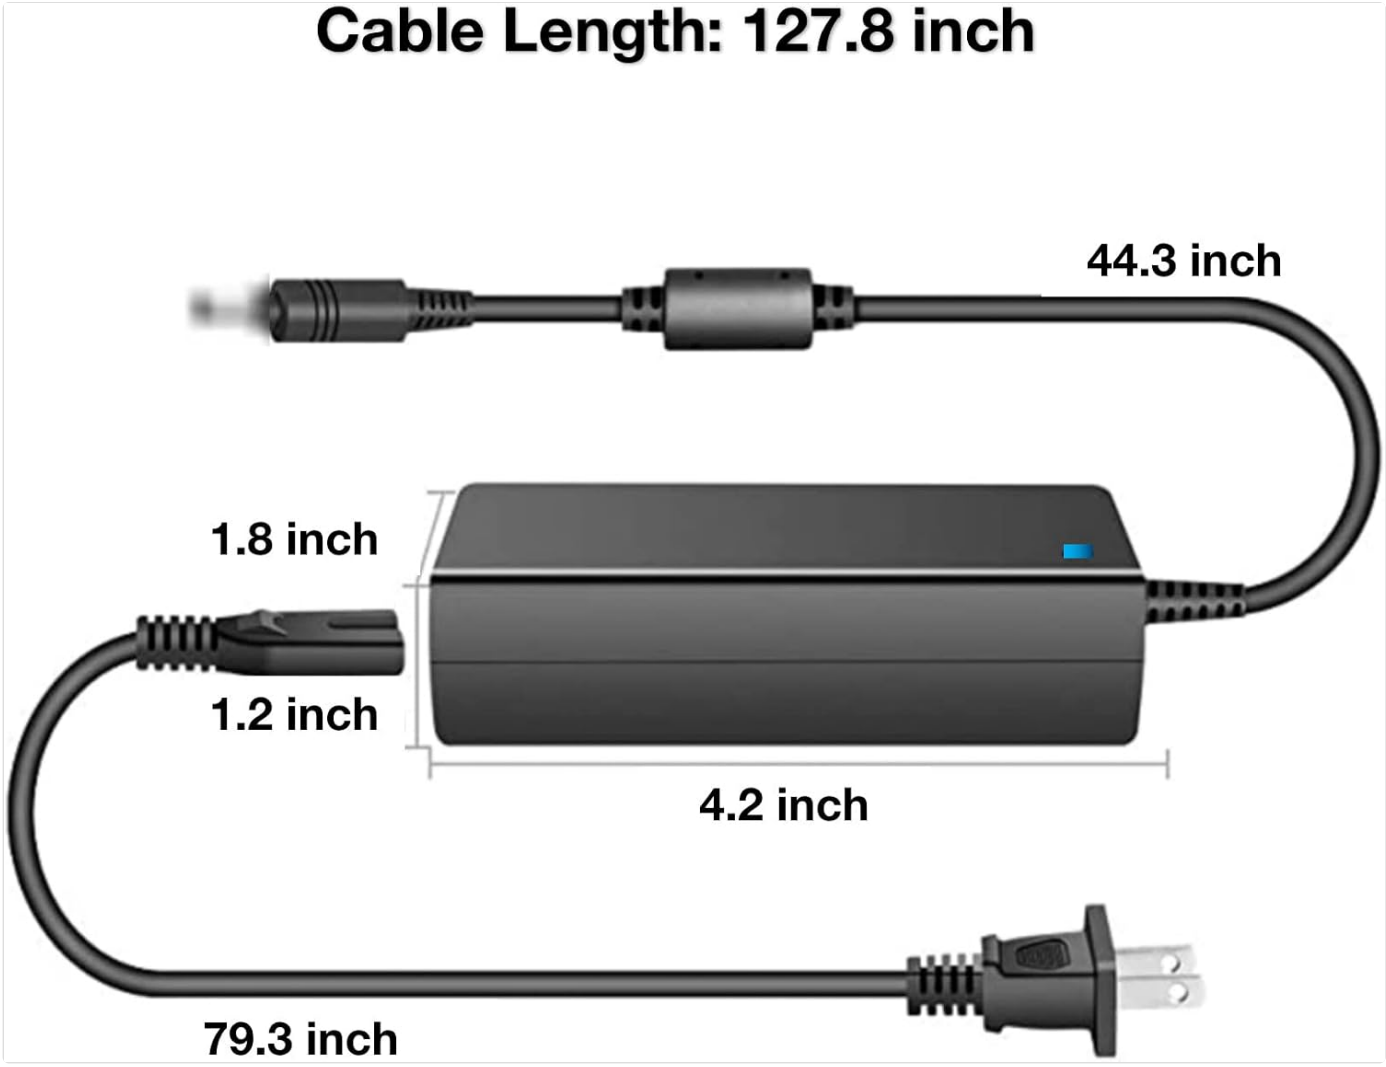


Image: The Onerbl AC-DC adapter, showing the main power brick and connected cables.

Safety Information

- Ensure the adapter's input voltage (AC 100-240V) matches your local power supply.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open or modify the adapter. Refer servicing to qualified personnel.
- Disconnect the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

Package Contents

Verify that all items are present in the package:

- 1 x Onerbl AC-DC Adapter



Image: A separate power cord, typically included with the adapter, featuring a two-prong plug on one end and a C7 connector on the other.

Setup

1. Connect the AC power cord to the adapter's input port.
2. Plug the AC power cord into a standard electrical wall outlet (AC 100-240V, 50/60Hz).
3. Connect the DC output connector of the adapter to the power input port of your Tektronix 222, 222PS, or 222-PS oscilloscope.
4. Ensure all connections are secure before powering on your device.

Operating Instructions

Once properly connected, the Onerbl AC-DC adapter will supply power to your compatible device. It is designed to operate your device or charge its battery from an electrical power outlet. The adapter features built-in over-voltage and over-heat protection to ensure safe operation.

- The adapter automatically adjusts to input voltages between 100V and 240V.
- A small indicator light on the adapter may illuminate when connected to power, indicating it is active.



Image: The AC-DC adapter in an operational setting, plugged into a wall outlet and connected to a device on a desk.

Maintenance

- Keep the adapter clean by wiping it with a dry, soft cloth. Do not use liquid cleaners.
- Store the adapter in a cool, dry place when not in use.
- Avoid wrapping the cables too tightly around the adapter to prevent damage to the wiring.

Troubleshooting

- **Device not powering on:** Ensure all cables are securely connected. Verify the wall outlet is functional by testing with another device.
- **Adapter feels hot:** It is normal for the adapter to become warm during operation. If it becomes excessively hot, disconnect it immediately and contact support. Ensure adequate ventilation around the adapter.
- **Indicator light not on:** Check the power connections from the wall outlet to the adapter.

Specifications

Feature	Detail
Brand	Onerbl
Model Number	1
Input Voltage	AC 100-240V, 50/60Hz (Worldwide Input)
Compatible Devices	Tektronix 222, 222PS, 222-PS Oscilloscopes
Connector Type	AC Power Plug (Input), DC Barrel (Output)
Protection Features	Over Voltage Protection, Over Heat Protection
Included Components	1 Adapter



Image: A technical diagram illustrating the dimensions of the AC-DC adapter unit and its connected cables, including lengths and widths in

inches.

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

© 2023 Onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DKT3Z965

More documents and user manuals: **https://manuals.plus/**