onerbl JF028WR-1400200UV, PG140W2000U

Onerbl 14V 2A AC-DC Power Adapter User Manual for TCL Alto S21BW Soundbar

Model: JF028WR-1400200UV, PG140W2000U

Introduction

This manual provides essential instructions for the safe and effective use of your Onerbl 14V 2A AC-DC Power Adapter. This adapter is designed to provide stable power to compatible devices, including the TCL Alto S21BW, S21BW-SW, and S21BWSW 2.1CH Soundbars, as well as devices requiring JFEC AC Adapter Model JF028WR-1400200UV or PG140W2000U.

Setup

Follow these steps to correctly set up your power adapter:

1. **Unpack the Adapter:** Carefully remove the AC-DC power adapter and its associated cables from the packaging.
2. **Connect the AC Power Cord:** Insert the two-prong end of the AC power cord into the corresponding receptacle on the power adapter unit. Ensure it is firmly seated.
3. **Connect to Device:** Plug the DC output connector (the smaller, round connector) from the adapter into the power input port of your compatible device (e.g., TCL Alto S21BW Soundbar).
4. **Connect to Power Outlet:** Insert the AC plug of the power cord into a standard electrical wall outlet.

The device should now receive power. If your device has an indicator light, confirm it illuminates.



Image: The Onerbl 14V 2A AC-DC Power Adapter, showing its main unit and connected cables.



Image: The power adapter in use, connected to a power strip and a device, demonstrating a typical setup.

Operating Instructions

The Onerbl 14V 2A AC-DC Power Adapter is designed for continuous operation with compatible devices. It converts standard alternating current (AC) from your wall outlet into direct current (DC) suitable for your electronic equipment.

- Ensure the adapter is used in a well-ventilated area to prevent overheating.
- Only use the adapter with devices that match its voltage (14V) and amperage (2A) requirements to avoid damage.
- Disconnect the adapter from the power outlet when not in use for extended periods.

Maintenance

Proper care will extend the life of your power adapter:

- **Keep Dry:** This adapter is intended for indoor use only. Avoid exposure to moisture or liquids.
- **Handle with Care:** Do not crush, bend excessively, or drop the adapter or its cables.

- **Avoid Heat:** Keep the adapter away from direct sunlight, heaters, and other heat sources.
- **Cleaning:** Disconnect the adapter from power before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.

Troubleshooting

If you encounter issues with your power adapter, try the following steps:

- **No Power to Device:**
  - Verify that the AC power cord is securely plugged into both the adapter and the wall outlet.
  - Ensure the DC output connector is fully inserted into your device's power input.
  - Test the wall outlet with another known working appliance to confirm it has power.
  - Check for any visible damage to the adapter or cables. If damage is present, discontinue use immediately and replace the adapter.
- **Adapter is Hot:** It is normal for the adapter to feel warm during operation. If it becomes excessively hot to the touch, disconnect it immediately and allow it to cool. Ensure it is in a well-ventilated area and not covered.

Specifications

Feature	Specification
Brand	onerbl
Model Numbers	JF028WR-1400200UV, PG140W2000U
Input Voltage	100-240VAC
Input Frequency	50/60Hz
Input Current	1.8A
Output Voltage	14V DC
Output Current	2A (2000mA)
Output Wattage	28W
Compatible Devices	TCL Alto S21BW, S21BW-SW, S21BWSW 2.1CH Sound Bar Soundbar
Connector Type	Proprietary
Cable Length	76 inches
Dimensions (approx.)	2.6" L x 1.6" W x 1.2" H
Manufacturer	Shenzhen Waweis Technology Co., Ltd
ASIN	B0DKT4C2WT



Image: Front and side views of the adapter, highlighting its compact design and regulatory information.

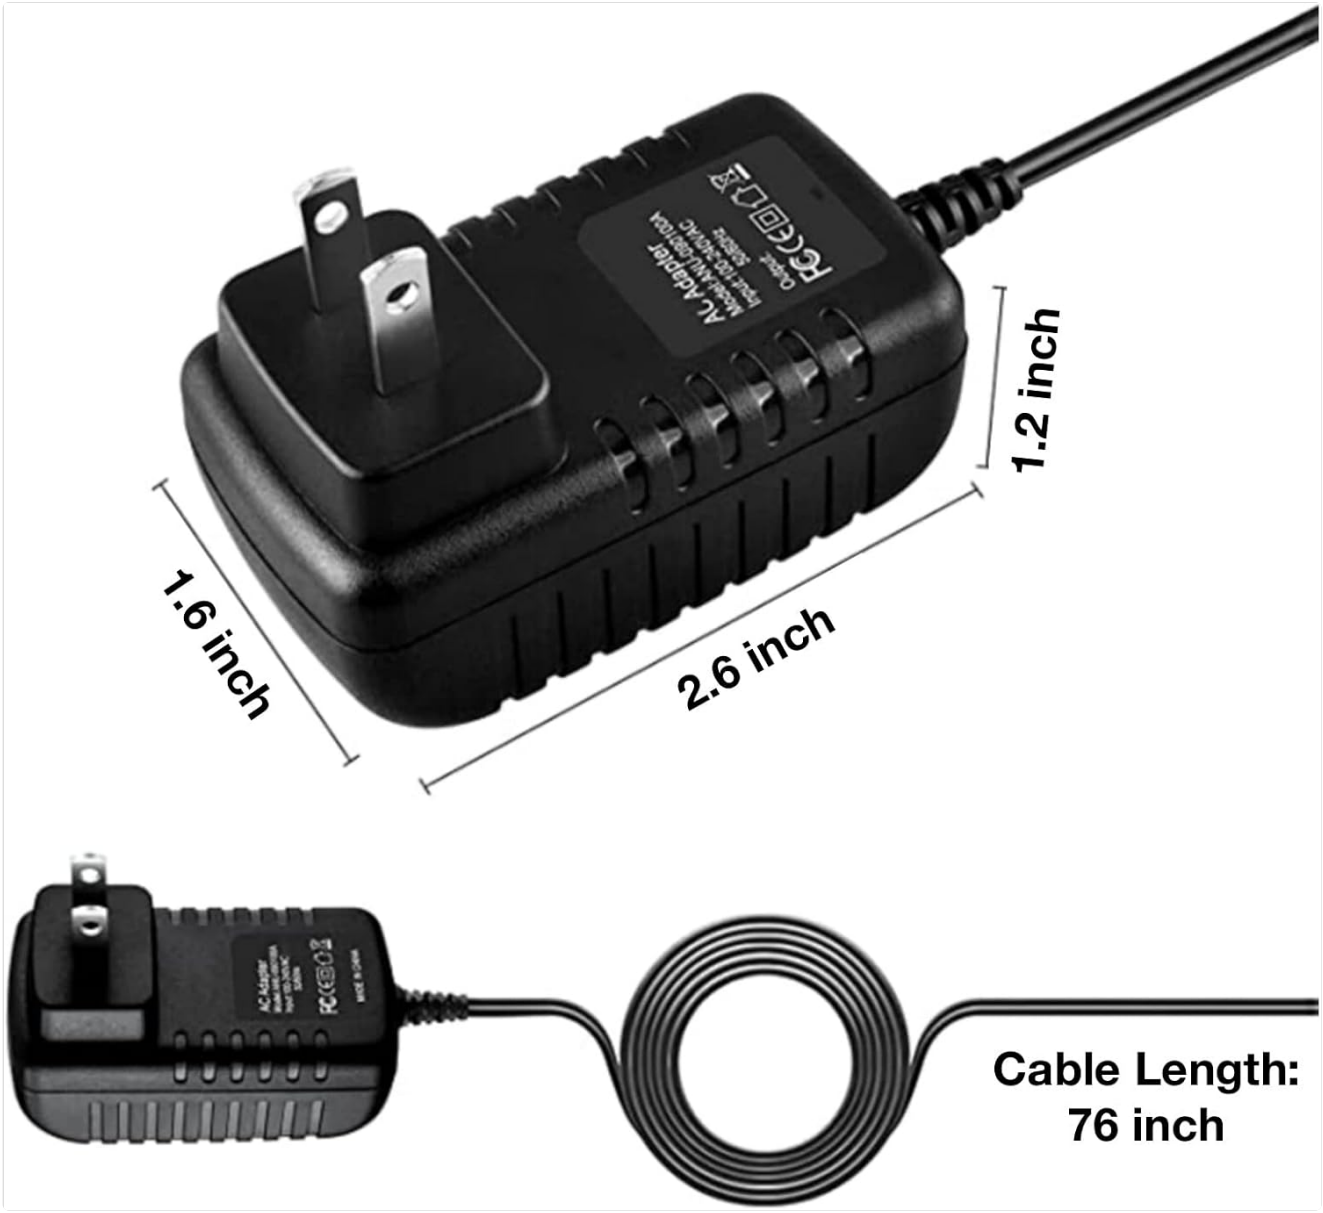


Image: Visual representation of the adapter's dimensions and cable length for reference.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question