Geeni Hawk 3

Geeni Hawk 3 WiFi Outdoor Security Cameras User Manual

Your guide to setting up, operating, and maintaining your Geeni Hawk 3 security cameras.

Introduction

Thank you for choosing the Geeni Hawk 3 WiFi Outdoor Security Cameras. This manual provides essential information to help you install, operate, and maintain your new security system. Please read this manual thoroughly before use and retain it for future reference.

What's in the Box

- Geeni Hawk 3 Outdoor Security Cameras (3-Pack)
- Mounting Hardware (screws, wall anchors)
- Power Adapters
- Quick Start Guide

Product Overview

The Geeni Hawk 3 cameras are designed for outdoor surveillance, offering 1080p HD resolution, night vision, motion detection, and two-way audio. Each camera features a durable, weatherproof design suitable for various outdoor conditions.



Image: Three Geeni Hawk 3 outdoor security cameras, showcasing their compact design and antennas.



Image: A single Geeni Hawk 3 camera highlighting its key features: HD Live Video, Night Vision, Motion Sensor, App Control, Weatherproof design, Micro SD Slot for local storage, 2-Way Audio, and Share Access capabilities.

Setup

1. Prepare for Installation

- Choose a suitable outdoor location with a clear view and access to a power outlet.
- Ensure strong Wi-Fi signal at the installation point.

2. Download the Geeni App

- Search for "Geeni" in your smartphone's app store (iOS or Android).
- Download and install the app.
- Register a new account or log in if you already have one.



Image: An aerial view of a house with multiple Geeni cameras strategically placed, illustrating how all cameras can be managed and controlled from a single Geeni mobile application.

3. Power On and Connect

- Plug in the camera using the provided power adapter.
- Follow the in-app instructions to add your camera. This typically involves scanning a QR code on the camera or entering a device ID.
- Ensure the camera is connected to your 2.4GHz Wi-Fi network.

4. Mount the Camera

- Once connected, use the included mounting hardware to securely attach the camera to your desired outdoor surface.
- Adjust the camera angle for optimal viewing coverage.

Operating

Live View and Recording

- Open the Geeni app to view live 1080p HD video from your cameras.
- Record video manually or set up continuous recording (requires microSD card or cloud subscription).

Motion Detection and Alerts

The camera features advanced motion detection. When motion is detected, you will receive instant notifications on your smartphone.

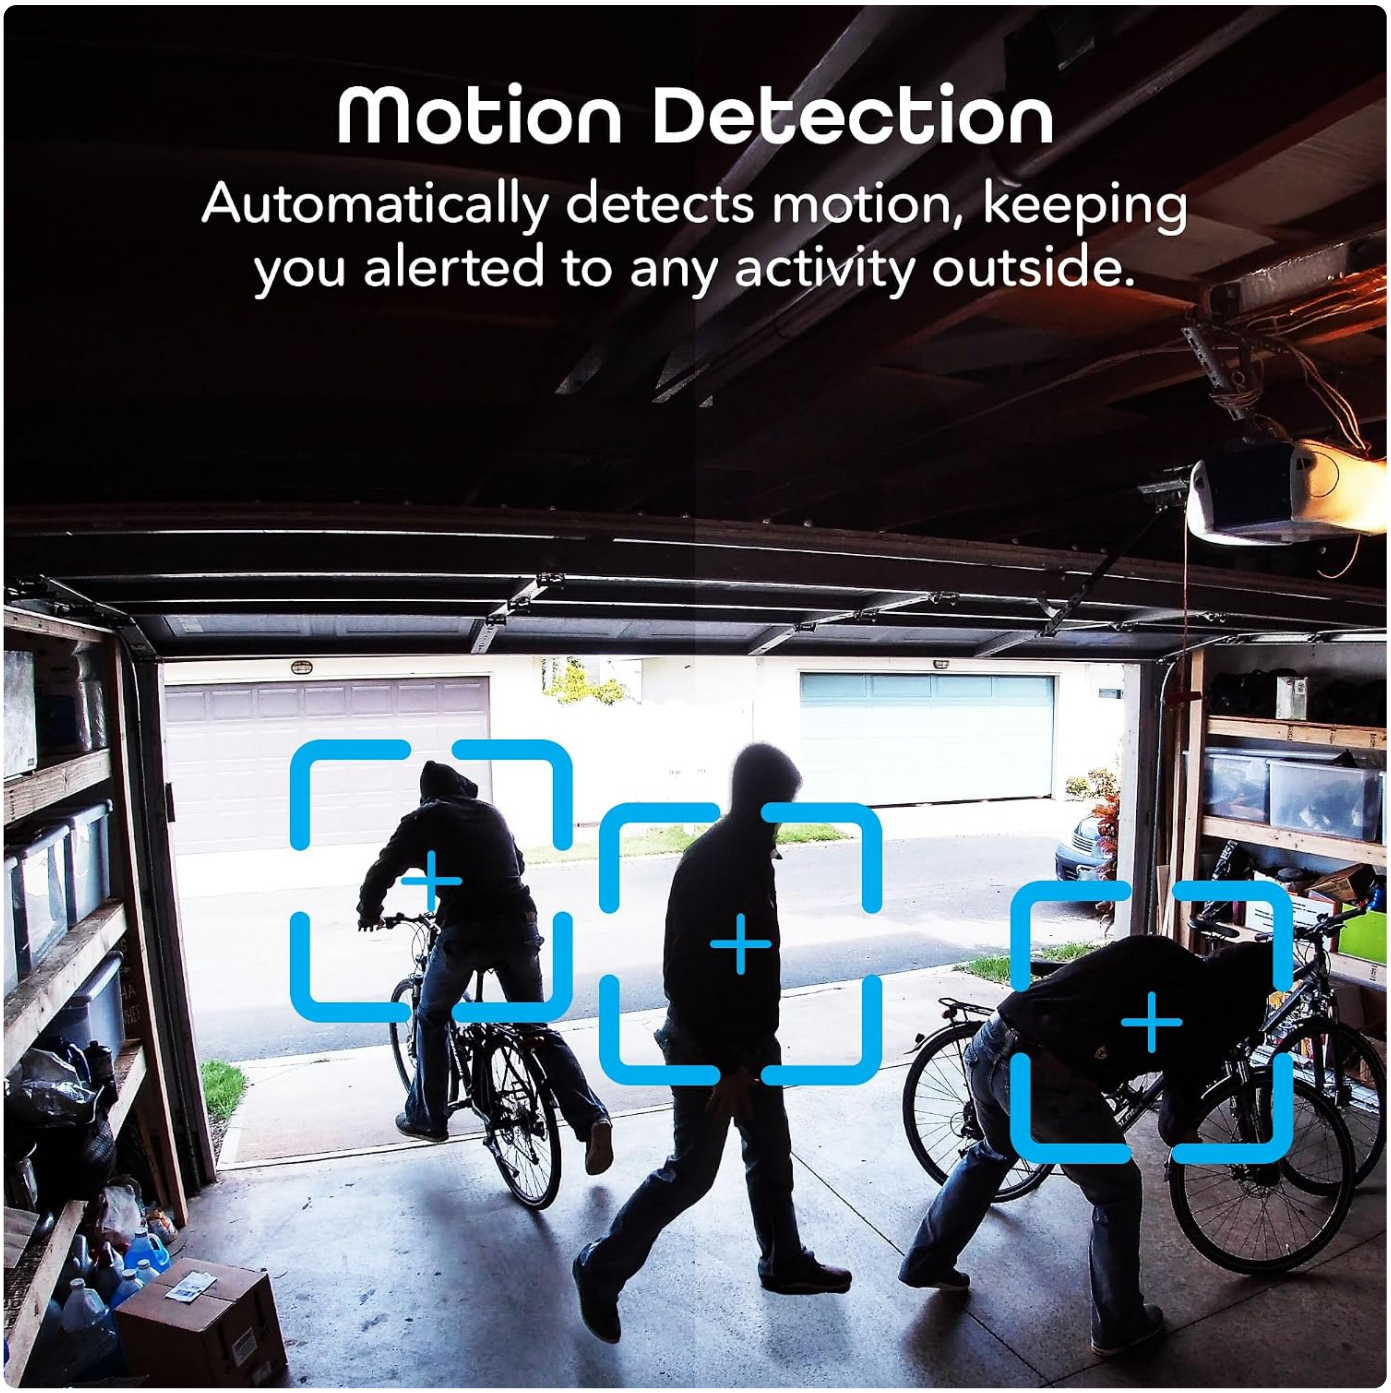


Image: A scene inside a garage showing three people, with blue overlay boxes indicating that the camera's motion detection system has identified and is tracking their movement.



Image: A user viewing a real-time notification on their smartphone, indicating that the Geeni HAWK3 1080P Camera has detected movement, demonstrating the instant alert feature.

- Customize motion detection sensitivity and activity zones within the Geeni app to reduce false alarms.

Two-Way Audio

Communicate directly through the camera using the built-in microphone and speaker.



Image: A woman using the two-way audio feature of the Geeni camera via her smartphone to communicate with a delivery person visible on the live feed, instructing them to leave a package by the door.

- Tap the microphone icon in the app to speak, and release to listen.

Night Vision

The Geeni Hawk 3 offers both full-color night vision and infrared mode for clear visibility up to 30 feet in low-light conditions.



Image: A diagram illustrating the camera's powerful security specifications, including Night Vision for clear vision in darkness, a Wide Angle lens capturing a 130-degree view, and Micro SD Storage supporting up to 256GB.

Voice Control Integration

Control your Geeni Hawk 3 cameras using voice commands with Amazon Alexa or Google Assistant.

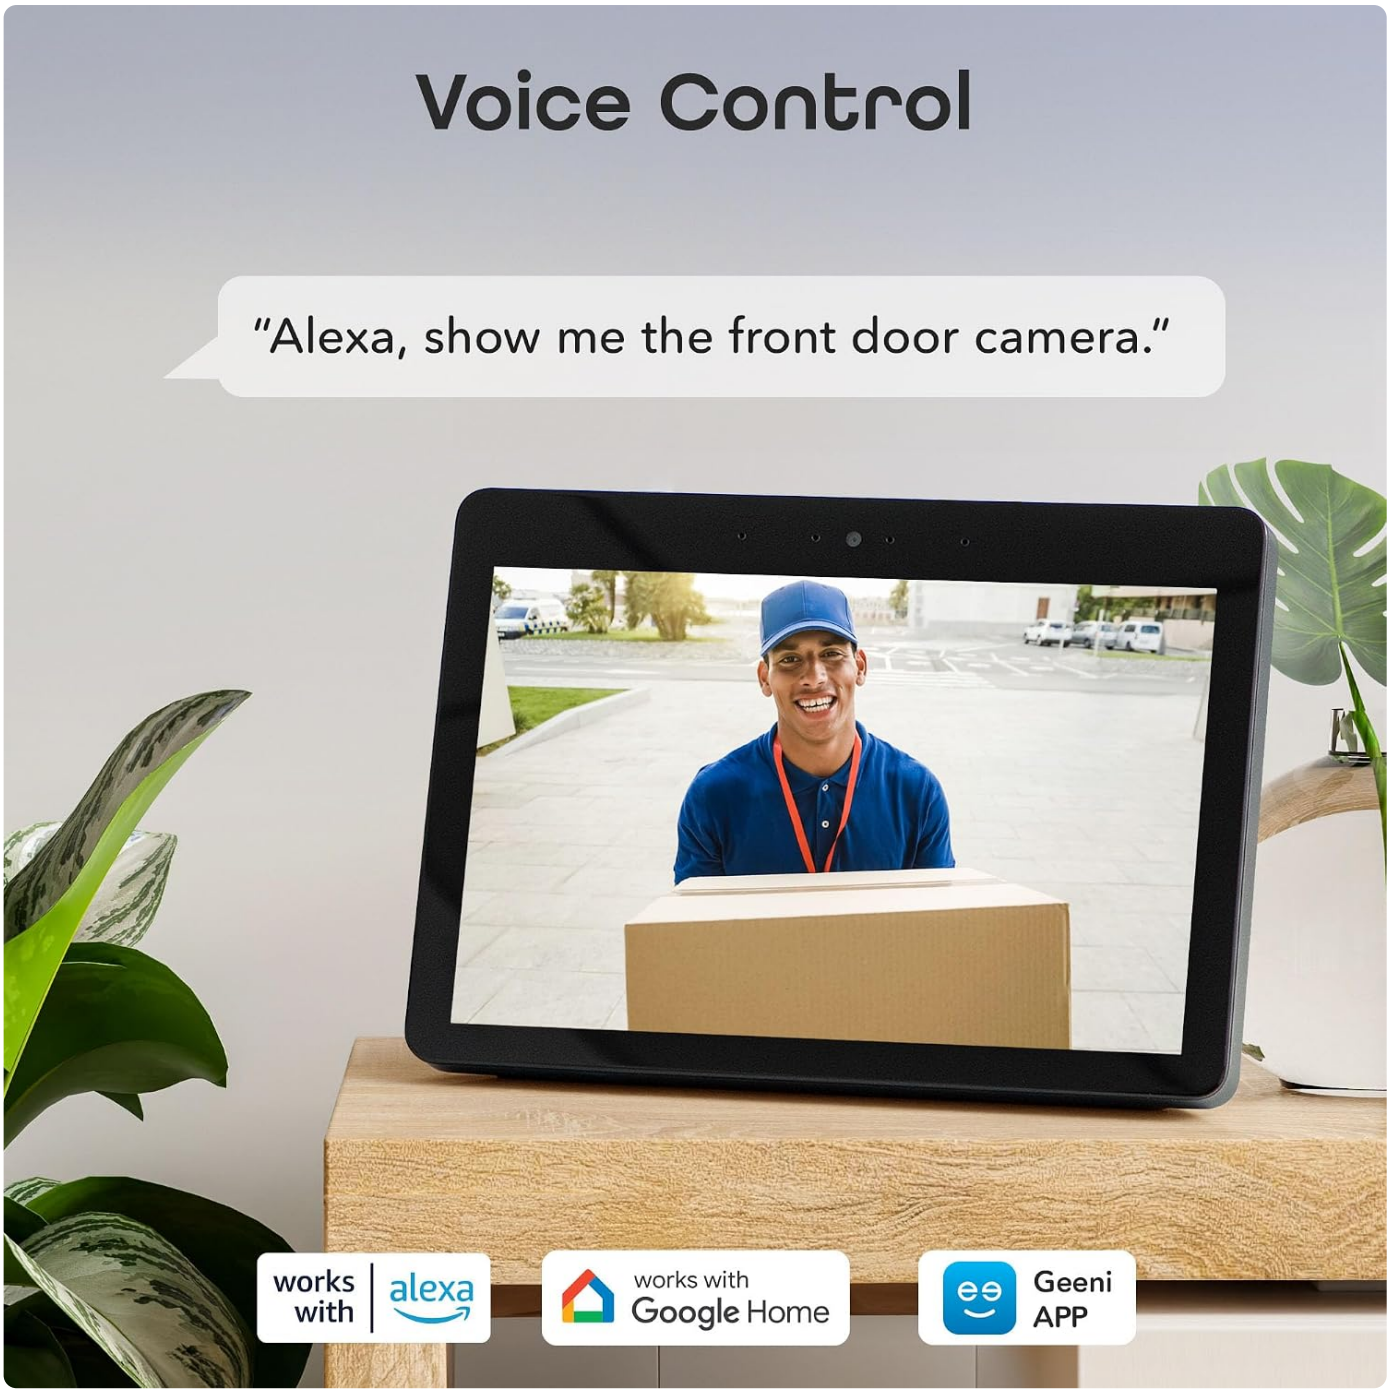


Image: A smart display showing a live video feed from the Geeni camera, demonstrating compatibility with Amazon Alexa and Google Home for voice-controlled access to the camera feed.

- Link your Geeni account to your Alexa or Google Home app.
- Use commands like "Alexa, show me the front door camera."

Maintenance

Cleaning

- Periodically wipe the camera lens and body with a soft, damp cloth to remove dust and debris.
- Do not use harsh chemicals or abrasive cleaners.

Weather Resistance

The Geeni Hawk 3 cameras are IP66 weatherproof rated, designed to withstand rain, snow, and extreme temperatures.



Image: A Geeni camera mounted on an outdoor wall, enduring heavy rain and lightning, demonstrating its robust IP65 weatherproof construction.

- Ensure all cables and connections are properly sealed during installation to maintain weather resistance.

Storage Management

- If using a microSD card, regularly check its capacity and format it as needed through the app.
- Review cloud storage settings and subscriptions if utilizing cloud recording.

Troubleshooting

Problem	Possible Cause	Solution
Camera offline	No power; Wi-Fi disconnected; Router issue	Check power connection; Restart camera; Restart router; Reconnect camera in app

Problem	Possible Cause	Solution
Poor video quality	Weak Wi-Fi signal; Dirty lens	Move camera closer to router or use Wi-Fi extender; Clean lens
No motion alerts	Motion detection off; Sensitivity too low; App notifications disabled	Enable motion detection in app; Increase sensitivity; Check phone notification settings
Two-way audio not working	Microphone/speaker muted in app; Network latency	Check audio settings in app; Ensure stable internet connection

Specifications

Model: Hawk 3

Resolution: 1080p Full HD

Night Vision: Full-color and Infrared (up to 30 feet)

Audio: 2-Way Audio (built-in microphone and speaker)

Connectivity: Wi-Fi (2.4GHz only)

Storage: MicroSD card (up to 128GB, not included) or Cloud Storage (subscription required)

Weather Rating: IP66 Weatherproof

Compatibility: Amazon Alexa, Google Assistant, Geeni App

Power Source: Wired (Power Adapter included)

Warranty and Support

Geeni products come with a limited warranty. For detailed warranty information, product support, or technical assistance, please visit the official Geeni website or contact their customer service. Keep your purchase receipt as proof of purchase.
Online Support: www.geeni.com/support (Example link, please refer to actual Geeni support page)

© 2025 Geeni. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question