Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TwoOases TC-SC-003

TwoOases 2500W Steam Cleaner User Manual

Model: TC-SC-003



Image: The TwoOases 2500W Steam Cleaner unit, featuring its red and black design, with various cleaning attachments, gloves, and the user manual spread around it.

Introduction

Thank you for choosing the TwoOases 2500W Steam Cleaner. This powerful and versatile steam cleaner is designed to tackle stubborn grease, dirt, and stains across various surfaces in your home, car, and more. With its high temperature and pressure steam, it offers an efficient and chemical-free cleaning solution. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new steam cleaner.



Image: The steam cleaner unit with an illustration of heat rising, indicating 15s fast heating, 3 Bar high pressure, and 221°F/105°C high temperature steam.

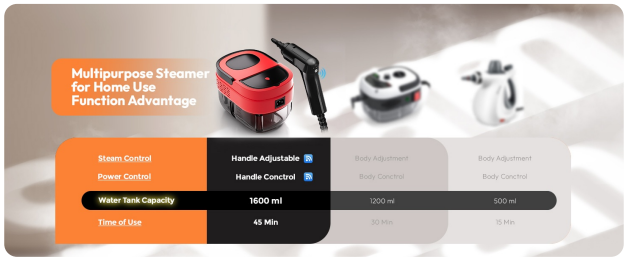


Image: A comparison chart highlighting the TwoOases steam cleaner's advantages, including handle-adjustable steam control, 1600ml water tank capacity, and 45 minutes of use time, compared to other models.

Safety Information

Please read all safety warnings and instructions carefully before using this appliance to avoid electric shock, fire, and/or serious injury.

- **High Temperature Steam:** The steam cleaner produces steam at 221°F (105°C). Always direct steam away from yourself, other people, pets, and heat-sensitive materials.
- **Electrical Safety:** Ensure the power cord is fully inserted into a grounded outlet. Do not operate with a damaged cord or plug. Keep the power cord away from heated surfaces.

- **Water Tank:** Only fill the water tank with clean tap water. Do not add any cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the unit and void the warranty.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not leave the steam cleaner unattended during operation.
- **Surface Compatibility:** Test the steam on an inconspicuous area of the surface to be cleaned before full application, especially on delicate materials.
- **Cool Down:** Allow the unit to cool completely and depressurize before opening the water tank cap or changing accessories.

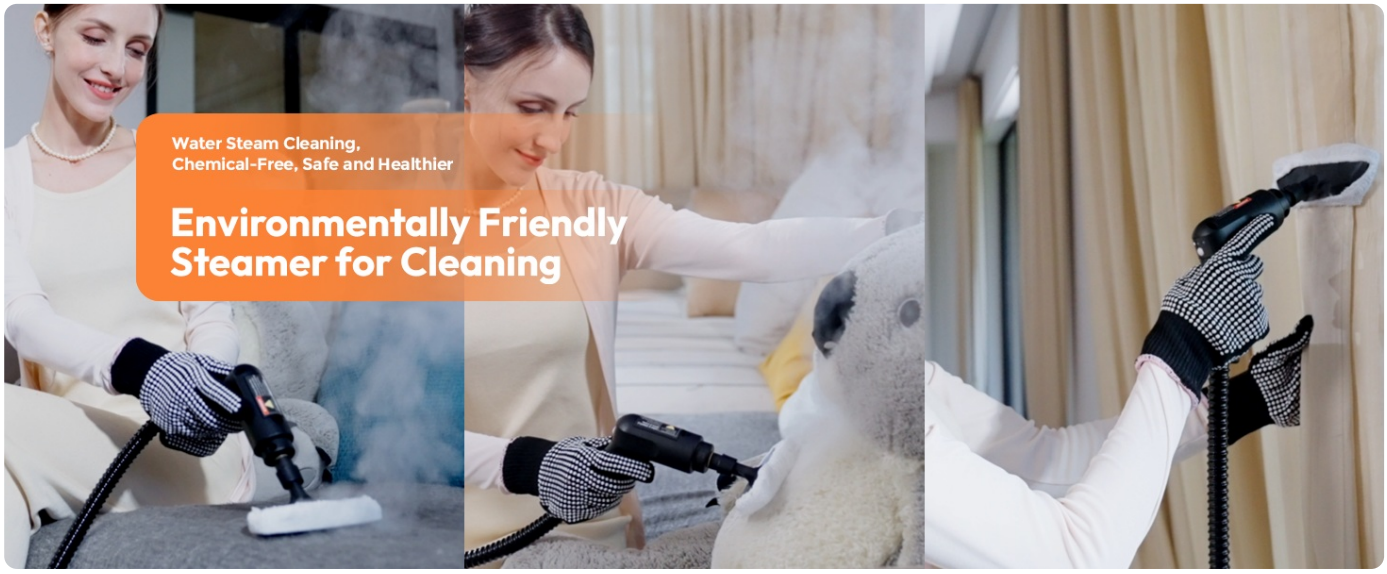


Image: A visual representation emphasizing the chemical-free and environmentally friendly nature of steam cleaning, showing the steam cleaner being used on various surfaces like upholstery and walls.

Package Contents

Carefully unpack your TwoOases Steam Cleaner and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x Steam Cleaner Machine
- 1 x 1.5m Power Cord
- 1 x Extension Tube
- 2 x Steel Brush
- 2 x Plastic Brush
- 1 x Round Plastic Brush
- 1 x Bent Nozzle
- 1 x Window Squeegee
- 1 x Ironing Brush
- 3 x Ironing Brush Cloth
- 2 x Small Shovel
- 2 x Sealing Ring
- 1 x Glove

- 1 x User Manual



Image: The steam cleaner unit with its 1600ml water tank clearly visible, surrounded by various brush heads and cleaning attachments, highlighting its large capacity and abundant accessories.

Setup

Follow these steps for initial setup before first use:

1. **Install AAA Battery:** The handle requires AAA/Triple-A batteries for wireless control (not included). Open the battery compartment on the handle and insert the batteries, ensuring correct polarity.
2. **Fill Water Tank:** Open the top cover of the main unit and carefully fill the 1600ml water tank with clean tap water. Do not overfill.
3. **Connect Power:** Plug the power cord into a standard electrical outlet.

4. **Attach Brush Head:** Select the appropriate brush head for your cleaning task and securely attach it to the nozzle of the handle.



Image: A step-by-step visual guide showing how to insert AAA batteries into the handle, fill the water tank, connect the power, and install a brush head.

Operating Instructions

Your TwoOases Steam Cleaner is designed for ease of use with its innovative 2-in-1 handle control.

1. **Power On/Off:** Long press the button on the handle for 3 seconds to turn the steamer on or off. The unit will begin heating up.
2. **Preheating:** The steamer heats up rapidly, typically within 15 seconds. Once heated, it is ready for use.
3. **Adjust Steam Output:** Short press the button on the handle to cycle through the 3 adjustable steam output levels. This allows you to control the steam content based on your cleaning needs.
4. **Begin Cleaning:** Direct the steam nozzle towards the surface you wish to clean. Move the nozzle slowly to allow the steam to penetrate and loosen dirt and grime.
5. **Continuous Operation:** The 1600ml water tank allows for continuous operation for 35-45 minutes on a single fill, reducing the need for frequent refills.
6. **Changing Attachments:** Ensure the unit is off and has cooled down before changing brush heads or accessories.



Image: A close-up of the steam cleaner's handle, illustrating the power on/off and 3-grade adjustable steam buttons, along with an indicator for real-time steam grade.



Image: A collage demonstrating the steam cleaner's powerful deep cleaning capabilities on different surfaces, including stove grates, metal racks, and sink drains, showing before and after results.



Image: A series of images showcasing the steam cleaner being used in various scenarios, such as cleaning car interiors, sofas, windows, toilets, and floor drains, highlighting its versatility.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Empty Water Tank:** After each use, ensure the unit is cool and unplugged. Remove the stopper under the tank to completely empty any remaining water.
- **Clean Accessories:** Wash brush heads and other accessories with warm, soapy water. Rinse thoroughly and allow them to air dry before storing.
- **Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not immerse the main unit in water.
- **Descaling:** Over time, mineral deposits from water can build up. If you notice reduced steam output or unusual noises, descaling may be necessary. Consult a professional or use a steam cleaner-safe descaling solution according

to its instructions.

- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Unit not heated; Nozzle clogged; Mineral buildup.	Refill water tank; Allow 15 seconds for heating; Clean nozzle; Descale unit.
Unit not turning on	Not plugged in; Power outlet issue; Handle battery low/dead.	Check power connection; Test outlet; Replace AAA batteries in handle.
Water leaking from nozzle/attachments	Attachment not securely fastened; Sealing ring damaged/missing; Unit not fully heated.	Ensure attachment is tight; Check/replace sealing rings; Allow unit to fully heat before use.
Steam is not hot enough	Unit not fully heated; Steam level set too low.	Allow more time for preheating; Increase steam output level via handle button.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Key technical specifications for your TwoOases Steam Cleaner:

Feature	Detail
Brand	TwoOases
Model Name	Steam Cleaner (TC-SC-003)
Wattage	2500 watts
Heat Time	15 seconds
Tank Volume	1.6L (1600 Milliliters / 1.69 Quarts)
Item Weight	3.9 Pounds (3.86 pounds)
Product Dimensions	5.8"D x 8.3"W x 5.6"H
Power Source	AC

Feature	Detail
Voltage	110 Volts (AC)
Special Features	3 Level Steam Output Handle Adjustable, High Pressure & High Temperature, Manual & Portable, Fast Heating, Multi Brushes, Removable Brush, 2-in-1 Steam Control & Power Button
Surface Recommendation	Window, Upholstery, Tile, Grout, Carpet, Stove, Toaster Oven



Image: The steam cleaner unit with its 1600ml water tank, showing its compact dimensions of 8.3 inches width and 5.7 inches height.

Warranty and Support

Your TwoOases Steam Cleaner comes with a**One-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact TwoOases customer service. Please have your purchase receipt and model number (TC-SC-003) ready when contacting support.

Contact information for TwoOases customer support can typically be found on the product packaging, the official TwoOases website, or through your retailer's customer service portal.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can the TwoOases TC-SC-003 2500W Steam Cleaner be used without being plugged into a power outlet?

No, the TwoOases TC-SC-003 Steam Cleaner cannot be used without being plugged into a power outlet. It is a corded appliance that requires a constant AC power source to operate its 2500W heating element....

Read full answer

Open the live page

https://manuals.plus/asin/B0DKXLD1JM

More documents and user manuals: **https://manuals.plus/**